 


Bluetooth remote control

Instruction manual

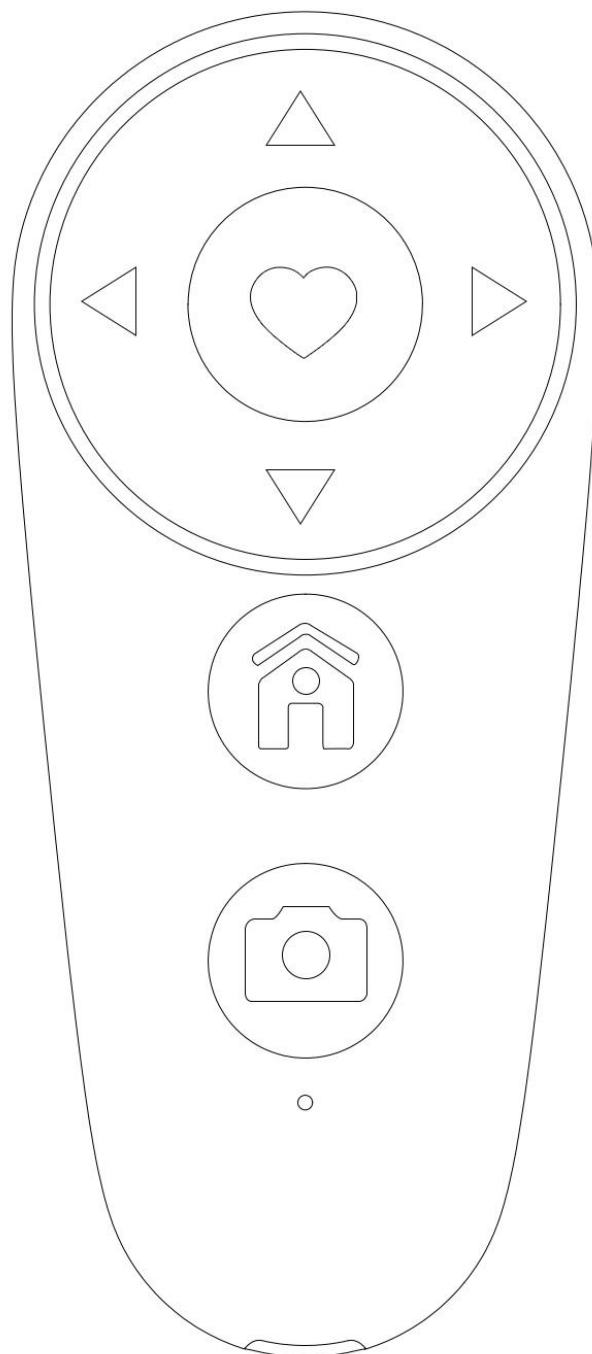

 
Model:TIK006

PRODUCT DESCRIPTION:

Thank you for purchasing this Bluetooth remote control. Our main purpose of developing this Bluetooth remote control is to make it easier for you to use " TikTok APP " .

Only support " TikTok APP ", do not support the use of other apps.

NOT for kindle eBook devices.

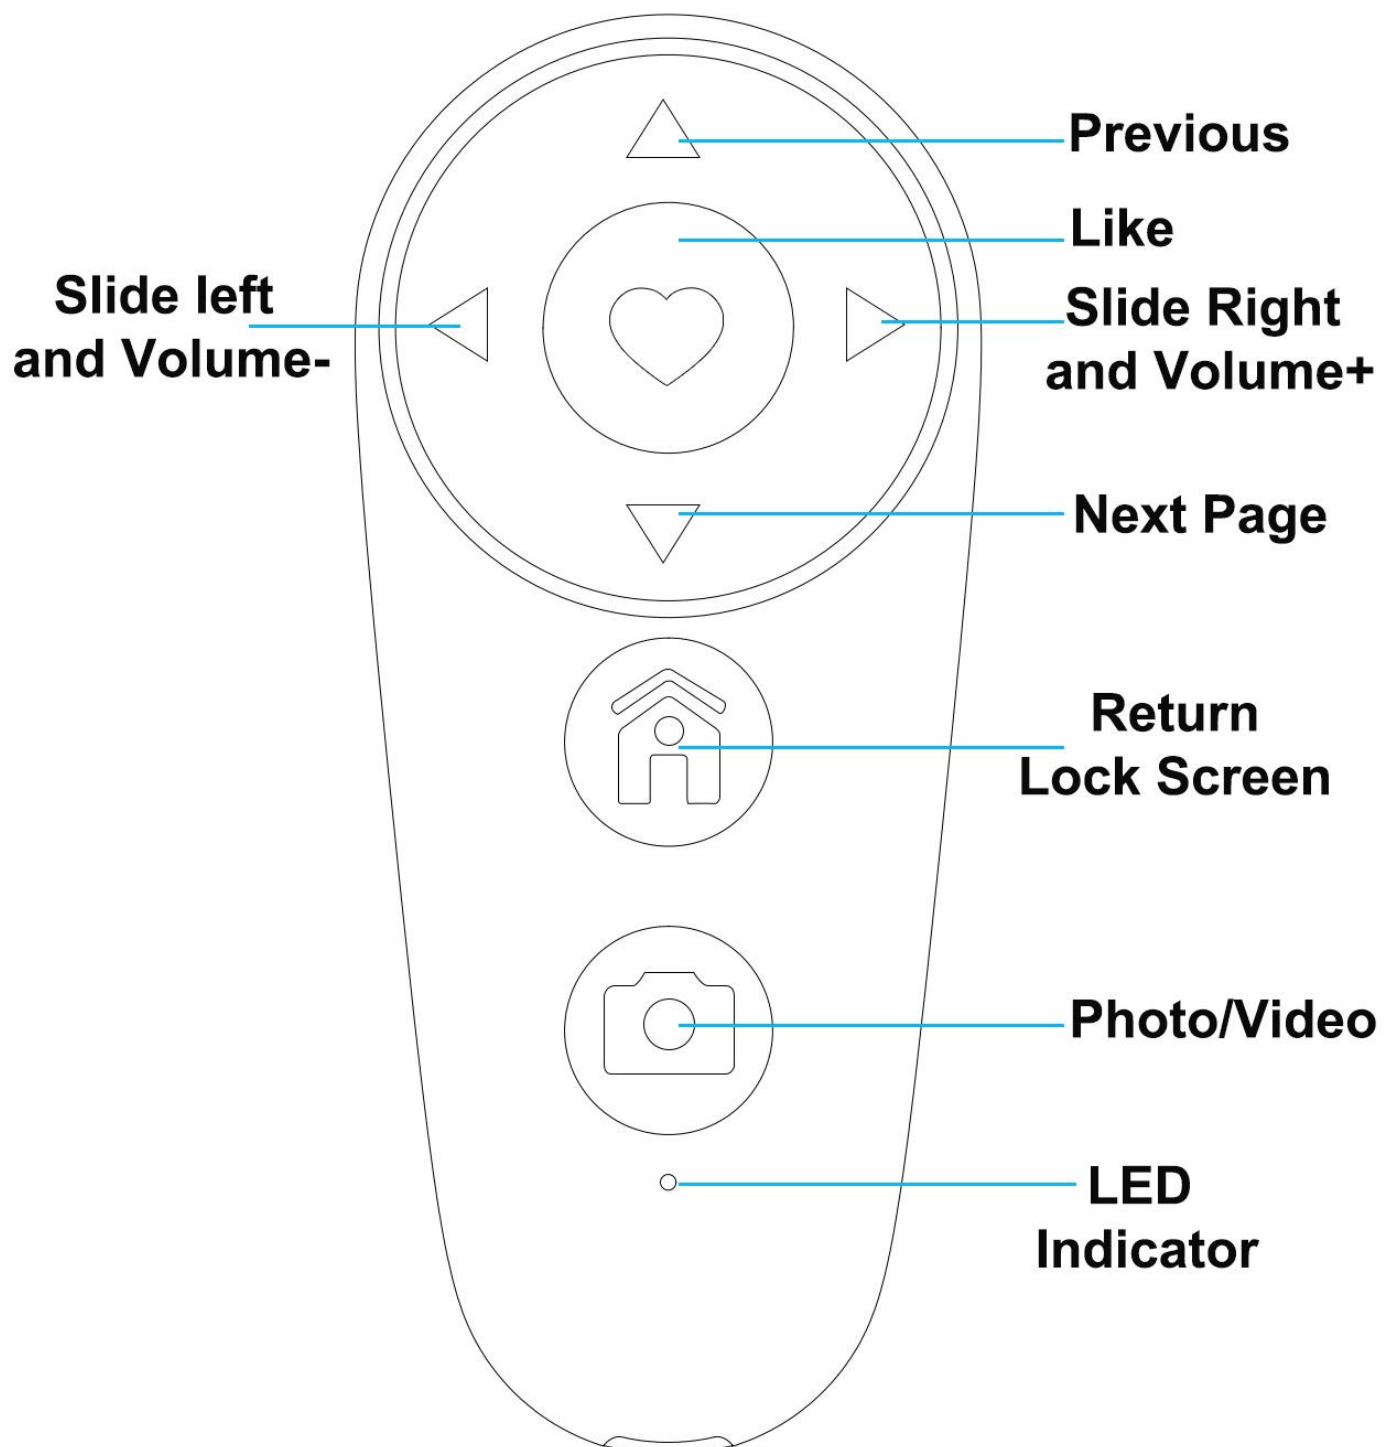

Product Features

Button Function

【Like】 After opening Jitterbug or tiktok, double tap to like or long press to continuously like.

【Photo/Video】 Photo interface, short press to take a picture, long press to take a series of shots, video interface, short press to record video

【Return/Lock Screen】 Short press to return to desktop, long press for 2 seconds to lock screen.

【Previous】 Short press to turn up the page.

【Next Page】 Short press to turn down the page.

【Slide Right and Volume+】 Long press to increase volume, short press to slide right page:

【Slide left and Volume-】 Long press to decrease volume, short press to slide page left.

LED Indicator

Red LED: Charging indicator. Red LED blinking; in charging, red LED is always on; full charge.

Green LED: Pairing and connection success indication. When the mobile phone is successfully connected, the green light blinks for 5 seconds to indicate successful connection.

Blue LED: Pairing or pending connection status blue blinking, successful connection, blue extinguished (green light flashes for 5 seconds);

After connecting the mobile phone, any key transmitting signal blue light flashes once (indicating successful transmission)

If there is no operation after waking up (no pairing connection), the blue light will be extinguished after one minute, and the product will enter into hibernation state;

Hibernation Mode:

The product should enter the hibernation mode after 10 minutes without any operation;

When the product is in hibernation or disconnected state, short press any wake-up button to enter the pending pairing or pending connection state.

TikTok function:

1. When the product is connected to a mobile phone, use it after opening TikTok normally.

Photo/video function;

1. When the product and mobile phone are connected, use it after opening the camera normally.

2. Short press to take a picture, long press to take a series of pictures, and short press to record when the video is turned on.

Charging function:

1.Suitable for Type C 5V and fast charging adapter.

2.Charging current 0.5A, about 3 hours full.

How to connect the remote control Bluetooth?

Press any button on the remote control and the blue light will flash > >

Turn on the Bluetooth of your device (mobile phone, tablet, iPad) > >

Search for Bluetooth device **TIK006** > > Click to connect the device > >

Finish the Bluetooth connection.

The indicator light of the remote control is blinking green, which means the connection is successful.



When. using Android and HarmonyOS phones,it can be used by connecting to Bluetooth.

With Apple (iOS) you need to switch on "AssistiveTouch and ZOOM" in addition to the Bluetooth connection. Please check the following steps for details on how to use it;

1. First make sure that the system software (iOS) of the iPhone or iPad is higher than 14.8;

2. The AssistiveTouch function must be turned on, as shown in the figures on the right:

After AssistiveTouch is turned on, 2 dots will appear, the large one can be dragged, and the small one cannot be dragged. When the video is not swiped,it will disappear after 30 seconds. Android and HarmonyOS phones donot have these two dots.

 
 
 
3. The ZOOM function must be turned on;

Please note that the display ratio of your Zoom phone is enlarged when it is switched on. Tap the screen twice with three fingers to restore the normal screen size.

4. If the previous items 1/2/3 have been completed,but the video stillcannot slide up and down normally or can only be paused by pressing the button, Please turn off iPhone or iPad Bluetooth and then reconnect Bluetooth.

How to turn on “AssistiveTouch” in phone settings

Go to your phone's settings page → open Accessibility → Touch → AssistiveTouch (Please see the chart below)

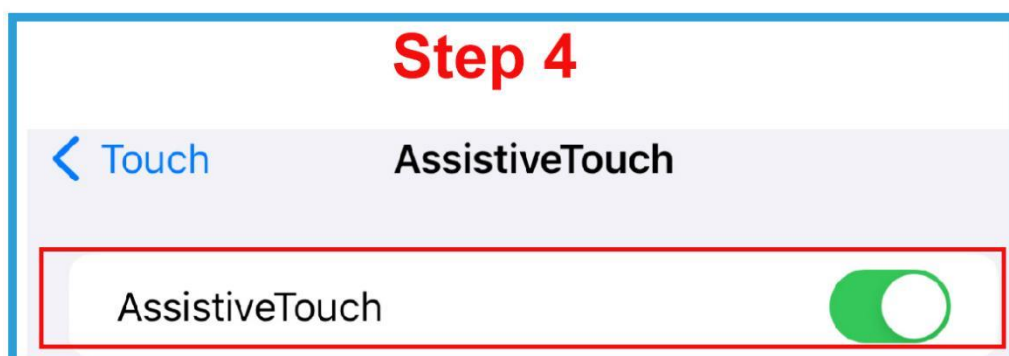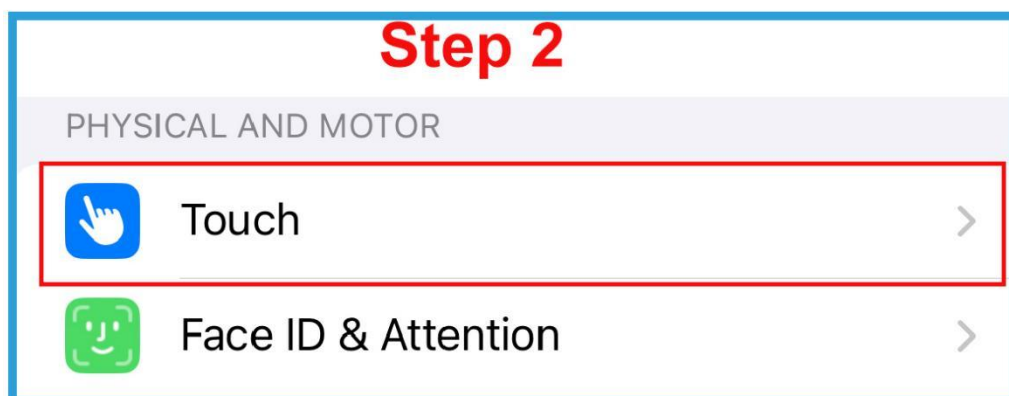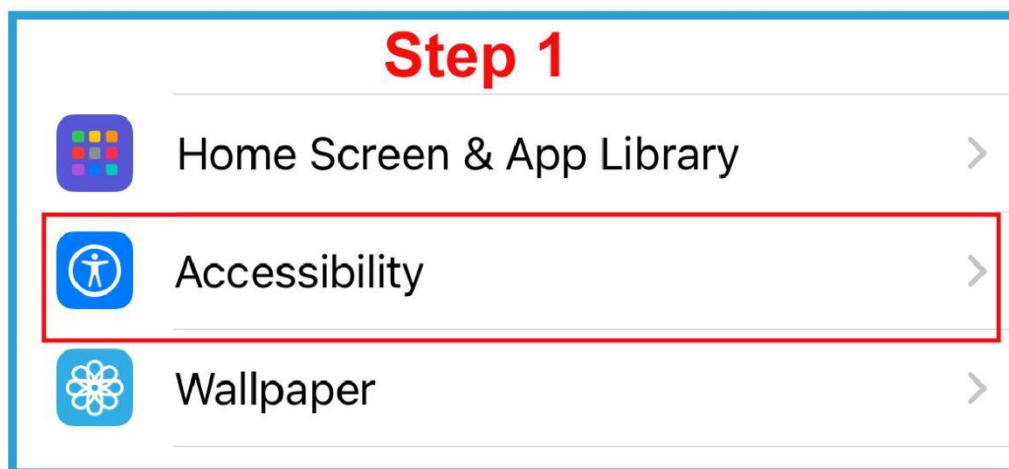

How to turn on “ZOOM” in phone settings

Go to your phone's settings page → open Accessibility → ZOOM
(Please see the chart below)

Please note that the display ratio of your Zoom phone is enlarged when it is switched on. Tap the screen twice with three fingers to restore the normal screen size. **MAXIMUM ZOOM LEVEL Adjusted to 1.2X**

 
Step 1




Step 2



Step 3

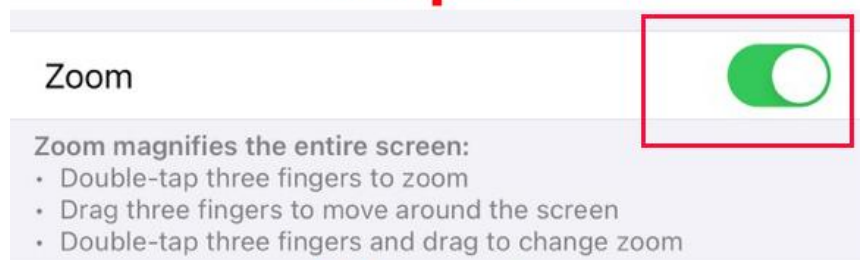

 Step 4

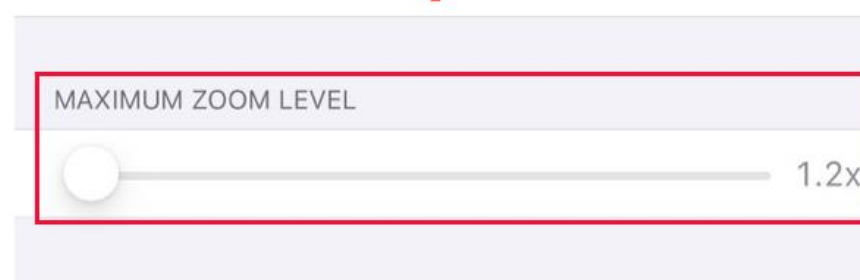

1 YEAR WARRANTY:

We provide you with 1 year warranty and permanent US technical support. This means that if anything goes wrong with the unit (other than accident damage) within the first year of ownership, we will replace the unit for free, 100% at our cost.

Contact us at: [Find your {Order ID}](#) → [Contact Seller](#).

WARNING:

1. After long-term storage, please charge the product before using it.
2. Non-waterproof, please don't use in extremely cold, hot, humid environment.
3. Do not use the clip roughly to avoid breaking them.

Q&A

Q1: Can I take photos and videos on "TikTok APP"?

A: Not supported.

Q2: Can I shoot directly by clicking the remote control shooting button?

A: Not supported

You need to enter the cell phone or tablet shooting page app in advance, and then use the remote control to shoot remotely.

Q3: What should I do if I turn on Touch on my Apple phone or iPad and still can't swipe up and down and "like" the video?

A: Turn off Bluetooth and reconnect

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition, compliance with exposure requirements.