


## Card Printer User Manual (CJ Series)

**Product Overview**

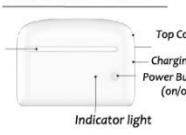

**Brief Instructions:**  
For initial use, it is highly advisable to fully charge the printer before usage to ensure optimal print quality.

**Indicator light status**

- (1) Normal - Steady green light; Out of paper - Green light flashes
- (2) Bluetooth connected - Green light rapidly flashes three times
- (3) Charging - Red light turned on simultaneously; Low battery - Red light flashes; Full battery - Red light turned off

**Power Button:**  
Long press power button to power on/off

### Operation guide

This device requires the following content for operation:

1. **App(cardjoin)** - Available for download on [Google Play](#) or the [Apple App Store](#) or Scan the QR code at the bottom of the machine
2. **CardStock**

Before using, please make sure the followings to successfully connect App to the printer:

1. Is the Location function on your phone enabled?
2. Is Bluetooth on your phone turned on?


### Steps

1. Turn on the printer's power switch;
  2. Click the "Bind" button on the App's homepage, select the printer you want to connect from the printer list, and click "Bind".
  3. After connecting to the printer, you can view the latest connected printer ID under "Settings" on the homepage - "Binded Printer ID".
- Note: If you replace a new printer, you will need to rebind it.

### Inserting Cards

2

**Note:** The printable side should be facing downwards

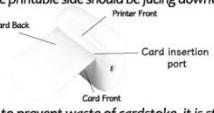

In order to prevent waste of cardstock, it is strongly recommended that you repeatedly use one cardstock for testing, as long as the location and printing quality are satisfied.

Place the paper card firmly against the **left side of the card slot**, quickly slide it along the bottom of the card slot (ensure the paper card is inserted securely in place and **feel the resistance**), wait for about 2 seconds, and the printer will automatically roll in the paper and position the card for printing. Improper card insertion often leads to card slipping during printing or misaligned print results. Please remove the card and reinsert it.

After removing the card, ensure the card is pulled out of the printer's body before reinserting it so that the printer can restart the optocoupler detection.

**Note:** The cardstock must be inserted to the bottom, so that the location can be accurate.

**Bookmark Printing, Special Note**

Bookmarks should be placed firmly against the left side of the card slot, and the right side of the bookmark should be firmly against the middle bookmark-specific slot. Printing position accuracy can be guaranteed only when the bookmark is inserted within this restricted range.



**Printing**

Select the paper card that matches the content to be printed, or preview the print and make your selection.

The printer can only print one paper card at a time. Any content that exceeds the length of the card cannot be printed. Please pay attention to the guide line and consider reducing the font size or shortening the content.

If the printing result appears faint, check if there is enough battery power and insert a USB cable for charging.

### Basic parameters

Product name: mini printer  
Operating Voltage: 3.7V  
Charging method: Type-c  
Charging battery type: Rechargeable polymer lithium battery  
Charging Time: Approximately 90 minutes  
Place of origin: China

4

5

## FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.