



Bluetooth Headset

sanag B60S Pro

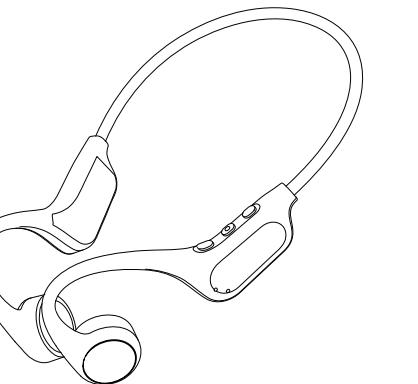

User Guide

Product Overview

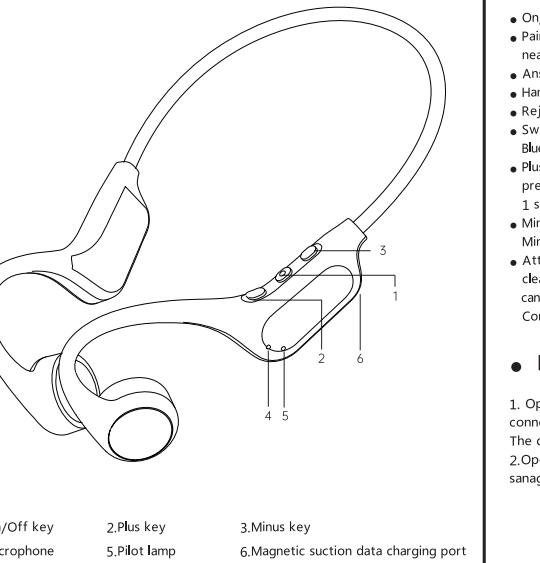


Headphone function operation instructions

- On/Off key: Press and hold the on/off key for 3 seconds to turn on/off.
- Pairing: When turned on, it enters pairing mode. If there is a paired device nearby, it will connect back. If not, it will enter pairing mode.
- Answer the phone: Short press the power button once.
- Hang up the phone: During the call, briefly press the power button once.
- Reject incoming calls: Press and hold the power button for 1 second.
- Switch MP3/Bluetooth mode: Double click on the key to switch to MP3/Bluetooth mode. MP3 mode supports breakpoint memory and volume memory.
- Plus button: Short press the plus button to increase the volume, continuously press the plus button 2 times to next track, and long press the plus button for 1 second to activate smart voice on the phone.
- Minus key: Short press the Minus key to decrease the volume, and press the Minus key 2 consecutive times to go back to the previous track.
- Attention: If sweat adheres to the magnetic thimble during use, please wipe it clean before charging. The charger must use a 5V charger. Charging above 5V can cause the earphone to heat up and may damage the battery and motherboard. Connect the magnetic charging cable to the PC for data transmission.

Bluetooth pairing

- Open the charging bin, and the headset will start automatically. Please connect Bluetooth headset and mobile phone (or other connecting devices). The distance is within the range of 50CM, the closer the better.
- Open the Bluetooth interface of the phone, search for "sanag T41S Pro/sanag T41S Pro Max", click on pairing, and connect the device.

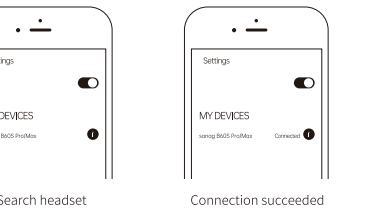

Specifications

- Name: Bluetooth Headset
- Model: sanag B60S Pro
- Bluetooth version: V 5.3
- Connection range: ≥ 10 m
- Input: 5V=100mA
- Earphone battery capacity: 140mAh
- Charging time: approximately 2-3 hours

Matters Needing Attention

- Do not use abrasive cleaners to clean this product.
- Do not allow this product to be heated or close to fire sources, such as cooking stoves.
- Do not expose this product to direct sunlight for a long time.
- Do not dispose this product in the fire to avoid explosion.
- Do not attempt to disassemble this product to make any modifications, as it does not contain any repair components.

- Do not use this product in the rain.
- If you do not intend to use this product for a long time, please store it in a dry environment and charge the headset at least once a month to prolong its life and avoid extreme temperature and dust.

Troubleshooting

- Connect Bluetooth to play music without sound: Do you want to increase the volume of your phone and headphones.
- No ringtone for incoming calls: Do you want to increase the earphone volume in Bluetooth call mode.
- Low call volume: Turn up the earphone volume while ensuring that the earphone pronunciation unit is close to the ear curtain.
- What kind of charger to choose: Universal phone charger.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.