

J01 智能360°跟拍云台 使用说明书	操作界面 ① 补光灯充电口 ② 补光灯开关 ③ 补光灯 ④ 指示灯 ⑤ 电源开关 ⑥ 镜头 ⑦ 1/4螺母接口 ⑧ 360°横竖旋转 ⑨ 180°翻转 ⑩ Type-C充电口 ⑪ 蓝牙遥控 ⑫ 遥控开关 ⑬ 拍照按键 ⑭ 底盘	操作说明 长按 开机/关机 双击 360°慢速旋转 三击 360°快速旋转 镜头可上下调整 (最长3-3米内距离使用) 横竖切换 180°翻转 OK手势 设备继续使用 手掌手势 设备暂停使用	长按 开机/关机 双击 切换档位 三击 切换模式 充电 充电红色指示灯 / 充满灯灭 拨动开关/关机, 指示灯闪烁, 手机蓝牙找到设备名“J01”点击链接, 蓝色灯熄灭, 后盖打开可更换电池, 电池型号为“CR2032” 充电说明 当产品电量过低的时候, 会有红灯闪烁的提醒 此时要使用Type-c接口充电, 充电过程红灯长亮完成充电后红灯熄灭。
---	---	--	---

FCC Requirement

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.