COMPUTER SPEAKER

BT801



User Manual

Security information:

∴ Warning

- 1.Please read this manual carefully and keep it properly.

- 1.Prease read this final tala carefully after the term of the property.

 2.Please use accessories specified by the manufacturer.

 3.Please install according to the instructions in the manual.

 4.It is recommended to use this product in an environment with a temperature range of 0.35 °C.

 5.To reduce the risk of fire and electric shock, please do not expose this
- product to rain or moisture.

 6.Do not use this product near water, nor immerse it in any liquid or allow any liquid to drip or splash onto it.
- any liquid to drip or splash onto it.

 7. Avoid installing or using this product near any heat sources (such as radiators, heating equipment, stovetops, or other heat-generating devices).

 8. Never place any water-filled containers, such as vases, on top of this product; nor should any form of open flame, like a lit candle, be placed
- 9.Do not block the openings of this product or insert objects into its vents
- or slots, as this may pose a risk of fire or electric shock.

 10.Please ensure adequate space around this product to maintain good ventilation (recommended to be 5cm or more).
- 11.Do not forcibly insert the plug into the port. Before connecting, check if the port is blocked, if the plug and port are compatible, and if the orientation is correct.

 12.To prevent children from ingesting the provided accessories (such as
- Adapter), please keep them out of reach of children.
- Adapter), please keep them out of reach or crilliden.

 13.Do not attempt to open or remove the casing for repairs as it may expose you to dangerous voltages or cause other hazards. Regardless of the reason for damage, professional repair personnel must be consulted for repairs, especially if the power cord or plug is damaged, if liquid has spilled or objects have fallen into it, if it has been exposed to rain or
- moisture, if it malfunctions, or if it has been dropped.

 14.Before wiping or cleaning the product with a dry cloth, please turn off the product and unplug it from the power source.
- 15.Do not use strong acids, strong bases, gasoline, alcohol, or other chemical solvents to clean the product surface. If cleaning is necessary, please use a neutral solvent or water.

 16.This product is not sold with a power adapter. If consumers choose to use a power adapter for power supply, they should purchase a formal
- and standard-compliant power adapte

Packing List:

User Manual x 1 USB Converter x 1

Product Specifications:

Output power (RMS)	2.5W+2.5W
,	2.50012.500
Bluetooth Version	V5.3
Speaker Size	2"(4Ω 5W)×2
Frequency Response Range	90Hz-18KHz
Noise Level	≤25dB(A)
Power Input	5V1A-2A
Input Mode	Bluetooth/USB Sound Card Input
Product Dimensions	W413×D91×H79mm

FAQs:

 
1.Failure to Power On
Check if the machine is in the off state and try to power it on by pressing and holding the power button. Alternatively, inspect the USB port for poor connection. If the device is powered by a USB port on a computer, try using a different port as a troubleshooting step

2.Unable to Connect via Bluetooth

Ensure that both the speaker and the connecting device have Bluetooth turned on and are within an effective connection range Alternatively, try resetting the speaker using the [Forced Bluetooth Pairing] function before attempting to connect again

Function Introduction:

Microphone Reception Hole: Allows for communication when in



Audio Connection Cable USB Power Supply

Short Press: Next Track

Long Press: Volume Up


Button Description:

Single Click: Switch Ambient Light Effects

Long Press: Volume Down

Short Press: Pause Playback Long Press: Disconnect Bluetootl When Bluetooth is Connected: Double Click: Redial/Reject Call Long Press: Power On/Off Single Click: An: Single Click: Switch Input Mode *** U/M \bowtie

Setup and Usage:

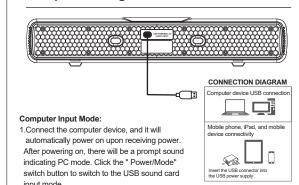

Note: This device comes with power-off and shutdown memory functionality. If it was in USB sound card mode when it was shut down, it will be in USB sound card mode when it is powered on again

2.Fix Settings: On your computer, go to Control Panel/System Prefer Sound Settings > Output, and then select the output device "BT801" for

Bluetooth Audio Mode (depending on the connected device)

- Automatically power on when receiving power. After powering on, a PC mode prompt sound will be heard. Press the 'Power/Mode' switch button to switch to Bluetooth mode."
- 2. Open the Bluetooth device menu, enable Bluetooth and search for Bluetoo devices. Tap on "BT801" in the list of discovered devices. A successful pairing will be indicated by a "ding-dong" sound.



Please Note:

Please Note: This speaker uses USB decoding. If there is no sound (not in mute mode) when playing music after connecting the speaker to your computer, please adjust the settings as follows: Open your computer's Control Panel/System Preferences > Sound Settings > Select "BT801" as the audio output - Save the changes.

> MODEL: BT801 CHECKER: DATE:

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to

(1) This device may not cause harmful interference, and (2) this device may accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of following measures:

- Reorient or relocate the receiving antenna.
 Increase the separation between the equipment and receiver
 Connect the equipment into an outlet on a circuit different
- from that to which the receiver is connected
- -- Consult the dealer or an experienced radio/TV technician for help.
 The device has been evaluated to meet general RF exposure requirement.
 The device can be used in portable exposure condition without restriction.