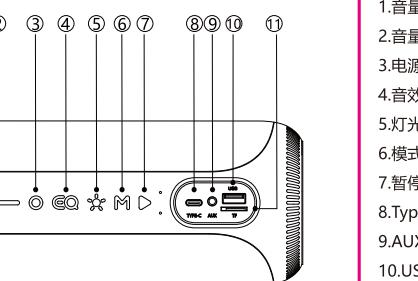
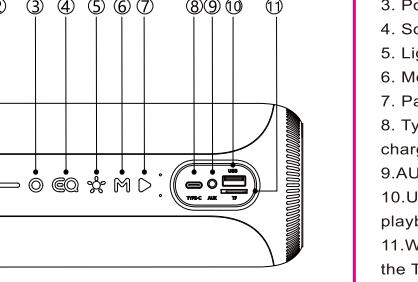


X12 无线扬声器说明 便携式无线音箱	无线扬声器-X12 便携式无线音箱	无线扬声器-X12 便携式无线音箱	无线扬声器-X12 便携式无线音箱	无线扬声器-X12 便携式无线音箱	无线扬声器-X12 便携式无线音箱	无线扬声器-X12 便携式无线音箱
	<p><b>技术规格:</b></p> <p>无线标准: 5.0 传输距离: 10米 输出功率: 40W 播放时间: 2~6小时 (播放音量大小而定) 频率效应: 80Hz~10KHz 扬声器: 66mm*2, 4Ω 20W 输入电源: 5V⎓ 2A 最大电流消耗: 2A 电池类型: 18650 锂离子电池 7.4V 2600mAh 音频信号输入接口: 标准Φ3.5mm 耳机插孔(立体声)</p> <p><b>特点:</b></p> <ol style="list-style-type: none"> <li>1. 无线连接</li> <li>2. 记忆功能, 断点续播</li> <li>3. 支持U盘/TF卡/AUX播放模式</li> <li>4. 内置锂电池</li> <li>5. 支持MP3/ WAV/ WMA/ FLAC/APE音乐格式解码</li> <li>6. 使用高保真的扬声器, 发出声音更自然和细腻</li> <li>7. 1+1设备串连功能</li> <li>8. 6级防水</li> </ol>		<p><b>按键说明:</b></p> <ol style="list-style-type: none"> <li>1.音量+长按: 音量加; 单击: 下一曲。</li> <li>2.音量-长按: 音量减;单击: 上一曲。</li> <li>3.电源键: 长按开机; 单击: 串联。</li> <li>4.音效切换。</li> <li>5.灯光切换/关。</li> <li>6.模式键: 单击切换功能。</li> <li>7.暂停/播放</li> <li>8. Type-C充电线接口, 插入Type-C充电线时默认为设备充电。</li> <li>9.AUX插孔。</li> <li>10.USB接口, 插入U盘时, 默认为USB播放模式。</li> <li>11.TF卡插孔TF卡时, 默认为TF卡播放模式。</li> </ol>	<p><b>使用说明:</b></p> <p>1.无线配对</p> <ol style="list-style-type: none"> <li>1.1. 使用无线配对前,首先打开音频电源,它已经是默认的无线模式。</li> <li>1.2. 打开无线设备,搜索X12,连接配对,连接成功后,开始播放音乐体验。</li> </ol> <p>2.适用于各种手机配件无线技术,无线适配器,无线播放器。</p> <p>3.语音提示</p> <ol style="list-style-type: none"> <li>3.1.开/关机有语音提示音;</li> <li>3.2.低电语音提示3次,15S后关机。</li> <li>3.3.按键到最大音量有语音提示,最小音量无语音提示。</li> </ol> <p>4.模式切换</p> <ol style="list-style-type: none"> <li>4.1.开机默认进入无线模式,模式切换顺序: 无线模式-TF卡模式-USB模式-AUX模式。</li> <li>4.2.模式:后插优先。</li> </ol> <p>5.LED灯</p> <p>无线搜索状态: 蓝灯不闪,无线配对状态: 彩灯变化 播放状态: 彩灯慢闪约1.5秒/次; 开机状态: 蓝灯不闪提示, 充电状态红灯闪, 满电红灯灭。</p> <p>6.音量</p> <p>开机默认音箱50%音量。</p> <p>7.充电使用:</p> <p>本机内置过充保护电路,可长时间连接电脑或充电器,约四小时即可完全充电。每个电池的播放时间会因使用不同大小的音量而有所不同。</p> <p>8.无工作状态,15分钟后自动关机。</p>	<p><b>故障排除:</b></p> <ol style="list-style-type: none"> <li>1.自动关机: 电池电量不足时会自动开启电池保护,请充电4小时后使用。</li> <li>2.无法播放乐: 音乐文件存储路径不能被播放器识别,音乐文件请存储在可移动设备的根目录下。</li> <li>3.连接电脑无声: 电脑界面连接错误,请选择正确的音频输出端口</li> <li>4.按键无反应或功能错乱: 关机后重试。</li> <li>5.机器出现异常卡机情况,长按开机键15秒复位。</li> </ol>	<p><b>产品保修</b></p> <p>用户名: _____</p> <p>联系电话: _____</p> <p>购买日期: _____</p> <p>产品编号: _____</p> <p>维护故障: _____</p> <p>注意: 产品保修期6个月</p>

X12 Wireless Speaker Instructions Portable Wireless Speaker	Wireless Speaker-X12 Wireless Speaker	Wireless Speaker-X12 Wireless Speaker	Wireless Speaker-X12 Wireless Speaker	Wireless Speaker-X12 Wireless Speaker	Wireless Speaker-X12 Wireless Speaker	Wireless Speaker-X12 Wireless Speaker
	<p><b>Technical Specifications:</b></p> <p>Wireless standard: 5.0 Transmission distance: 10 meters Output power: 40W Play time: 2~6H Frequency effect: 80Hz ~ 10KHz Speaker: 66mm*2, 4Ω 20W Input Power: 5V⎓ 2A Maximum current consumption: 2A Battery type: 18650 Li-ion 7.4V 2600mAh Audio signal input interface: standard Φ3.5mm headphone jack (stereo)</p> <p><b>Features:</b></p> <ol style="list-style-type: none"> <li>1. Wireless connection</li> <li>2. Memory function</li> <li>3. Support U disk/ TF card/ AUX play mode</li> <li>4. Built-in lithium battery</li> <li>5. Support MP3/WAV/WMA/FLAC/APE music format decoding</li> <li>6. Use high-fidelity speakers, make the sound more natural and delicate</li> <li>7. 1+1 serial function</li> <li>8. Water resistance IPX6</li> </ol>		<p><b>Button instruction:</b></p> <ol style="list-style-type: none"> <li>1. Volume+Long press: Volume increase; Click: Next song.</li> <li>2. Volume - Long press: Volume decrease; Click: Previous track.</li> <li>3. Power button: Long press to power on; Click: Cascade.</li> <li>4. Sound effect switching.</li> <li>5. Light switching/off.</li> <li>6. Mode key: Click to switch functions.</li> <li>7. Pause/Play</li> <li>8. Type-C charging cable interface. When inserting a Type-C charging cable, it defaults to device charging.</li> <li>9.AUX jack.</li> <li>10.USB interface, when inserting a USB drive, defaults to USB playback mode.</li> <li>11.When the TF card is inserted into the TF card jack, it defaults to the TF card playback mode.</li> </ol>	<p><b>Directions for use:</b></p> <ol style="list-style-type: none"> <li>1. Device to connect <ol style="list-style-type: none"> <li>1.1 Turn on the device to default wireless mode.</li> <li>1.2 Turn on wireless device, search model X12 and connect, play music after connection successfully.</li> </ol> </li> <li>2. Suitable for all kinds of mobile phones equipped with wireless technology, wireless adapter, wireless players.</li> <li>3. Voice prompt <ol style="list-style-type: none"> <li>3.1. there is a voice prompt when turn on/off.</li> <li>3.2. Low-power voice prompt 3 times, shutdown after 15S.</li> <li>3.3. there is voice prompt when the button to the maximum volume, no voice prompt at the minimum volume.</li> </ol> </li> <li>4. Mode switching <ol style="list-style-type: none"> <li>4.1. enter into wireless by default when starting-up, switching sequence is as follows: wireless mode -TF card mode-USB mode - AUX mode.</li> <li>4.2. mode: post-insertion priority.</li> </ol> </li> <li>5. LED light <ol style="list-style-type: none"> <li>Wireless search status: blue light does not flash, Wireless pairing Status: Lights change Play state: The colored light flashes slowly for about 1.5 seconds/time; Power-on state: The blue light does not flash</li> </ol> </li> </ol>	<p>6. volume the default volume of speaker is 50% when starting-up.</p> <p>7. Charging to use The machine built overcharge protection circuit, can be connected to a computer or charger for a long time, about four hours to fully charge. Every battery playback time will be different due to the use of different size of the volume.</p> <p>8. No working status, automatic shutdown after 15 minutes.</p> <p><b>Troubleshooting:</b></p> <ol style="list-style-type: none"> <li>1. Auto power off: the battery protection is automatically activated when the battery is low, please use it after charging for 5 hours.</li> <li>2. Can not play music: the music file storage path cannot be recognized, save file and store in the root directory of the removable device.</li> <li>3. Connect the computer no sound: computer interface connection error, please select the correct audio output port.</li> <li>4. No function or function keys wrong: try again after shutdown.</li> <li>5. If the machine is stuck abnormally, press the power button for 15 seconds to reset.</li> </ol>	<p><b>Product warranty</b></p> <p>Username: _____</p> <p>Contact number: _____</p> <p>Date of purchase: _____</p> <p>Product number: _____</p> <p>Maintenance failure: _____</p> <p>Note: The product warranty is 6 months</p>

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.