




eTAG

MODEL:SKTAETAG01PCCN



The Apple Find My network provides an easy, secure way to locate compatible personal items using the Find My app on your iPhone, iPad, Mac, or the Find Items app on Apple Watch. To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended. The Find Items app on Apple Watch requires the latest version of watchOS. Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards. Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are the trademarks of Apple Inc. iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

skross.com

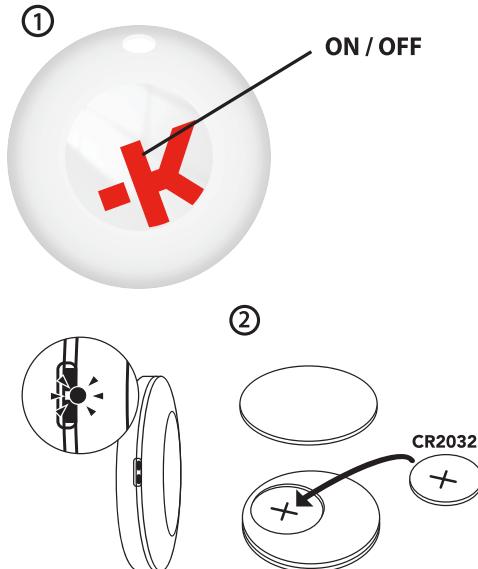

ENGLISH

MAIN REQUIREMENTS

Before setting eTAG up, please check that you have the following requirements:
- Apple device (iPhone® 6S and up, iPad®, iPod Touch® or Mac®) with iOS 14.5, iPadOS 14.5 or subsequent versions and two-factor authentication turned on.
- Find My function turned on
- Bluetooth® turned on
- Wi-Fi connection
- Tracking service active
- Turn on tracking for the Find My app. To do this, just go to Settings > Privacy > Tracking > scroll down and press "Find My". Select "While using the app". Then turn on "Exact position".

DESCRIPTION OF BUTTONS AND SOUNDS (1)

Power On > Press the button 3 times (2 beeps)
Power Off > Press and hold the button for 3 seconds (2 beeps)

Reset > Press the button 3 times, then hold it until you hear a long beep (remove eTAG from the "Find My" app before resetting it).

Remove object > Press "Remove Object" on the "Find My" app (long beep)

Press "Ring" > Press "Ring" on the "Find My" app (beeps 13 times)

SETTING UP eTAG

Remove the plastic tab if it is a new device
1. Turn on the device, turn on eTAG by pressing the central button
2. Pair eTAG with the device
- Open the "Find My" app
- Keep eTAG near the iPhone, iPad or iPod Touch. Press "+" and then "Add another object". Wait until eTAG is displayed on the device. Then press "Connect".
If you have several object-finders, make sure that just one finder is near the device.
- Choose the name for the object and choose an emoji.
- Press "Agree" to allow a connection between the device and your Apple ID.
- Press "End".
You can now link eTAG to the object you want to track and you can display the object on the Find My app.
3. Enable "Lost Mode"
Open the "Find My" app and press the object icon. Then press "Enable" below "Lost Mode"
- Press "Continue" and add your telephone number or e-mail address so you can be contacted if someone else finds the lost object
4. Removing eTAG
- Open the "Find My" app and press the object icon.
- Scroll down and press "Remove Object".
Note: after you have removed eTAG from the app, the device will remain on stand-by for at least 6 months, so you can reconnect directly at any time.

TECHNICAL SPECIFICATIONS

Dimensions: 37 mm x 37 mm x 9 mm
Materials: Polycarbonate
Battery: CR2032 non-rechargeable
Accelerometer: Three-axis SC7A20
Bluetooth®: Low energy 5.0
Transmission distance: 40/50m (no obstacles)
Operating temperature: -20 / 60°C

MAIN FUNCTIONS

Finding objects far away: when you are out of Bluetooth® range, use the Find My app to display the object on the map and to get directions to it.
To display eTAG on the map:
- Open the Find My app and select the Objects panel
- Choose the object you want to find on the Objects list
- If eTAG is in range of the device or if the Find My network has recently found it, it will be displayed on the map.
The updated position, date and time will be displayed below its name
- If eTAG is out of range of the device or any other device on the Find My network, its last position, date and time will be displayed.
- To receive a notification when eTAG is in range of the device or is found by the Find My network, turn on "Notify me when found" in Notifications section.
Finding objects nearby: make eTAG ring when you are near the object to find it.
To make eTAG ring:
- Open the Find My app, then press the Objects panel
- On the Objects list, choose the object you want to make a sound
- Press "Ring". If eTAG is in Bluetooth® range, it will make a sound.
- To stop the sound before it finishes automatically, press "Stop".

BATTERY

eTAG contains a button battery. You might need to replace the battery during the product's life-cycle. Only replace it with the same type of battery (CR2032) and with the same power, following the correct polarity. You can monitor the battery level on the Find My app. When the battery is running low, the Find My app will send a notification.

Replacing the battery

1. Disassemble the product into two parts through the slot between the top and bottom covers.
2. Remove the battery.
3. Insert a CR2032 battery into the device with the positive side (+) facing upwards.
4. Connect the top and bottom covers and press firmly.

SAFETY AND WARNINGS

eTAG is designed to avoid any unwanted tracking.

If someone else's eTAG is seen moving with you over time, you will receive a notification in one of the two following ways:

1. If you have an iPhone, iPad or iPod Touch, the Find My app will send a notification to your Apple device. This function is available on iOS or iPadOS 14.5 or subsequent versions.


2. If you do not have an iOS device, eTAG will make a repeated sound over time.

These functions have been specifically created to deter people from trying to track you without your knowledge.

Subject to change. ©2024 WorldConnect AG. All rights reserved.

WEEE

<https://www.skross.com/en/about-skross/help-center/weee-directive>

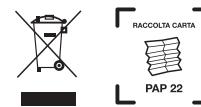

WARNING

- INGESTION HAZARD:** This product contains a button cell or coin battery
- DEATH or serious injury can occur if ingested.**
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- KEEP new and used batteries OUT OF REACH of CHILDREN**
- Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- a) The statement "Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate."
- b) The statement "Ever used batteries may cause severe injury or death."
- c) The statement "Call a local poison control center for treatment information."
- d) A statement indicating the compatible battery type (e.g., L144, CR2032).
- e) A statement indicating the nominal battery voltage.
- f) The statement "Non-rechargeable batteries are not to be recharged."
- g) The statement "Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns."
- h) The statement "Ensure the batteries are installed correctly according to polarity (+ and -)."
- i) The statement "Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries."
- j) The statement "Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations."
- k) The statement "Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children."



ENGLISH - INFORMATION ON THE LEGAL GUARANTEE

Our products are covered by a legal guarantee against conformity defects in accordance with applicable national consumer protection laws. For more information, please see the following page: <https://www.skross.com/en/terms-and-conditions-of-sale>



ENGLISH - SKROSS - WorldConnect AG declares that this device complies with Directive 2014/53/EU. **SKROSS** - WorldConnect AG also declares that this device complies with Directive 2011/65/EU updated by 2015/863/EU.



ENGLISH - INSTRUCTIONS FOR THE DISPOSAL OF DEVICES FOR DOMESTIC USE (Applicable in countries in the European Union and those with separate waste collection systems). The mark on the product or documentation indicates that this product must not be disposed of with other household waste at the end of its life. To avoid any damage to health or the environment due to improper disposal of waste, the user must separate this product from other types of waste and recycle it in a responsible manner to promote the sustainable re-use of the material resources. Domestic users should contact the dealer where they purchased the product or the local government office for all information regarding separate waste collection and recycling for this type of product. Corporate users should contact the supplier and verify the terms and conditions in the purchase contract. This product must not be disposed of along with other commercial waste. For more information, visit the website <https://www.skross.com>



ENGLISH - Using the device may, in some cases, interfere with the correct functioning of medical devices (e.g. pacemakers). Prolonged exposure to high volume and prolonged use may cause permanent damage to hearing. Do not use the device in places where being unable to hear external noises could prove dangerous (e.g. railway crossings, train platforms) if used when driving, comply with the regulations in force in the relevant country. Children should be supervised when using the device and all accessories and packaging should be kept out of their reach. Do not expose the device for prolonged periods to damp, dust, soot, steam, direct sunlight, and excessively high or low temperatures, which could result in it malfunctioning. Use only suitable chargers for charging. Regularly charge the product (at least once every 3 months).

ENGLISH

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

• Reorient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/ television technician for help.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.



WorldConnect AG, Viscosestrasse 46,
9443 Widnau, Switzerland
WorldConnect AG c/o DACHSER SE,
Pinkertweg 40, 22113 Hamburg, Germany



info@skross.com
www.skross.com