

Instructions

No.	Function Realization	Operate	voice prompt	Indicator
1	Power On	Long Press “/M” about 2s	“bluetooth mode”	Blue and red lights flicker alternately
2	Power Off	Long Press “/M” about 3s	“Power Off”	Indicator off
3	Pairing	After turning on the device, it enters the search mode and finds SY-31 via Bluetooth	“ bluetooth mode”	Blue and red lights flicker alternately
4	Pairing Sucessful	/	“Ding Dong”	Blue light on
5	Disconnect	/	“Dong”	Blue and red lights flicker alternately
6	Turnon/Off LED light	Three click or long press “/”	/	LED light on/off
7	Auto Paring	Auto pairing when power on	“ Ding Dong”	Blue light on
8	Out of distance disconnect	Out of distance disconnect { headphone enter into paring status, Blue and red lights flicker alternately, headphone will be auto connected if move to working range within 1mins,or will automatic power off after 5mins without connection}	“Ding Dong”	Blue light on
9	volume adjustment	Long press / / / /	Maximum/Minimum Volume: “D D”	/
10	Previous Track	Short press “/”	/	/
11	Next Track	Short Press“ / / / / ”	/	/

No.	Function Realization	Operate	voice prompt	Indicator
12	Paly/Pause Much	Short Press “/”	/	/
13	Incoming call prompt	/	Ling Ling....	/
14	Answer Calls	Short Press “/”	/	/
15	Reject Calls	Long Press “/”	/	/
16	Redial the last number	Double Press “/”	/	/
17	Hangs up Calls	Short Press “/”	/	/
18	Low Electricity Prompt	Battery voltage lower than 3.3V	Prompts please charge every 20s	/
19	Low Electricity Power Off	Battery voltage lower than 3.1V	“Power Off”	/
20	Charging Indicator	Red Light when Charging	/	Red Light On
21	AUX IN	One Plug in Headphone,another plug into the audio devices	“Power Off”	Indicator Off
22	Fully Charge	Fully Charge	/	Red Light Off
23	FM Mode	Single click “/M”	FM Mode	/
24	Automatic Station Searching	Double click “/”	/	Blue light flash
25	SD Card Model	Insert TF card to play music automatically	“SD Card Mode”	/

产品使用说明

序号	实现功能	操作	提示音	指示灯
1	开机	长按“ U/M ”键 2S	“蓝牙模式”	蓝红交替闪烁
2	关机	长按“ U/M ”键 3S	“关机”	指示灯灭
3	进入配对	开机后进入搜索状态，蓝牙找到SY-31	“蓝牙模式”	红蓝交替闪烁
4	配对成功	/	“叮咚”声	蓝灯常亮
5	与手机连接 断开	/	“咚”声	红蓝交替闪烁
6	关/开耳灯	三击或长按“ U/L ”键	/	耳灯熄灭或耳灯点亮
7	开机回连	开机后自动回连先前配对成功的设备	“叮咚”声	蓝灯常亮
8	远距离断开 回连	耳机离手机超出连接范围，自动断开蓝牙，红蓝灯交替闪，在约1分钟内耳机靠近手机到连接范围内则自动回连，不然5分钟后自动关机	“叮咚”声	蓝灯常亮
9	音量调整	长按音量 $\text{V+}/\text{U+}, \text{V-}/\text{U-}$ 键	最大/最小音量： 提示“滴滴”	/
10	上一曲	短按“ U/L ”键	/	/
11	下一曲	短按“ V/U ”键	/	/
12	音乐播放/暂停	短按“ U/L ”键	/	/
13	电话提醒	/	“铃铃…铃铃…”	/

序号	实现功能	操作	提示音	指示灯
14	接听电话	短按“ U/L ”键	/	/
15	拒接来电	长按“ U/L ”键	/	/
16	未码重拨	双击“ U/L ”键	/	/
17	挂断电话	短按“ U/L ”键	/	/
18	低电报警	电池电压低于 3.3V	每个20秒提示一下“电量低，请充电”	/
19	低电关机	电池电压低至约 3.0V	关机	/
20	充电中指示灯	只要一充电就亮红灯	/	红灯常亮
21	LIN	先插耳机一端，再插音源	关机	指示灯灭
22	充电饱和	电池充满电	/	红灯灭
23	FM 模式	单击“ U/M ”键	“FM 模式”	/
24	FM 自动搜 索模式	双击“ U/L ”键	/	蓝灯闪烁
25	SD 卡模式	插入TF卡自动播放音乐	“SD 模式”	/

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.