

4.7X2CM

INSTRUCTIONS:

1. REMOVE BATTERY COVER.
2. INSERT TWO AAA (1.5V) BATTERIES INTO THE BATTERY COMPARTMENT.
3. REPLACE THE BATTERY COVER.
4. PRESS AND HOLD THE MATCH BUTTON FOR 2 TO 4 SECONDS. THE LED LIGHTS WILL FLASH RED.
5. TURN THE MAKO ON. THE LIGHTS WILL TURN SOLID TO INDICATE A SUCCESSFUL LINK.

NOTE: IF THE LIGHTS CONTINUE TO FLASH THAT MEANS AN UNSUCCESSFUL LINK. REMOVE AND REINSERT THE BATTERIES AND REPEAT STEPS 1 AND 2. POWER OFF CAR, POWER BACK ON AGAIN AND REPEAT STEPS 4 AND 5.

AFTER 10 SECONDS OF NON-OPERATION THE REMOTE WILL GO INTO POWER SAVING MODE. DO NOT USE THE REMOTE CONTROL TO CONTROL MORE THAN ONE CAR.

THE REMOTE SHOULD ONLY BE USED BY AN ADULT.

FCC ID: 2BG2YMAKO

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

