


Folding IM  
Folded size: 5.25w x 6.75h  
Total Paper Size: 10.5 x 6.75h

Charging Karaoke Microphone

- Connect USB charging cable to USB-C port on bottom of microphone.
- Charge with any USB power source.
- Red indicator light will turn on while charging and will turn off when complete.

Using Microphone

 - Press and hold power button on microphone to turn on / off.
- Microphone will connect automatically once speaker is powered on.
- Move microphone away from speaker to reduce feedback.
- Microphone will amplify sound of your voice and combine with music playback.
- Position microphone short distance away from mouth while singing/speaking.
- Adjust volume by pressing + or - buttons on the microphone.
- Press voice fx button to choose from high and low voice changing effects.
- Press and hold voice fx button to mute and unmute microphone.

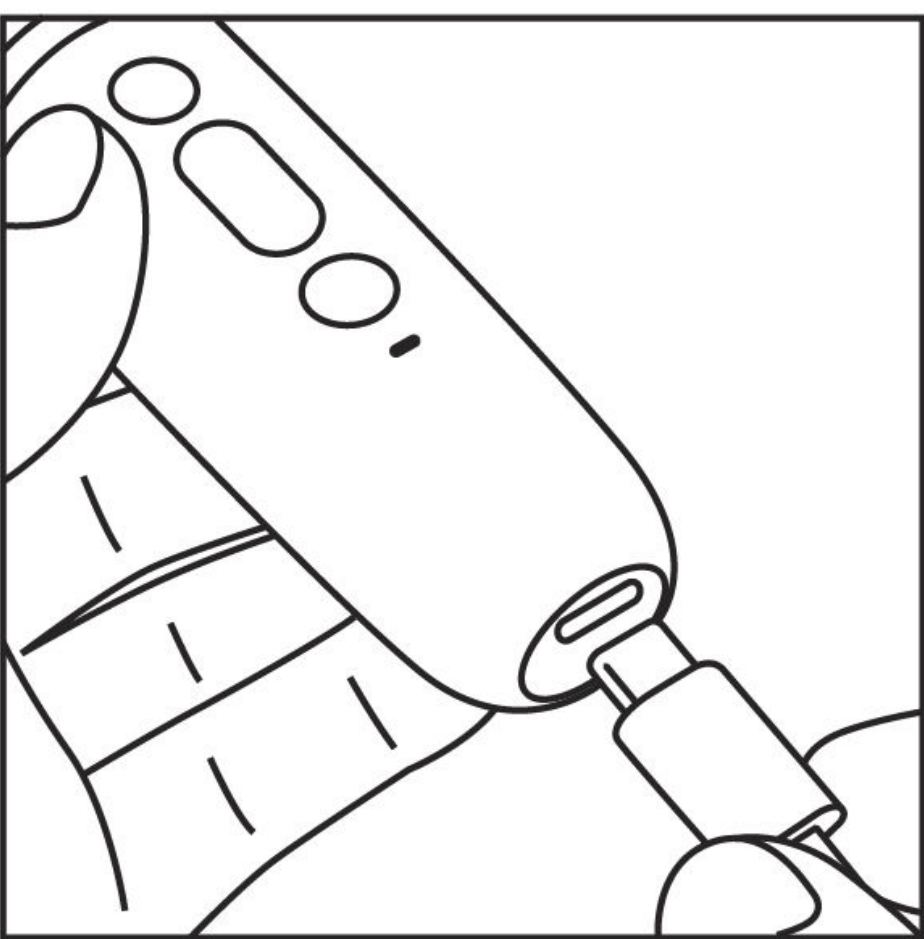

- Power Button —
- Mic Volume Up/Down —
- Voice FX —

WARNING! IMPORTANT CARE AND SAFEGUARDS

Failure to follow safety instructions can lead to fire, shock, personal injury or property damage and damage to product.

- The product contains small parts and is not suitable for children
- Do not use this product for anything other than its intended use
- Device must be Bluetooth® enabled to connect wirelessly
- Device must be compatible with 3.5mm AUX cable for wired connection
- The product is not waterproof
- Do not expose this product to rain, water or excessive humidity
- Do not handle this product with wet hands
- Do not store next to heat sources or in direct sunlight
- Extreme hot and/or cold weather may damage this product
- Always use this product in operating temperatures of 32°F(0°C) - 95°F(35°C)
- Never take this device apart and always get repaired by a qualified technician
- Do not use this product if it has been damaged in any way
- This product contains one or more internal batteries, please dispose responsibly

FCC Disclaimer: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

Any questions, please call customer service at 1-800-254-0111 2434 Research Dr., Livermore, CA 94550  
8:30am - 5pm, PST. Monday - Friday, or email us at customerservice@jlrgeartm.com © 2024 JLR Gear - Made in China



Wireless Mic Light Up  
Party Speaker

Product Instruction Manual

 
Please read carefully prior to use.



Charge speaker and microphone completely prior to initial use.




Please call customer service at 1-800-254-0111 with any questions

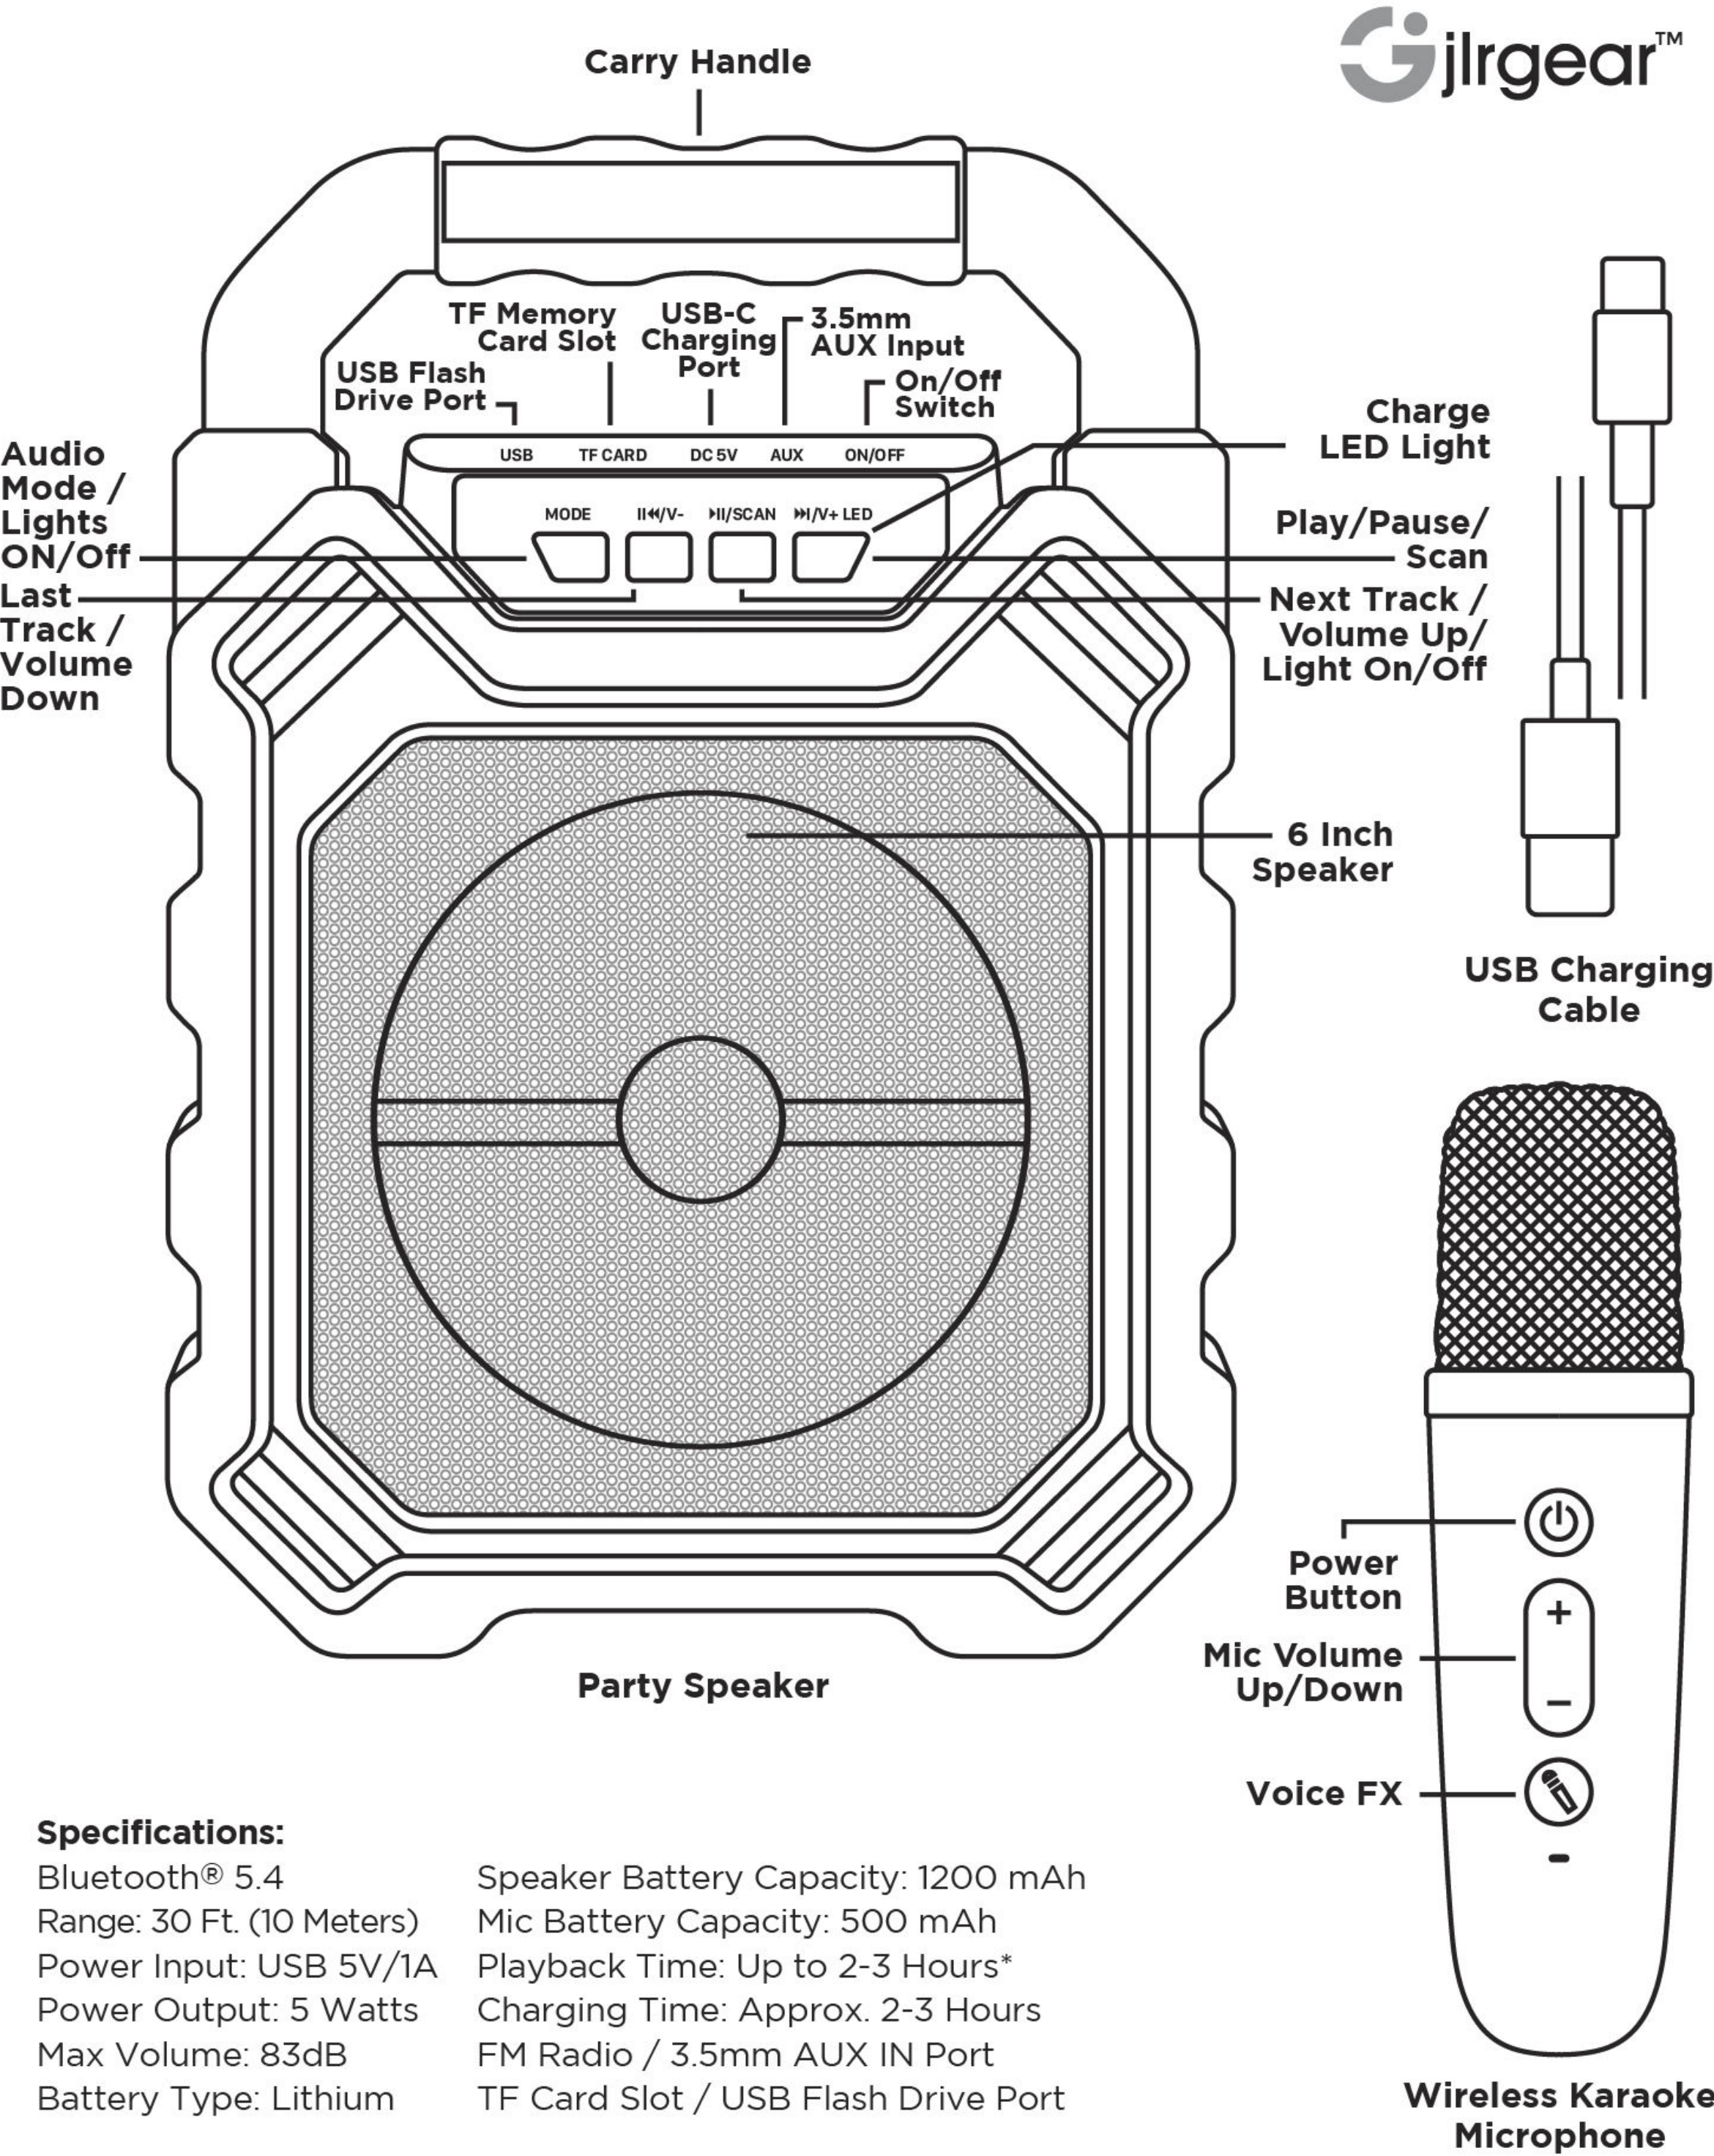

- Specifications:**
- |                           |                                     |
|---------------------------|-------------------------------------|
| Bluetooth® 5.4            | Speaker Battery Capacity: 1200 mAh  |
| Range: 30 Ft. (10 Meters) | Mic Battery Capacity: 500 mAh       |
| Power Input: USB 5V/1A    | Playback Time: Up to 2-3 Hours*     |
| Power Output: 5 Watts     | Charging Time: Approx. 2-3 Hours    |
| Max Volume: 83dB          | FM Radio / 3.5mm AUX IN Port        |
| Battery Type: Lithium     | TF Card Slot / USB Flash Drive Port |

 \*Playback time depends on use, volume level and may be more or less than the time specified.

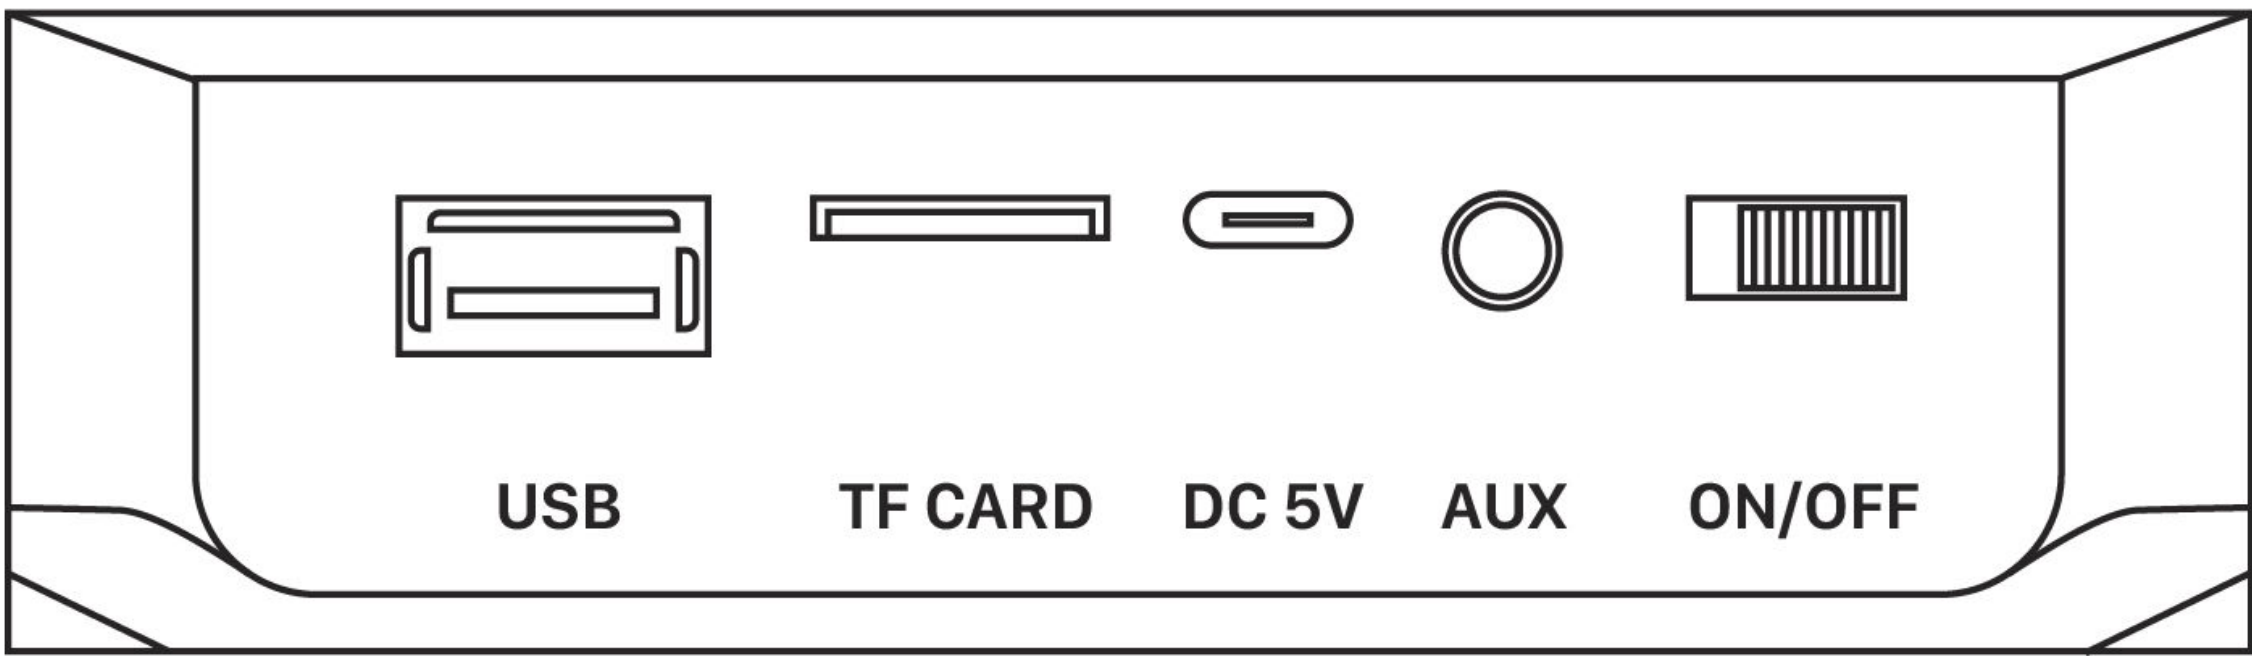

Charging Speaker

- Connect USB charging cable to USB-C port on speaker and USB power source (not included).
- LED indicator light is red while charging and will turn off when complete.

Pair and Connect

- Use power switch to power On/Off.
- Speaker default is Bluetooth® pairing mode.
- Open Bluetooth® menu on your smartphone and search for new devices.
- Connect to **PARTY SPEAKER**. An alert will sound indicating speaker is connected.
- Speaker will reconnect to smartphone automatically after initial pairing. If auto-reconnect does not occur then repeat the steps above.

Music Playback / FM Radio / LED Light

- Control music playback and volume with your smartphone in Bluetooth® mode.
- Short press mode button to select Bluetooth® wireless, AUX or FM Radio.
- Use music control buttons to play/pause, adjust volume and select track.
- Short press to select next or last track.
- Long press to increase or decrease volume.
- Control USB flash scan/set radio stations in FM Radio mode.
- Hold mode button to turn LED lights On/Off.

AUX / TF Card / USB Playback Mode

- Short press mode button to change to AUX mode. AUX will be displayed.
- Connect 3.5mm audio cable (not included) to AUX port for wired connection.
- Insert TF memory card (not included) that is already loaded with music playlist into TF card slot. TF playback will start automatically.
- Insert USB flash drive (not included) that is already loaded with music playlist into USB port. USB playback will start automatically.
- Use music control buttons to play/pause, adjust volume and select track.

Default mode is Bluetooth® wireless connection.

Connect charging cable to USB port to use as FM Radio antenna for better reception.

Care Tip: Periodically wipe clean with soft cloth. Never use abrasive cleaning agent or get wet.



#### FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### RF Exposure Information

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition, compliance with exposure requirements.