

OUTDOOR MASTER



DO WHAT YOU BELIEVE

SKI HEADPHONES USER MANUAL

OUTDOOR MASTER

Thank you for choosing outdoormaster new true wireless bluetooth headphones OM-MZ04m.

The OM-MZ04m has been newly upgraded to a true wireless solution, eliminating the connecting cable between the two headphones.

The thickness of the headphones has been reduced by over 25% compared to the old model, bringing a more comfortable experience.


It is equipped with a storage case that can be used as a wireless charging base and has become much more convenient to use. Provide strong protection to the headphones.

Newly designed shapes and colors.


Wishing you the joy of enjoying music and communicating with friends while skiing.

List of Contents


1- A pair of headphones
(placed in the storage case)

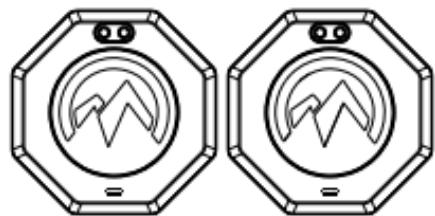

2- One storage case

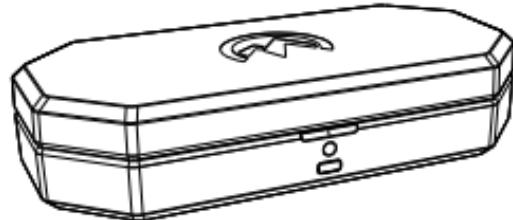

3- One charging cable

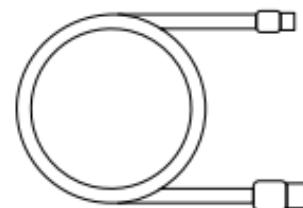

4- User manual



Headphone Parameters

Bluetooth version	V5.2
Reception distance	10 meters (unobstructed)
Horn size	40mm
Horn impedance	32 ohms +/-15%
Horn frequency response	20-20KHz
Battery voltage	3.7V
Battery capacity	220mAh
Charging time	3H
Playback duration	More than 10 hours of single playback on a full charge
Charging method	Contact point
Usage temperature	-4°F to 113°F (-20°C to 45°C)

Storage Case Parameters

Battery voltage	3.7V
Input voltage	5V
Input current	1A
Usage temperature	32°F to 113°F (0°C to 45°C)



Quick Start

- 1-** Open the storage case cover (the headset can only enter Bluetooth pairing mode when the cover is open).
- 2-** Press and hold the button on the front of the storage case for 5 seconds.
- 3-** The indicator light on the headphones flashes blue quickly and enters Bluetooth pairing mode.
- 4-** Select "OM MZ04m" on your mobile phone or other device you want to use for pairing.
- 5-** The indicator light on the headset slowly flashes blue, indicating successful pairing.
- 6-** Now you can use OM-MZ04m to play music or make calls!



Function Instructions


Charging Contacts

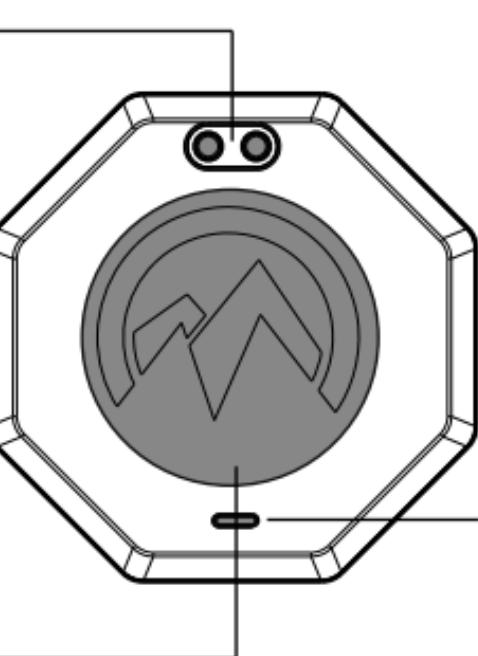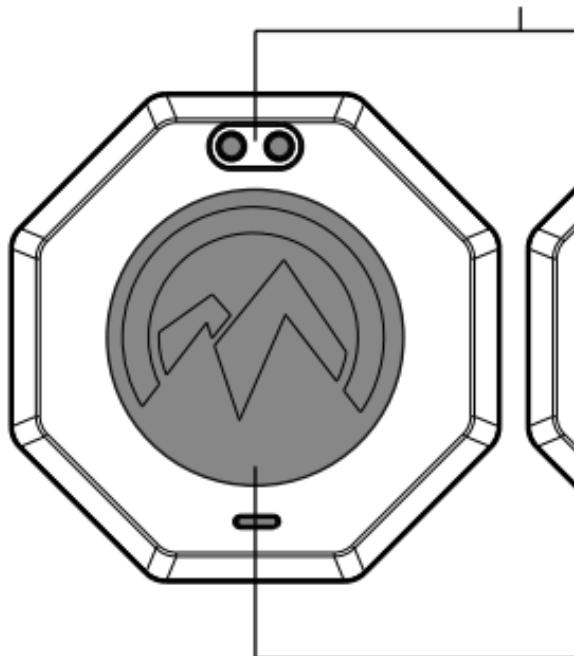

Button


Call Microphone

Horn Sounding Surface


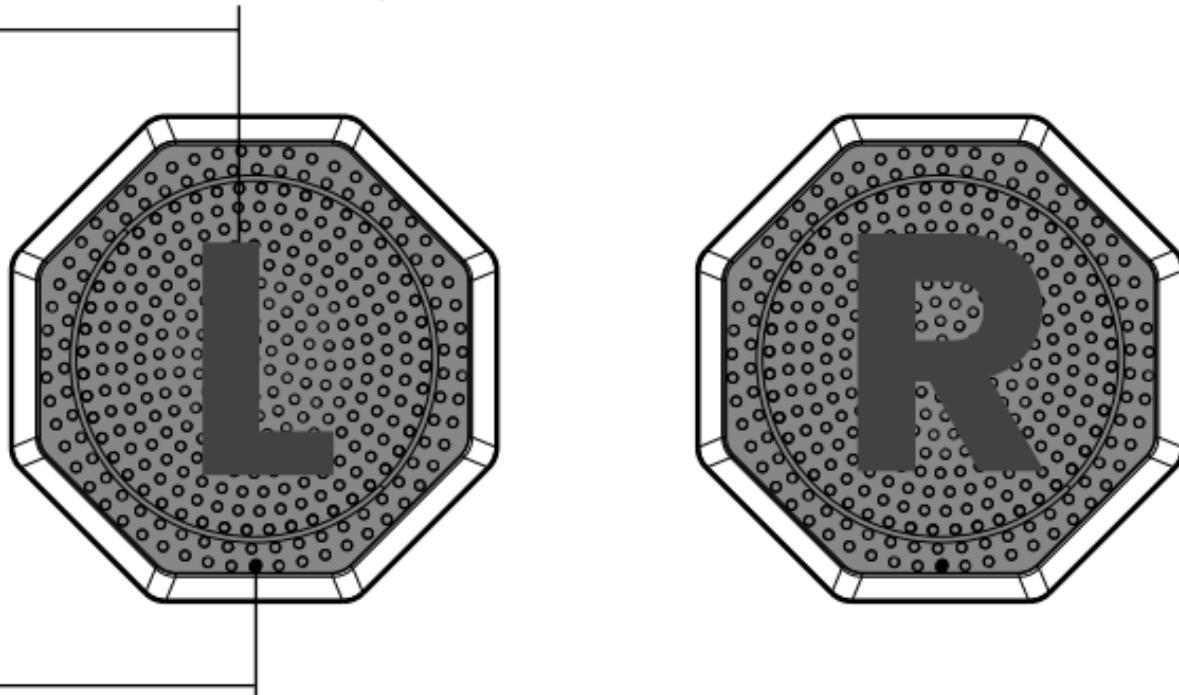


Indicator Light

WHEN AUDIO IS PLAYED	CLICK	Play/Pause
	DOUBLE-CLICK LEFT	Previous song
	DOUBLE-CLICK RIGHT	Next song
WHEN A CALL COMES IN	CLICK	Answer
	DOUBLE-CLICK	Hang up/Decline
CALL VIOCE ASSISTANT	3 CONSECUTIVE CLICKS	Outgoing
	CLICK	Turn off
	LONG PRESS LEFT	VOLUME -
	LONG PRESS RIGHT	VOLUME +

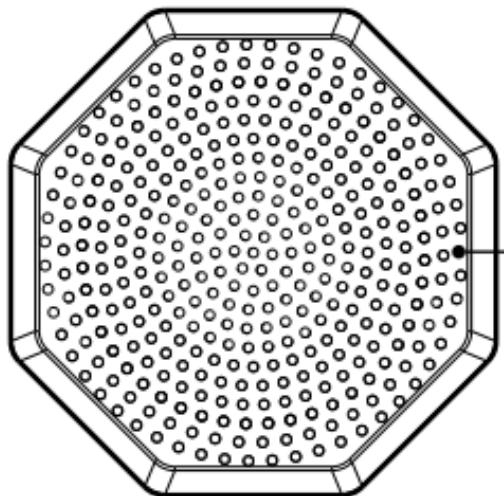

- **Blue light flashing fast**
-Bluetooth search in progress
- **Blue light flashing slowly**
- Bluetooth connection
- **The red light flashing fast**
- Low power
- **The red light stays on for a long time**
- On charging
- **The blue light stays on for a long time**
- Charging completed

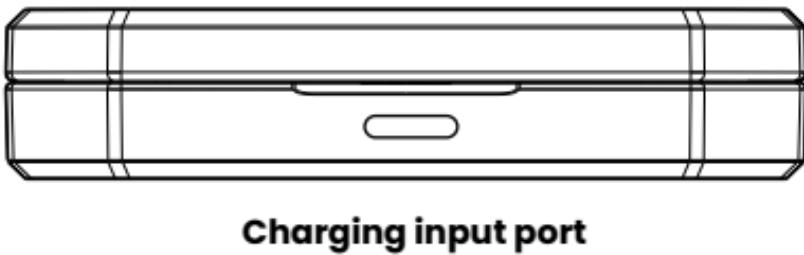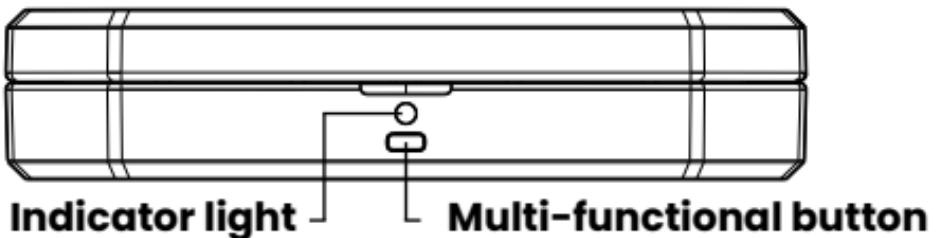

Short press once and the indicator light
when they are placed correctly in the storage case.

Open the cover, long press for 5 seconds,
the headphone will be disconnected when paired, and enters the pairing mode.
(The headphones need to be placed correctly in the Storage Case)

Storage Case Indicator Description

The indicator light will indicate the battery level of the headphones, and it will work only
When the headphones are placed correctly in the storage case.
Besides, the indicator light will indicate the battery level of the storage case when the
storage case is empty.

Green light Over 70% of battery level

Orange light Battery level between 20% and 70%

Red light Battery level below 20%

Declaration

Please read and keep all safety and use instructions.

WARNING: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Only use attachments/accessories specified by the manufacturer.
8. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARNINGS/CAUTIONS

- Do NOT use the headphones at a high volume for any extended period.
 - To avoid hearing damage, use your headphones at a comfortable, moderate volume level.
 - Turn the volume down on your device before placing the headphones in/on your ears, then turn the volume up gradually until you reach a comfortable listening level.
- Do NOT use your headphones while driving for phone calls or any other purpose.
- Do NOT use the headphones if they emit any loud unusual noise. If this happens, turn the headphones off and contact OutdoorMaster customer service.
- Remove headphones immediately if you experience a warming sensation or loss of audio.
- Do NOT use the headphones as aviation communication headsets.
- Contains small parts which may be a choking hazard. Not suitable for children under age 3.
- This product contains magnetic material. Consult your physician on whether this might affect your implantable medical device.

- To reduce the risk of fire or electrical shock, do NOT expose this product to rain, liquids or moisture.
- Do NOT expose this product to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near the product.
- Do NOT make unauthorized alterations to this product.
- Use this product only with an agency-approved power supply which meets local regulatory requirements (e.g., UL, CSA, VDE, CCC).
- Do NOT expose products containing batteries to excessive heat (e.g., from storage in direct sunlight, fire or the like).
- Do NOT wear the headphones while charging.
- The headphones do not play audio while charging.

Warranty Information

This product is suitable for most types of ski helmets on the market. It is designed to be used in earmuffs. Product damage caused by collision, water ingress or other improper use is not covered by our warranty. It is covered by a limited warranty from OutdoorMaster. For other warranty detail, please contact OutdoorMaster customer service or visit <https://outdoormaster.com>

Model: OM-MZ04m

Manufacturer: Qingdao Mingce Zhida Import and Export Trading Co.,LTD

Address: Room 1103, Building 1, No. 117, YingshanHong Road, Huangdao District,
Qingdao City, Shandong Province, China

Tel: 0755-84650856

Official Website: www.outdoormaster.com

Email: care@outdoormaster.com

MADE IN CHINA



care@outdoormaster.com

www.outdoormaster.com