


Clock And Night Light Folding Phone  
Wireless Charger

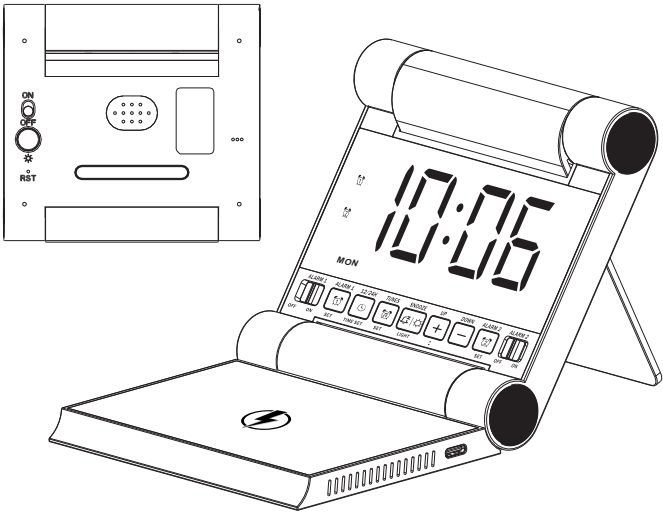

Please read carefully before use

Product Parameters

Product Name	Clock And Night Light Folding Phone Wireless Charger	Product Model	JY - 01
Input Voltage	12V	Material	ABS
Phone Output	5W/7.5W/10W	Product Size	160 x 115 x 120 mm

Packing List

Color Box, Product, 20W Adapter, Cable, User Manual.

User Guide

1. Charging The Product

Included in the box is a USB-C Charge Cable, Product, Adapter that supports fast charging and is compatible with USB-C power adapter and product port.

2. Power ON/OFF Switch

- Turn the power switch to "ON", The product is working normally.
- Turn the power switch to "OFF", The product will be shut down.

3. Night Light Key

- Short press this button to turn on light.
- Short press this button to select light colors.
- Long press this button to turn off the night light.
- The light colors include RGB, white, orange, yellow, purple, blue, light blue, green, red.

4.Reset Key

Short press this button to reset the factory settings.

5.Alarm Clock 1 Switch

- Turn the alarm 1 switch to "ON", alarm 1 will turn on, and the indicator light for alarm 1 will turn on.
- Turn the alarm 1 switch to "OFF", alarm 1 will turn off, and the indicator light for alarm 1 will turn off.

6.Alarm Clock 1 Setting

- Long press "Alarm 1 Set" key for 1.5 seconds to enter the alarm clock 1 setting and the "hour" is flashing, then press + or - key to select.
- Then short press "Alarm 1 Set" key to enter the "minute" flashing, press + or - key to select.
- Lastly, short press "Alarm 1 Set" key or wait for 5 seconds to confirm the alarm and return to time display.
- If you want to check alarm clock 1, please short press "Alarm 1 Set", Alarm Clock 1 time will be displayed 3 seconds.

7.Clock Setting

- Long press "clock setting" key for 1.5 seconds to enter the clock setting and the "hour" is flashing, then press + or - key to select.
- Then short press "clock setting" key to enter the "minute" flashing, press + or - key to select.
- Then short press "clock setting" key to enter the "week" flashing, press + or - key to select.
- Lastly, short press "clock setting" key or wait for 5 seconds to confirm the time and return to time display.
- In time display mode, short press this key to switch between 12 or 24 hour format.

8. Tunes Setting (Volume/Ringtone setting)

- Long press "Tunes Set" key for 1.5 seconds to enter the tunes setting and the "Volume" is flashing, then press + or - key to select.
- Then short press "Tunes Set" key to enter the "Ringtone" flashing, press + or - key to select.
- Lastly, short press "Tunes Set" key or wait for 5 seconds to confirm the ringtone and return to time display.
- If you want to check Volume and Ringtone, please short press "Tunes Set", Volume and Ringtone will be displayed 5 seconds.
- There are 8 ringtones. Including Beep, Birdsong, Rooster Crowing, Bonfire, Canon Piano, Alice Piano, Piano Information, Telephone Ringtone.

9. Snooze / Light Setting

- In clock mode, short press "Snooze / Light Setting" Button to adjusts the brightness of display screen in 4 Levels: Brightest, Medium Bright, Slightly Bright, Dark.
- During alarm, press button except "Snooze / Light Setting" will turn off the alarm for the day.
- When the alarm goes off and the "Snooze / Light Setting" Button is pressed, the indicator light on the clock alarm will flash. The alarm will temporarily stop until 9 minutes.
- The Snooze function is set to a maximum of 3 times, after which the alarm for the day will be turned off. If the "Snooze / Light Setting" button is not pressed, the alarm will turn off for the day after 30 minutes of ringing.

10.Up Key

- In clock mode, The time separator does not flash by default. Long press the "UP" button for 1.5 seconds to switch to flashing.
- In setup mode, cooperate with modifying parameters.

11.Down Key

In setup mode, cooperate with modifying parameters.

12.Alarm Clock 2 Setting

- Long press "Alarm Clock 2 Set" key for 1.5 seconds to enter the alarm clock 2 setting and the "hour" is flashing, then press + or - key to select.

- Then short press "Alarm Clock 2 Set" key to enter the "minute" flashing, press + or - key to select.
- Lastly, short press "Alarm Clock 2 Set" key or wait for 5 seconds to confirm the alarm and return to time display.
- If you want to check alarm clock 2, please short press "Alarm Clock 2 Set", Alarm Clock 2 time will be displayed 3 seconds.

13.Alarm Clock 2 Switch

- Turn the alarm 2 switch to "ON", alarm 2 will turn on, and the indicator light for alarm 2 will turn on.
- Turn the alarm 2 switch to "OFF", alarm 2 will turn off, and the indicator light for alarm 2 will turn off.

14. Power off time memory protect function

- If the product battery is out of power, the battery indicator light will flash.
- If product still doesn't charge, product will automatically shut down.
- Time memory protection function activated.

Customer after-sale service

Thank you for your purchase.  
The product comes with a 12-month warranty period.  
If you have any issues about the product,  
please feel free to contact us at any time.  
Our email is: shenzhenchouyang@outlook.com

#### FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. During the operation of device a distance 15cm surrounding the device and 20cm above the top surface of the device must be respected.