

# Insert Paper

<b>Product Name</b>	FINTIN V1
<b>Manufacturer</b>	ONECOM Co., Ltd. KOREA.
<b>Battery</b>	Rated: 3.75v, 650mAh (Lithium-ion)
<b>Charge</b>	5V 1A (Up to 80% charge, full charge time 2 hours)
<b>Size</b>	115 x 61 x 15mm
<b>Weight</b>	90g(TBD)
<b>Connecting</b>	Wireless: Bluetooth 5.0 BLE , Cable: USB Type-C
<b>Components</b>	FINTIN V1, USB-C Charging cable, Quick Manual

FCC Rule. 'This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: 1. This device may not cause interference. 2. This device must accept any interference, including interference that may cause undesired operation of the device.

Ce dispositif contient un ou plusieurs émetteurs/récepteurs exempts de licence qui sont conformes au ou aux RSS exempts de licence d'Innovation, Science et Développement économique Canada. L'exploitation est soumise aux deux conditions suivantes : 1. Ce dispositif peut ne pas causer d'interférences. 2. Ce dispositif doit accepter toute interférence, y compris toute interférence pouvant causer un fonctionnement indésirable du dispositif.

 **ONECOM Co., Ltd.**

 R-C-OCX-FT24V1  
KTL-BD-1234-2024



Contains Transmitter Module  
FCC ID : OCX-FT24V1  
IC ID : OC602-FT24V1



Li-ion

## Warranty information

This warranty certificate guarantees that "if a problem occurs with the product, it is warranted for 1 year from the point of purchase." If you suspect a product defect within 1 week after purchase, please contact the place of purchase. Issues occurring after the initial 1-week defect handling period will be addressed through an appropriate process.

1. To receive a warranty, consumers must present proof of purchase (including date of purchase and seller information). The warranty is not valid if the proof does not match this product.
2. This warranty is valid only for FINTIN V1 distributed and sold through ONECOM Co., Ltd.
3. This warranty applies only to the product and does not cover any direct or indirect damages incurred during use.
4. Free A/S service is provided for 1 year after purchase. However, repairs/exchanges due to consumer fault within the warranty period or issues occurring after the free service period are chargeable.
5. Charging cables and keycaps of the product are consumables and are not covered by this warranty.
6. The manufacturer (importer) and dealer do not provide free or paid A/S for:
  - Products imported directly from overseas or parallel imports other than those imported by official importers
  - Issues caused by unpredictable accidents like earthquakes, floods, etc.
  - Cases where users violated 'Usage Precautions' or used/stored products improperly.

# Pickup Paper

뒷면

## ■ FINTIN V1 NFC Guide

(When the back of the Fintin V1 touches the back of the phone)



### Android Phone

Bluetooth pairing available.  
(Need to check the NFC  
TAG location on the used  
phone)



### iPhone

You can access the  
FINTIN V1 Support  
page.(NFC pairing is not  
supported natively on iOS.)

점자내용:  
매뉴얼 접속.  
(우측QR코드) or (아래주소)

※ QR코드의  
사방SIDE 형압처리

## Fintin User Manual



<https://fintin.co.kr/support>


점자내용:  
<https://fintin.co.kr/support>

앞면(제품 닿는면)



# FINTIN V1

QUICK MANUAL

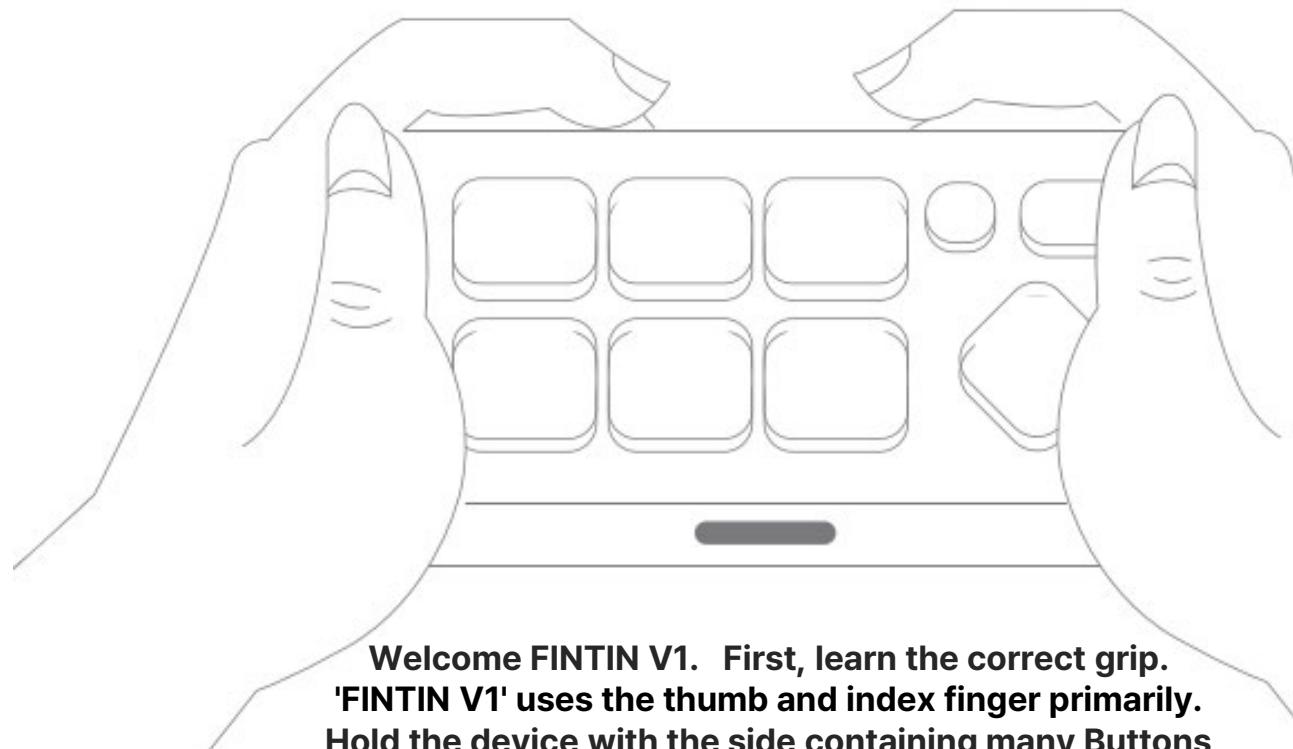

Welcome FINTIN V1. First, learn the correct grip.  
'FINTIN V1' uses the thumb and index finger primarily.  
Hold the device with the side containing many Buttons  
facing upward and the charging port toward your body.

FULL MANUAL  
PDF | MOVIE(AUDIO)



<https://fintin.co.kr/support>

표지

1

2

3

4

5

## ① Button Guide

Top Side


Front Side

Left Side

Bottom Side


Right Side

Back Side

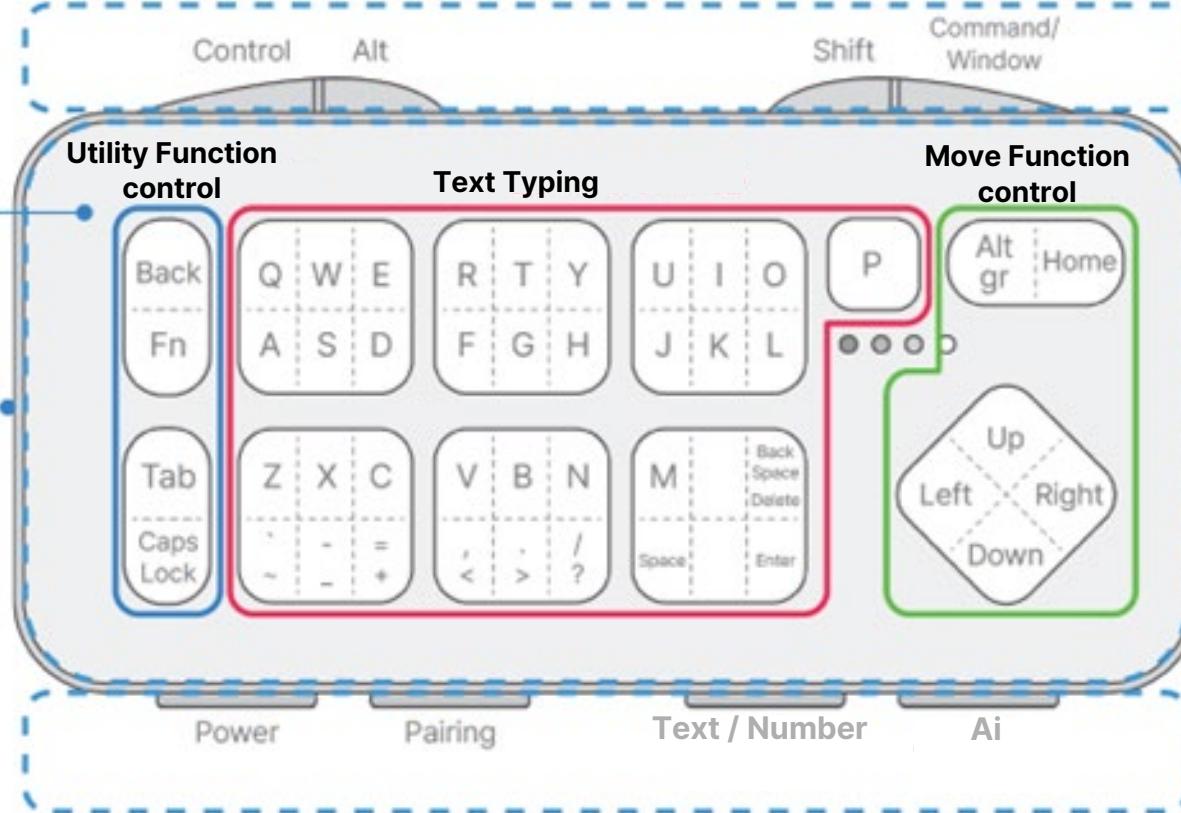

표지
1
2
3
4
5

## ② Bottom-Side Button

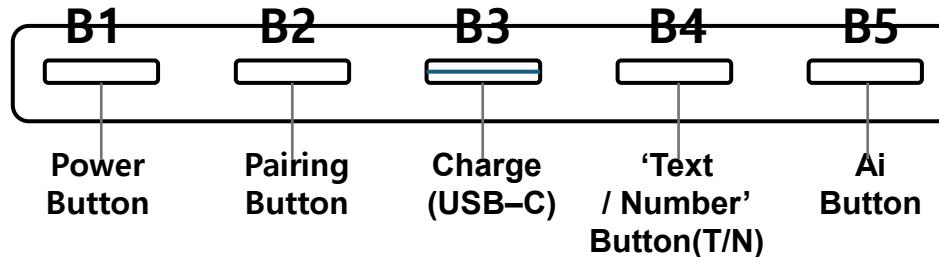

### B1

- **Power ON/OFF**  
= Long Press(3sec)
- **Sleep/Wakeup**  
= Click x 2
- **Battery Check**  
= Click x 1

\* Please refer to page  
③

### B2

- **Pairing Connect**  
= Long Press(3sec)
- **Pairing Status Check**  
= Click x 1
- **Multi Pairing**  
= 1~4CH Connectable

\* Please refer to page  
④

### B4

- **Text / Number(T/N)**
  - **Check** = Click x 1
  - **Change** = Click x 2

\* Please refer to page⑦,⑧

- **OS(iOS / Android)**
  - **Check** = Fn + Click x 1
  - **Change** = Fn + Click x 2

\* Please refer to page⑨,⑩

### B5

- **Ai ON/OFF** = Click x 1
  - **iOS** : Siri
  - **Android** : Google Assistant
  - (Later) **Windows** : Copilot

## ③ Power Button



## 1. Power ON/OFF = Long Press(3sec)

	LED Signal	Vibration
Power ON	0 1 2 3 For 2sec	Long x 1
Power OFF	0 1 2 3	Long x 3

## 2. Sleep / Wake up = Click x 2

	LED Signal	Vibration
Sleep	0 1 2 3	Long x 2
Wake up	0 1 2 3 For 2sec	Long x 1

## 3. Battery Check = 'Click x 1' or 'Charging'

LED Signal	Vibration	Status
0 1 2 3 For 1sec	Short x 3	High
0 1 2 3 For 1sec	Short X 2	Middle
0 1 2 3 For 1sec	Short x 1	Low
0 1 2 3 Every 3min	Short x 2 (Every 3min)	Discharge Warning

\* 'Discharge warning' starts automatically

## ④ Pairing Button(Bluetooth)



### 1. Pairing Connect


(1) Prepare for a new connection:  
Pairing Reset = Long Press(3sec)

(2) Go to the smartphone setting and proceed with the Bluetooth connection.

 **If there is a device that was connected before, it will connect automatically**

### 2. Multi Pairing (Connectable up to 4 devices)

(1) Channel Select = B2 + Arrow Button( $\leftarrow, \uparrow, \rightarrow, \downarrow$ )

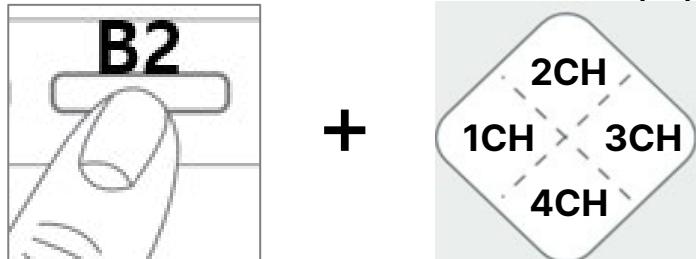

(2) Run No.1.(Pairing Connect)


### 3. Pairing Status Check(LED & Vibration) = Click x 1

#### \* LED & Vibration for Pairing Issue

##### ·Connecting Sign

- Connected (Solid blue circle)
- Disconnect (Dashed blue circle)

##### ·Channel & Connecting Sign

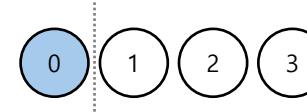

- Connected (Solid red circle)
- Disconnect (Dashed red circle)

LED Signal	Vibration	Status
0 (Solid blue) 1 (Dashed red) 2 (Solid black) 3 (Solid black)	Short x 1	1Ch. Connected
0 (Dashed blue) 1 (Dashed red) 2 (Solid black) 3 (Solid black)	Short x 1 & Long x 2	1Ch. Disconnect
0 (Solid blue) 1 (Solid black) 2 (Solid black) 3 (Dashed red)	Short x 3	3Ch. Connected

\* Please refer to "<https://fintin.co.kr/support>"

## ⑤ F A Q

**Q1:** 'The shortcut key does not work' or 'Entered text but numbers are inputted(including opposite symptoms)' or 'When the symptom of no response when pressing the button' occurs.

**A1:**

① **This could be a 'pairing issue'.** → First, check the status of the pairing connection, and if there are issues with the connection, proceed with re-pairing.(Please refer to page ④)

② **This could be a 'OS mismatch'(Phone vs FINTIN V1).**

→ First, check OS settings, and if the OS is mismatched, proceed with OS reconfiguration.(Please refer to page ⑨,⑩).

If the OS settings of your phone and FINTIN V1 are different, the following buttons may not function properly.

- Text/Number Key Map - 'ESC(Back function)', 'HOME move', 'AI Call function'

- Fn Key Map - 'Screen Reader', 'Keyboard Hide', 'Screen Lock', 'Magic Tab', 'Screen Curtain', 'Pause/Play'

③ **This could be a 'T/N Mode Setting issue'.**

→ First, check the current 'T/N Mode,' and then proceed to set the desired 'T/N Mode.(Please refer to page ⑦,⑧)

④ **Reset:** If unresolved even after proceeding with steps ① to ③. → It is recommended to proceed with the 'rebooting' by long pressing (3 sec) both the 'B1' Button and 'B2' Button together."

**Q2:** If the buttons like 'W', 'T', 'I' that need to be pressed simultaneously at the 'top center' or 'bottom center' are not being inputted well.


**A2:** Press the center of each button as if pressing the left and right corners at the same time. (Please refer to page ⑥)

**Q3:** If you want to do a 'factory reset'. **A3:** You can perform a 'factory reset' by long-pressing the 'B4' and 'B5' buttons for 3 seconds.

\* If you have any 'other inquiries' while using the product, please send them by E-mail. contact@onecommu.com

6
7
8
9
10
11

## ⑥ Button Press Point

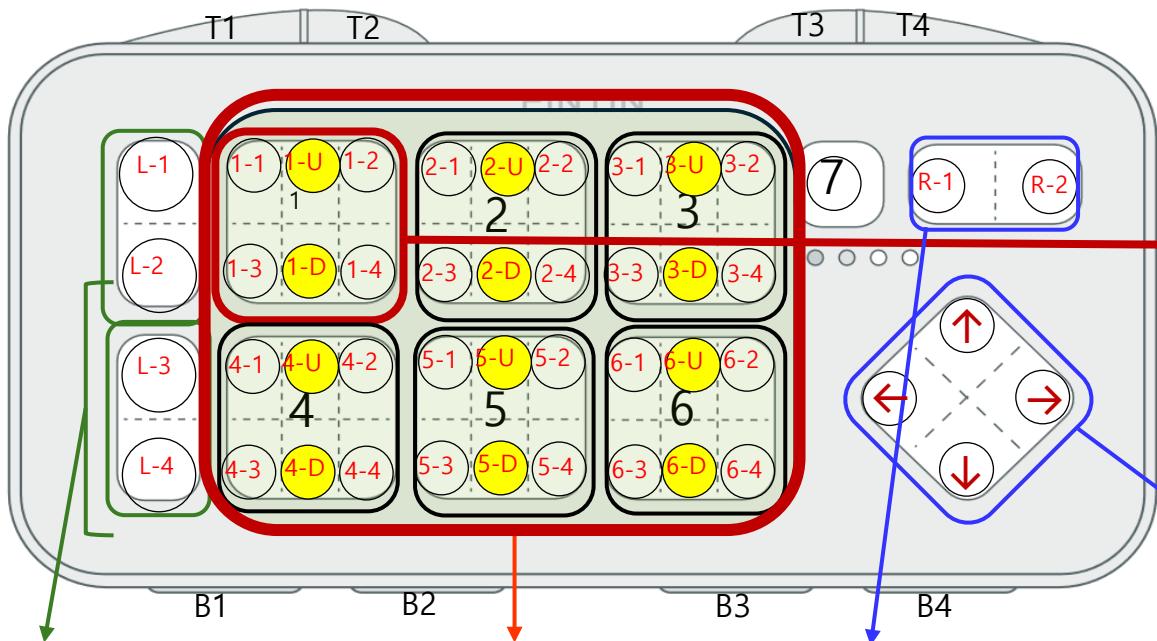

Each of the two left Buttons has two press points, one up and two down

Each Text Button from 1 to 6 has six press points.

There are a total of 2 press points on the left/right for one Right Button.

One Arrow Button has a Total of 4 press points: up, down, left, and right

Yellow push points refer to pressing the 'top center' or 'bottom center' of each Button.


1-U = Top center

1-D = Bottom center

(e.g. 1.Button)

6  
7  
8  
9  
10  
11

## ⑦ 'Text' Mode Key Map

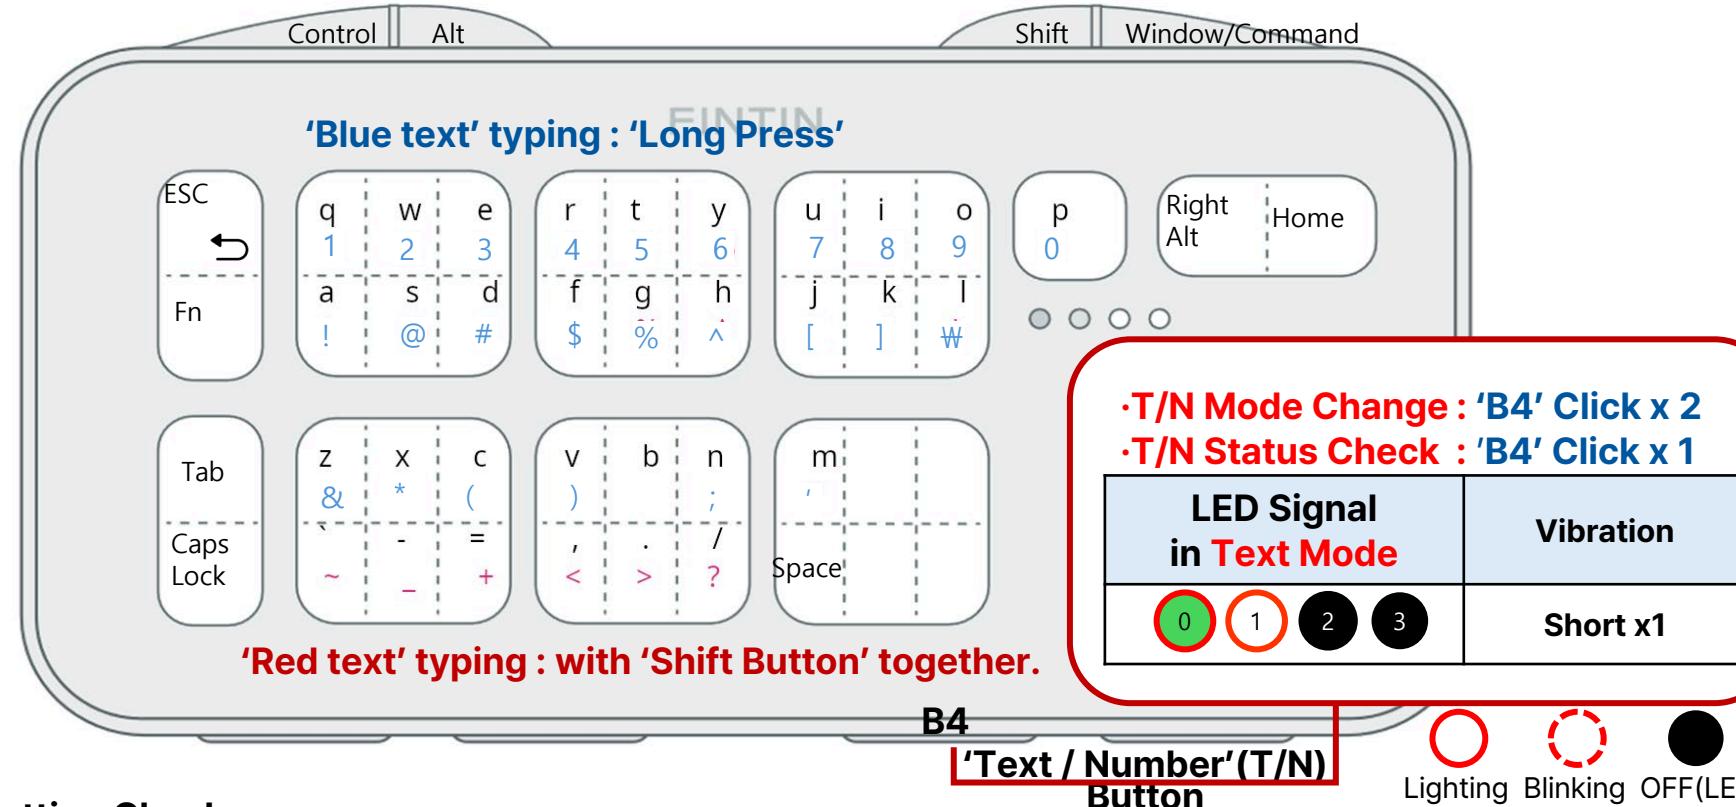


### \* OS Setting Check

There is a Button that does not work properly, if the OS of 'Phone' and 'FINTIN V1' are not the same.

(e.g.)Text / Number Mode: 'ESC', 'HOME', 'AI'. → Take Action: OS Setting & Change (Please refer to page ⑨, ⑩)

6
7
8
9
10
11

## ⑧ 'Number' Mode Key Map

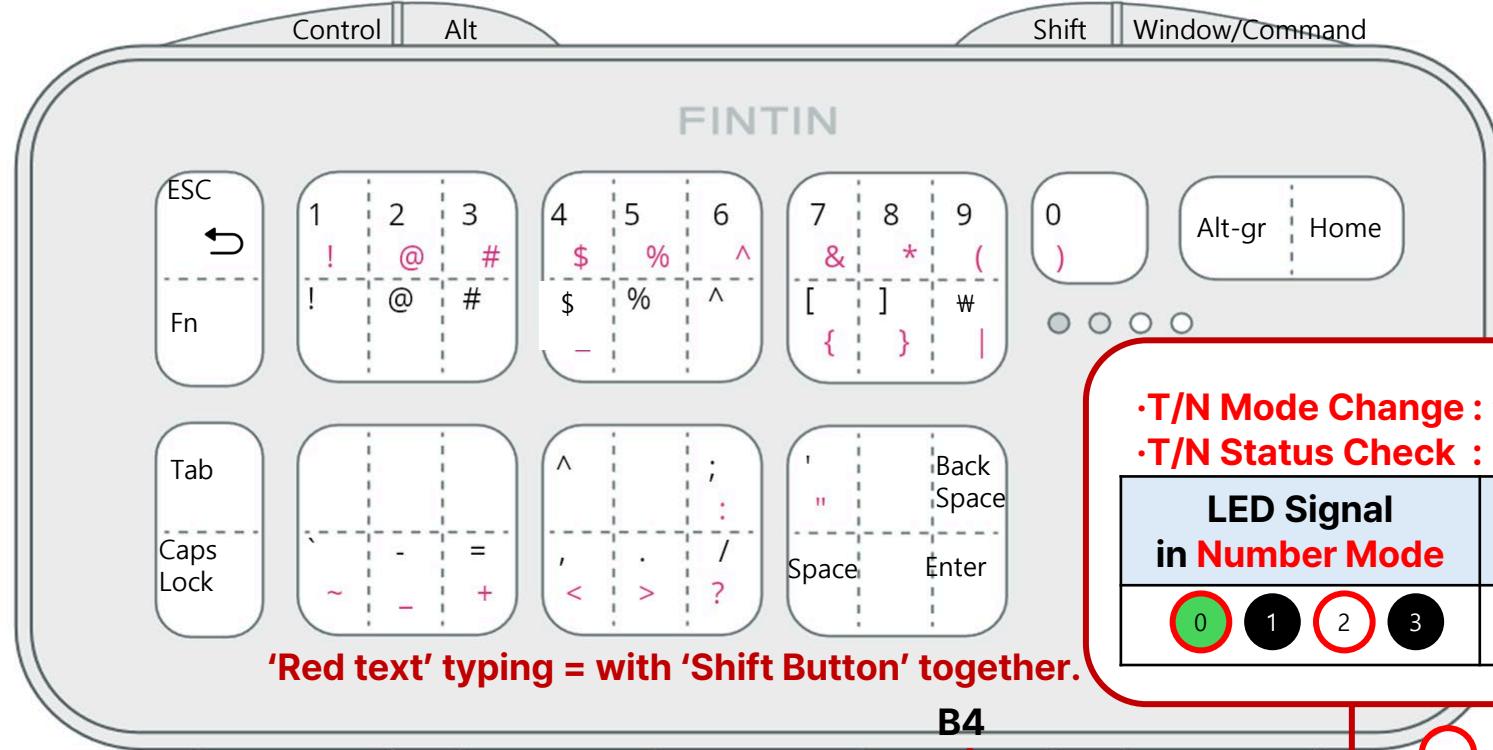

- T/N Mode Change : 'B4' Click x 2
- T/N Status Check : 'B4' Click x 1


### \* OS Setting Check

There is a Button that does not work properly, if the OS of 'Phone' and 'FINTIN V1' are not the same.

(e.g.)Text / Number Mode: 'ESC', 'HOME', 'AI'. →Take Action: OS Setting & Change (Please refer to page⑨,⑩)

6
7
8
9
10
11

## ⑤ With 'Fn' Button, Key Map(iOS)

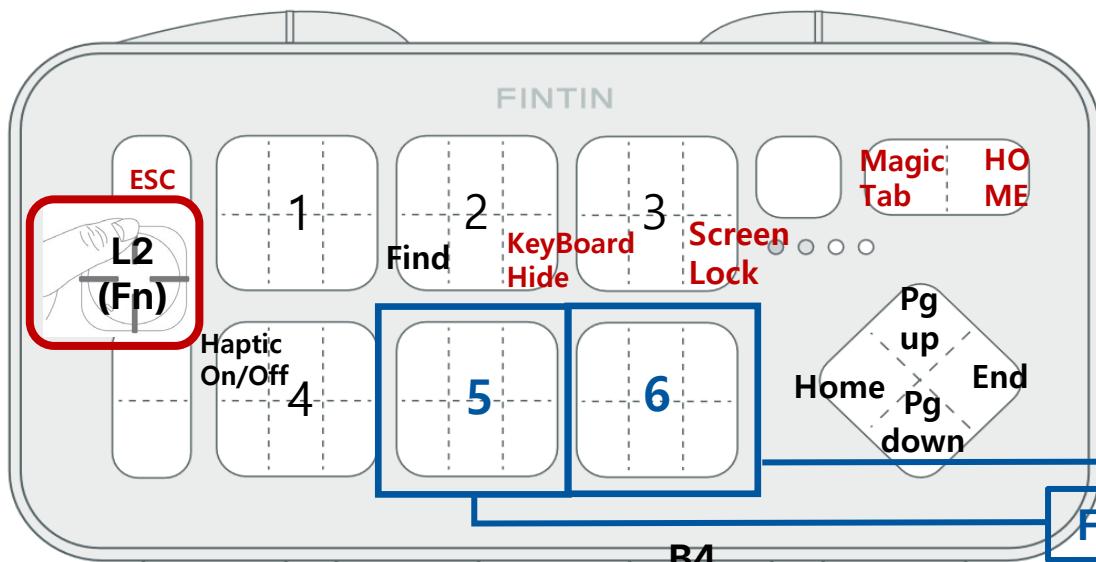

1. OS Change : Fn + 'B4' Click x 2  
 2. OS Status Check : Fn + 'B4' Click x 1

LED Signal in iOS Mode	Vibration
0 (Green) 1 (Red) 2 (Black) 3 (Black)	Short x 2

Lighting      Blinking      OFF(LED)

Fn + No.5 Button

Screen  
Curtain  
(5-1)

Bright -  
(5-3)

For Screen

Fn + No.6 Button

Screen  
Capture  
(5-2)

Bright +  
(5-4)

Prev Media (6-1)      Pause /Play (6-up)      Next Media (6-2)

Vol - (6-3)      Mute (6-dn)      Vol + (6-4)

For Media

### \* OS Setting Check


There is a "Red Button" that does not work properly, if the OS of 'Phone' and 'FINTIN V1' are not the same.

→ Take Action:

OS Setting & Change(iOS)

6
7
8
9
10
11

## ⑩ With 'Fn' Button, Key Map(Android)

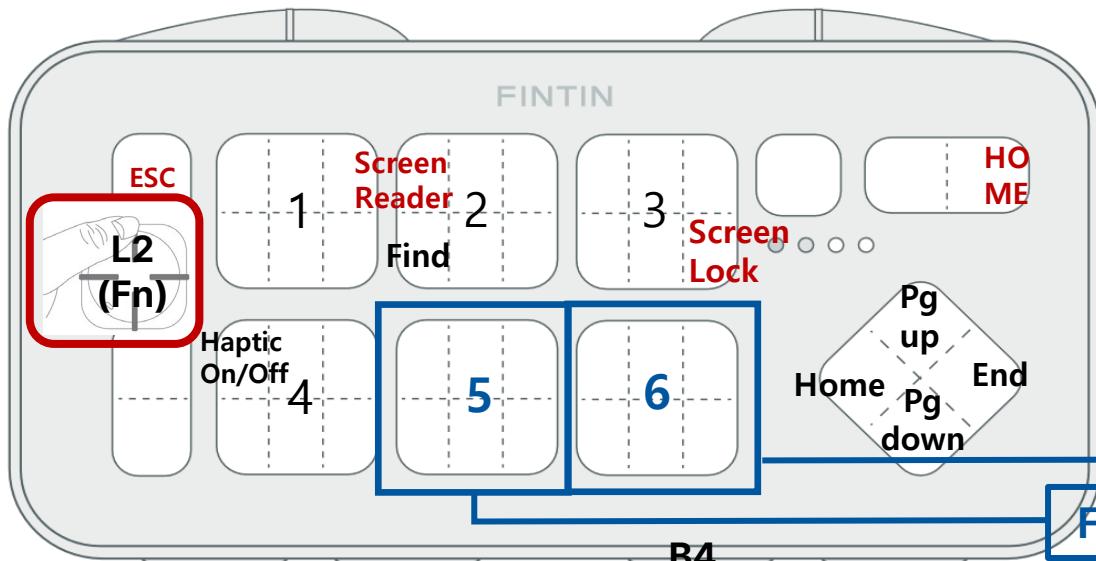

1. OS Change : Fn + 'B4' Click x 2  
 2. OS Status Check : Fn + 'B4' Click x 1


LED Signal in Android Mode	Vibration
0 (Green) 1 (Black) 2 (Red) 3 (Black)	Short x 4

Lighting      Blinking      OFF(LED)

Fn + No.5 Button



Fn + No.6 Button

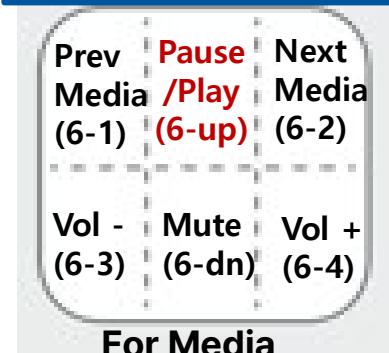

### \* OS Setting Check

There is a "Red Button" that does not work properly, if the OS of 'Phone' and 'FINTIN V1' are not the same.

→ Take Action:

OS Setting & Change([Android](#))

6

7

8

9

10

11

## ⑪ Safety and Precautions for Use

### - Charging and storage

For our products with built-in batteries, using a charger that exceeds the specified rated voltage capacity and a charger that lacks official fast charging certification during charging can damage the battery and circuit board, potentially causing a fire. Additionally, if the discharge time increases, battery performance can deteriorate. Avoid prolonged exposure to direct sunlight and store in a cool place. Please charge and store in a safe environment.

### - Caution for long-term use

Long-term use of the product can put a significant strain on your hands, arms, neck, shoulders, waist, etc. If you experience discomfort, fatigue, pain, or muscle stiffness, please stop using it immediately and avoid using the product for extended periods. Also, take appropriate breaks regularly during use.

### - About Product Handling

Please exercise caution when using this product, as it may fall and malfunction. This product is a precision device containing an electric circuit and a transformer. It is important to prevent drinks, liquids, or any foreign substances from entering the interior. And abnormal use, such as twisting or bending the product, is strictly prohibited.

### - Do not disassemble

Please do not arbitrarily disassemble, repair, or modify the product. There is a risk of cuts to the hands or electric shock, and it can cause issues with key input. Even within the warranty period, costs may be incurred for repairs and exchanges due to user fault. If the user directly disassembles & assembles or arbitrarily modifies the product, you cannot receive A/S related services provided by the manufacturer/distributor regardless of the warranty period.

FCC Rule. 'This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

*Ce dispositif contient un ou plusieurs émetteurs/récepteurs exempts de licence qui sont conformes au ou aux RSS exempts de licence d'Innovation, Science et Développement économique Canada. L'exploitation est soumise aux deux conditions suivantes :*

1. *Ce dispositif peut ne pas causer d'interférences.*
2. *Ce dispositif doit accepter toute interférence, y compris toute interférence pouvant causer un fonctionnement indésirable du dispositif.*