

TOWER CRANE

ASSEMBLY

ITEM NO.: Z6816A
**QUICK
START
GUIDE**

KIDS DIY

6+

**CAUTION: ELECTRICALLY
OPERATED PRODUCT -**
Not recommended for children under 6 years of age as
with all electric product precautions should be observed
during handling and use to prevent electronic shock

BATTERY INSTALLATION ON CONTROLLER

1. Switch to "OFF"
2. Unscrew the battery cover with philips screwdriver.
3. Insert 2 AA batteries with polarities shown in battery compartment.
4. Close the battery cover and screw it.

BATTERY INSTALLATION ON TOWER CRANE

1. Switch to "OFF"
2. Unscrew the battery cover with philips screwdriver.
3. Connect the cable and place the battery to the battery box.
4. Close the battery cover and screw it.

TURNS ON!

HOW DOES IT WORK?

A: advance
 B: backward
 C: rise
 D: decline
 E: right rotation
 F: left rotation

REMOTE CONTROL INFORMATION:

- Frequency: 2.4G
- 8 channels
- Remote control distance: 30-40M
- 2x AA type batteries (not included)

3.7V LITHIUM BATTERY INFORMATION:

- Battery life: 15-20min
- Battery Capacity: 500mah
- Battery charging time: 90-120min
- Charging current and voltage: 3.7V, 500mAh

USB CHARGING CABLE INFORMATION:

- Plug in a standard USB power supply

DEMO PLAY

Demonstrate all features of the CRANE TOWER

BATTERY PERFORMANCE NOTE

For best performance, use alkaline batteries. Battery life will vary according to brand.

BATTERY SAFETY INFORMATION

1. Don't mix old and new batteries. Always replace all batteries at the same time.
2. Don't mix batteries of different types (Alkaline, standard batteries or rechargeable batteries).
3. Insert the "AA" batteries with their polarity (+/-) as shown inside the battery compartment.
4. Don't short-circuit terminals.
5. Don't recharge non-rechargeable batteries. Rechargeable batteries may only be charged under the supervision of an adult.
6. Remove all batteries if vehicle will not be used for a long period of time.
7. Dispose of batteries safely. Don't dispose of batteries in fire as they may explode.
8. Exhausted batteries are to be removed from the toy.
9. Keep these instructions for future reference: they contain important information.
10. Packaging has to be kept since it contains important information.
11. Rechargeable batteries are to be removed from the toy before being charged.

CARE AND MAINTENANCE

1. Always remove batteries from the toy when it is not being used for a long period of time.
2. Wipe the toy gently with a clean damp cloth.
3. Keep the toy away from direct sunlight and/or direct heat.
4. Do not submerge the toy into water that can damage the electronic assemblies.

CONTENTS:

- Tower crane and container
- Remote controller
- 3.7V rechargeable Lithium battery
- USB charging cable

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.