

# Remote control operation instructions

## Model: RCS32A

### IMPORTANT SAFETY INFORMATION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

#### IC warning

 
This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF. Le dispositif peut être utilisé dans des conditions d'exposition portatives sans restriction.

## Remote Handset

	BUTTON	FUNCTION	ACTION & INDICATION
 <p><b>SÓLAS</b></p>	 <b>STAND-BY</b>	To turn on memorized flame, down light and fuel bed, or turn off all functions at the same time.	After power is on, press to turn on memorized crackling, flame, down light and fuel bed, or turn off all functions at the same time.
	 <b>FLAME</b>	To cycle through 9 flame effects and off setting.	Press to cycle through 9 flame effects and off setting. After pressing "FLAME", press "+" or "-" to adjust the flame brightness.
	 <b>FUEL/EMBER BED</b>	To cycle through 9 fuel bed effects and off setting.	Press to cycle through 9 fuel bed effects and off setting, and the remote screen will display Fb.1, Fb.2,...Fb.9, Fb.0 accordingly. After pressing "FUEL BED", press "+" or "-" to adjust the fuel bed brightness.
	 <b>HEATER</b>	To cycle through heating LOW/HIGH/OFF. To switch between °C and °F.	Press to cycle through heating LOW/HIGH/OFF. While operated by the remote, the heater will work when the setting temperature is higher than the room temperature. Long press 3 seconds to switch between °C and °F.
	 <b>CRACKLING</b>	To turn on or turn off the crackling sound.	Press to turn on or turn off crackling sound. When the flame is on, after pressing "CRACKLING", press "+" or "-" to adjust the sound volume.
	 <b>DOWN LIGHT</b>	To cycle through 9 down light effects and off setting.	Press to cycle through 9 down light effects and off setting, and the remote screen will display dL.1, dL.2,...dL.9,dL.0 accordingly. After pressing "DOWN LIGHT", press "+" or "-" to adjust the brightness of down light.
	 <b>TIMER</b>	To set the timer from 0.5H to 9.0H.	When the timer function is off, press to set the timer from 0.5H, 1.0H, 2.0H, 3.0H, 4.0H, 5.0H, 6.0H, 7.0H, 8.0H, 9.0H, OFF. When the timer function is on, press once to check the remaining time, press again to check the next level of the timer, press "+" or "-" to set the timer.
	 <b>MY FAVORITE FLAME</b>	To set your favorite effect.	Long press 3 seconds to memorize the current flame, down light, fuel bed, and crackling effect. Short press to enter or cancel the memorize state.
		To set the brightness of flame, down light or fuel bed or adjust the volume of crackling sound.	Different levels of brightness of flame, down light and fuel bed, or volume of crackling sound can be set when corresponding icon shows on the remote screen.