

## FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Specific Absorption Rate (SAR) information:**  
This Mini smartphone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

**FCC/ISED RF Exposure Information and Statement**  
The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: 19Pr7(FCC ID:25C48-19P0E01A) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is **0.22 W/kg** and when properly worn on the body is **0.27 W/kg**. This device was tested for typical body-worn operations with the back of the handset kept 5 mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters, and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

**Body-worn Operation**  
This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 5mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 10

The device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage.
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

**RF Exposure Statement:**  
The device is compliance with RF exposure guidelines, users can obtain Canadian Information on RF exposure and compliance. The minimum distance from body to use the device is 0 cm.

Le présent appareil est conforme Après examen de ce matériel aux conformité ou aux limites d'intensité de champ RF, les utilisateurs peuvent sur l'exposition aux radiofréquences et compliance d'acquies les informations correspondantes. La distance minimale du corps à utiliser le dispositif est de 0 cm.

Renseignements et déclaration sur l'exposition aux RF de la FCC/ISED  
La limite DAS des États-Unis (FCC) est de 1.6 W/kg en moyenne sur un gramme de tissu. Types d'appareils: 19Pr7(FCC ID:25C48-19P0E01A) a également été testé par rapport à cette limite DAS. La valeur DAS la plus élevée signalée dans le cadre de cette norme lors de la certification du produit pour une utilisation au niveau de l'oreille est de 0.599 W/kg et lorsqu'il est correctement porté sur le corps, elle est de 0.731 W/kg. Cet appareil a été testé pour des opérations typiques portées sur le corps, l'arrière du combiné étant maintenu à 0 mm du corps. Pour maintenir la conformité à l'exposition RF de la FCC, utilisez des accessoires qui maintiennent une distance de séparation de 5 mm entre le corps de l'utilisateur et l'arrière du combiné. L'utilisation d'attaches de ceinture, d'étuis et d'accessoires similaires ne doit pas contenir de composants métalliques dans son assemblage. L'utilisation d'accessoires qui ne répondent pas à ces exigences pourrait ne pas être conforme aux exigences d'exposition RF de la FCC et devrait être évitée.

Opération corporelle  
Cet appareil a été testé pour des opérations typiques portées sur le corps. Pour se conformer aux exigences d'exposition aux RF, une distance de séparation minimale de 5 mm doit être maintenue entre le corps de l'utilisateur et le combiné, y compris l'antenne. Les clips de ceinture, étuis et accessoires similaires de tiers utilisés par cet appareil ne doivent contenir aucun composant métallique. Les accessoires portés sur le corps qui ne répondent pas à ces exigences peuvent ne pas être conformes aux exigences d'exposition aux RF et doivent être évités. Utilisez seulement l'antenne fournie ou une antenne approuvée.

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 10

## Mini smartphone instruction manual

Thank you for choosing this mini smartphone. This mobile phone is a smart phone based on Android operating system. It has stylish design and high-end manufacturing technology.

interface is simple and easy to use, so that you can fully enjoy the comfortable experience. It is forbidden to use any tool root this phone, otherwise there may be unrecoverable faults, and the root phone does not enjoy the warranty!

In order to use this phone safely and effectively, please read the instruction manual carefully before use.

## Introduction to this manual

This manual describes concise information about how to use your mobile phone. If you want to quickly grasp the basic practical methods of this mobile phone, please Refer to "Understanding the phone".

## Safety Precautions

Safe boot

**Do not use your mobile phone when it is forbidden to use your mobile phone or if it may cause interference or danger.**

Traffic safety first

**Do not use your mobile phone while driving, so as not to interfere with safe driving.**

**Shut down in restricted areas.**

**Please comply with the relevant restrictions or regulations. Shut down on airplanes or near flammable materials, chemicals or medical equipment.**

Interference

**Mobile communications can be subject to radio interference, which can affect performance.**

Waterproof

**This phone is not waterproof, please keep it dry.**

Specialized service

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 10

## Mini smartphone instruction manual

Do not disassemble the phone and accessories. Only authorized organizations can repair the phone.

Install SIM or USIM card and battery

When you order a mobile phone service, you will receive a Subscriber Identity Module (SIM) card with your order details, such as a Personal Identification Number (PIN) and optional services. To use the 3G (WCDMA) service, you can purchase a Universal Subscriber Identity Module (USIM) card. Install the SIM card or USIM card as follows,

1. On the right side of the phone, find the card slot of the SIM card.

2. There is a corresponding SIM card and memory card card insertion method on the card slot, please insert the card according to the pattern shown,

If you do not have a SIM or USIM card inserted, you can only use your phone's non-network services and some of the menus.

Do not insert the memory card into the SIM card slot.

## Charging the battery

Safe boot

**Do not use your mobile phone when it is forbidden to use your mobile phone or if it may cause interference or danger.**

Traffic safety first

**Do not use your mobile phone while driving, so as not to interfere with safe driving.**

**Shut down in restricted areas.**

**Please comply with the relevant restrictions or regulations. Shut down on airplanes or near flammable materials, chemicals or medical equipment.**

Interference

**Mobile communications can be subject to radio interference, which can affect performance.**

Waterproof

**This phone is not waterproof, please keep it dry.**

Specialized service

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 10

## Mini smartphone instruction manual

1. Plug the big end and plug of the travel charger into the power outlet.

✧ You can use your phone while charging, but this will extend the battery charging time;

✧ The phone will heat up when charging, this phenomenon is normal and will not affect the life or performance of the phone.

2. When the battery is fully charged, disconnect the travel charger from the phone and unplug it from the power outlet.

## Charging with computer data cable

Make sure your computer is turned on before charging.

1. Plug one end of the computer data cable (micro USB) into the multi-function jack.

2. Connect the other end of the computer data cable to the computer's USB port. Depending on the type of computer data cable used, it may take a while to start charging.

3. When the battery is fully charged, disconnect the computer data cable from the phone and unplug it from the computer.

## Format SD card storage

In the main menu, select Settings → Storage → Store Information → Format SD Storage.

Before formatting the SD card storage, remember to back up all the important data stored on your phone. The manufacturer warranty service does not include data loss due to user actions.

Power on and off

To boot, press and hold [Power On/Off] the phone will turn on.

In areas where wireless devices are prohibited (such as airplanes and hospitals), please follow all posted warnings and instructions from official staff.

To use only your phone's non-network service, switch to

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 10

## Mini smartphone instruction manual

airplane mode. Pull down the main interface and select the icon in the upper right corner to have flight mode.

touch screen

Use your phone's touch screen to make it easier to select items or perform functions.

Learn the basics of using a touch screen:

✧ To avoid scratching the touch screen, do not use sharp tools.

✧ Do not allow the touch screen to touch other electronic devices. Electrostatic discharge may cause the touch screen to malfunction.

✧ Do not let the touch screen touch the water. The touch screen may malfunction in a humid environment or when exposed to water.

✧ In order to achieve the best results, please remove the touch screen protective film before using the phone.

✧ The touch screen has a protective layer that reveals tiny charges from the body. For the best performance, tap the touch screen with your fingertips. The touch screen does not react to the touch of a sharp tool, such as a stylus or pen.

The following operations can be performed to control the touch screen.

✧ Click: Click once with your finger to select or launch a menu, option, or application.

✧ Click and hold: hold down the item for more than 2 seconds to pop up a list of options.

✧ Scroll: Click and drag your finger up, down, left or right to move to the items in the list.

✧ Drag and drop: Click and hold an item with your finger, then drag your finger to move the item.

✧ Double-click: When viewing a photo, tap twice with your finger to zoom in or out.

✧ If the phone is not used for the specified length of time, the phone will turn off the touch screen. To turn

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 10

## Mini smartphone instruction manual

the touch screen back on, press [Power On/Off].

✧ The backlight time can also be adjusted. In standby mode, then select Settings → Display → Sleep → Sleep time

Lock or unlock the touch screen and buttons. The touch screen and buttons can be locked to prevent any accidental phone operation.

To lock, press [Switch button]. To unlock, press [Power On/Off] and follow the on-screen prompts to manually unlock.

## Select wallpaper source

You can set the wallpaper to customize the standby screen or lock screen interface (the wallpaper can customize the pictures in the album).

✧ Lock screen wallpaper: set lock screen interface image.

✧ Desktop wallpaper: set desktop wallpaper.

✧ Live Wallpaper: You can set live wallpaper.

✧ Video Wallpaper: set background video.

## Move items on the idle screen

Click and hold the item you want to move.

✧ Drag the project to the desired location after the project vibrates.

✧ Remove item from standby screen: Click and hold the item you want to remove, the item vibrates and X delete appears in the top left corner of the item.

✧ Click on X to delete the item

## Use the shortcut panel

When in standby mode or while using the app, touch the indicator icon area at the top of the screen and drag your finger down. Open the shortcuts panel. You can activate or deactivate other features such as wireless connections and access a list of notifications, such as messages, calls, events, or processing status. To hide the list, drag the bottom border of the list up.

Swipe the shortcut icon left and right in the shortcuts panel

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 10

## Mini smartphone instruction manual

to use the following options:

Wi-Fi: Turn Wi-Fi connection on or off. Long click this icon to enter the Wi-Fi settings interface.

✧ Data connection: start or close the data connection.

✧ Bluetooth: Turns Bluetooth wireless connection on or off.

✧ Airplane mode: Activate or deactivate flight mode.

✧ Scene mode: standard, mute, switch between conference and outdoor mode.

✧ One-click cleanup: Click to end the background application and release some memory.

✧ Brightness: Adjust the brightness of the screen.

✧ Battery: Shows device power usage.

✧ Hibernate: Adjust the delay time for the screen to automatically turn off.

✧ One-button lock screen: After clicking, the device is off screen and locked.

✧ More: You can set the shortcut function and sequence display in the shortcut panel.

## Access application

✧ If you want to access the app of your phone:

✧ Open phone lock.

✧ Scroll left or right to other application screens.

✧ Select the launcher.

✧ Press the middle button to return to the main standby screen.

✧ The phone has a built-in motion sensor that detects the direction of the phone. If you rotate your phone while using certain features, the phone interface will automatically switch to landscape mode. If you want to set the interface does not change with the rotation of the phone, Open the shortcuts panel at the top of the screen and select Auto Rotate. Alternatively, select Settings → Display → Rotate Screen → Auto or Keep

✧ Select the wallpaper of the standby screen

✧ In standby mode, press menu → wallpaper → select the type of wallpaper to be set

✧ Adjust the brightness of the display

Adjust screen brightness under the setup menu.

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 10

## Mini smartphone instruction manual

Portrait.

Widget

Click the Menu button from standby, select Add widget.

select any widget and press and drag to standby.

Custom phone

Customize your phone to your personal preferences; themes and desktop slideshow effects, etc.

✧ Set current time and date

✧ In the main menu interface, then select Settings → Date & Time.

✧ Set time and date and change other options.

✧ Turn touch tones on or off

✧ In the main menu interface, then select Settings → Sounds & Notifications → Standards → click on the right setting → select the touch tone.

✧ Adjust the ringer volume

Press the up or down volume button to adjust the ringer volume.

✧ Switch to vibration mode

To shake or de-vibrate your phone, do one of the following:

✧ Switch directly in the shortcut panel mood mode.

✧ In standby mode, press and hold [Switch button].

✧ Then select the vibration mode.

✧ Change ringtone

✧ In the main menu interface, then select Settings → Sound & Notifications → Standards → Point Right Settings → Phone Ringtone / Black Receipt Notification Tone / Message Ringtone. Select a ringtone from the list and select OK.

✧ Select the wallpaper of the standby screen

✧ In standby mode, press menu → wallpaper → select the type of wallpaper to be set

✧ Adjust the brightness of the display

Adjust screen brightness under the setup menu.

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 10

## Mini smartphone instruction manual

1. In the main menu interface, then select Settings → Display → Brightness.

2. Turn off the button on the auto-adjust brightness.

3. Drag the slider to adjust the level of brightness.

The brightness level of the display affects the speed at which the phone consumes battery power.

## Set the unlock pattern

An unlock pattern can be set to prevent others from using the phone without permission.

1. In the main menu interface, then select Settings → Security → Screen Lock → Pattern.

2. Watch the screen tips and sample patterns and choose Next (if necessary).

3. Drag your finger to connect at least four points and draw a pattern.

4. Choose to continue.

5. Redraw the pattern to confirm.

6. Select confirmation.

✧ After setting the unlock pattern, you will be asked to enter the unlock pattern each time you turn it on. If you want your phone to no longer require an unlock pattern, select Settings → Security → Screen lock → Draw the lock set pattern → None.

Note: If you select "None", the screen will not be locked.

✧ If you forget to unlock the pattern, you need to bring your phone to its customer service center to unlock it.

✧ Responsible for loss of passwords or personal data or other damage caused by the use of illegal software.

**Lock SIM card or USIM card**

The phone can be locked by activating the PIN code provided with the SIM card or USIM card.

1. In the main menu interface, then select Settings → Security → Settings SIM card lock mode → Lock SIM card.

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 10

## Mini smartphone instruction manual

2. Enter your PIN and choose OK.

✧ If you activate the PIN lock, you must enter your PIN every time you turn it on.

✧ If the PIN code is entered incorrectly three times, the SIM card or USIM card will be locked. You must enter your PIN unlocking key (PUK) to unlock your SIM card or USIM card.

If the SIM card or USIM card is locked due to incorrect PUK input, bring the card to the service provider to unlock it.

1. Learn how to use call features, such as making and receiving calls through available options during a call, or customizing and using call-related features.

2. Call records

Can view call history filtered by type.

1. In standby mode, click the dial button to enter the dialing interface and call log interface.

2. In the call log interface, you can press the call type of the call.

3. Select the record for which you want to view detailed call details.

Dialpad

Click the icon in the lower left corner of the main interface to close or pop up the dial pad to operate the contacts recorded in the call. Each time you dial a contact number, the contact automatically joins the call history page.

Function menu

Includes contacts, speed dials, setup options.

Information

Learn how to create and send text messages (SMS) or multimedia messages (MMS), as well as view and manage the messages you have sent or received. Sending or receiving information outside the local service area may incur additional charges. For more information, please consult your service

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 10

## Mini smartphone instruction manual

provider.

Music

Learn how to listen to your favorite music using the music player.

✧ Depending on the phone software, some file formats are not supported.

✧ If the file size exceeds the available storage space, an error occurs when opening the file.

## Add music

Transfer music files to your phone:

✧ Download from wireless web

✧ Copy through data line

✧ Transmission via Bluetooth

Album

Learn how to view images on your memory card and play them.

Radio

Listen to radio programs on the radio and record your favorite while listening. Before using the FM radio, be sure to connect the supplied headphones (the headphones are used as the radio antenna).

Recorder

Help you quickly save your voice recordings, you can set your favorite sound quality and recording mode.

Clock

You can set an alarm, view world time, use timers and stopwatch functions.