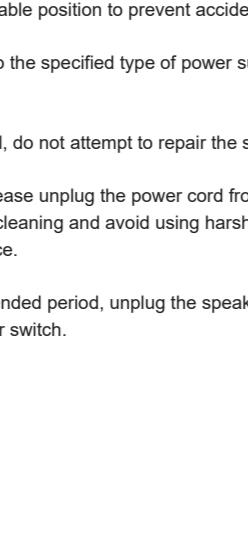
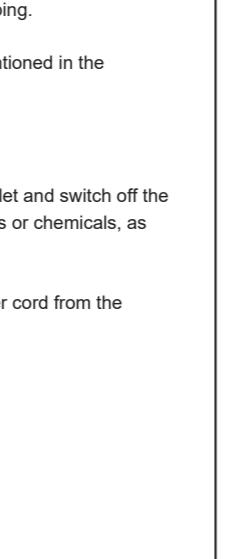
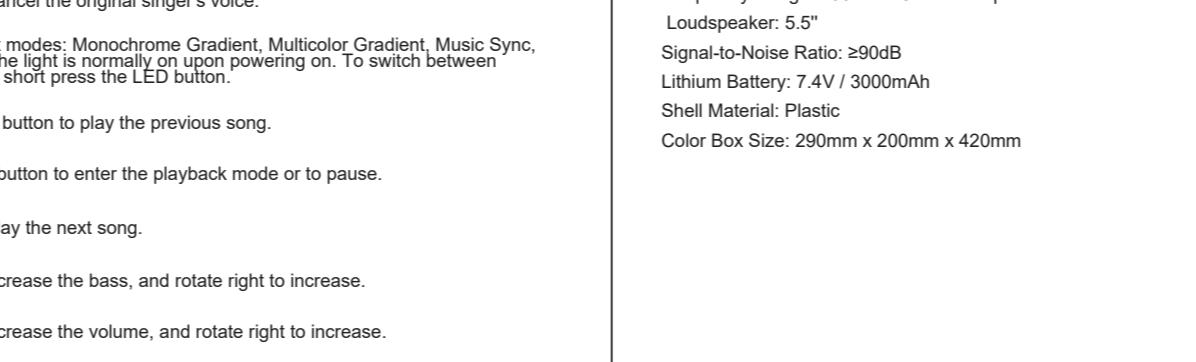


<h1 style="text-align: center;">NT-002</h1> <h2 style="text-align: center;">Karaoke Speaker</h2>						
OPERATING INSTRUCTIONS		PACKING LIST				
SPEAKER DESCRIPTION						
<p>Please carefully read all instructions before operating the karaoke machine and follow them during use.</p> <ul style="list-style-type: none"> ◆ Keep the speaker away from heat sources, such as radiators, and ensure it is not exposed to humid air or water. ◆ Place the equipment in a stable position to prevent accidental dropping. ◆ Connect the speaker only to the specified type of power supply mentioned in the operating instructions. ◆ If you are not a professional, do not attempt to repair the speaker. ◆ Before cleaning the unit, please unplug the power cord from the outlet and switch off the power. Use a soft cloth for cleaning and avoid using harsh abrasives or chemicals, as they can damage the surface. ◆ When not in use for an extended period, unplug the speaker's power cord from the outlet and turn off the power switch. 						
						
INSTRUCTION MANUAL	1	2	3			
OPERATING INSTRUCTIONS	4	5	PACKING LIST			
<p>SPEAKER DESCRIPTION</p>  <p>Schematic Diagram</p> <p>Power Switch & Charging</p> <p>1."OFF" position: Speaker is powered off. 2."ON" position: Speaker is powered on and will enter the same playback mode as last time. 3.Charging: Connect the power adapter to the Type-C socket to begin charging the built-in battery.</p> <p>Playback Modes</p> <p>1.Audio Input Function Connect the audio device to the "AUX" interface to play music from mobile phones, MP3 players, computers, and more. 2.MP3 Function TF Card/U Disk: Insert a TF card into the "TF" slot to play music from the card. Alternatively, insert a U disk into the speaker to play music from the disk.</p>						
OPERATING INSTRUCTIONS	1	2	3	4	5	PACKING LIST
OPERATING INSTRUCTIONS	1	2	3	4	5	PACKING LIST

Button Functions <p>1. MODE: Short press the MODE button to switch between different modes, including Bluetooth, TF card, U disk, AUX, OUT.</p> <p>2. Music/Orig: Short press to cancel the original singer's voice.</p> <p>3. LED: There are 4 light modes: Monochrome Gradient, Multicolor Gradient, Music Sync, and Carousal. The light is normally on upon powering on. To switch between different modes, short press the LED button.</p> <p>4. ▶◀: Short press this button to play the previous song.</p> <p>5. ▶II: Short press the button to enter the playback mode or to pause.</p> <p>6. ▶▶: Short press to play the next song.</p> <p>7. BASS: Rotate left to decrease the bass, and rotate right to increase.</p> <p>8. VOLUME-/+: Rotate left to decrease the volume, and rotate right to increase.</p>	Product Parameters <p>Model: NT-002 Power Output: RMS 4Q (20W) with HD 10% Frequency Range: 100Hz - 18kHz Loudspeaker: 5.5" Signal-to-Noise Ratio: ≥90dB Lithium Battery: 7.4V / 3000mAh Shell Material: Plastic Color Box Size: 290mm x 200mm x 20mm</p>	FCC Warning <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into a outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.</p> <p>NOTE: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p>	
MADE IN CHINA	- 5 -	- 6 -	- 7 -