

TAS 230 Hybrid ANC Metal Headphones

instruction manual



Packing list






Cloth bag X1



Type-C Charging CableX1

Product structure

Function key

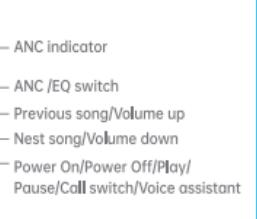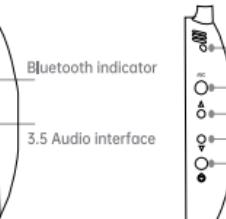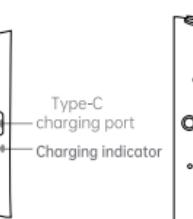

Tips

1. Except for the operation methods specifically marked in the manual, please do not try to disassemble or replace any parts in the product.
2. Don't put the product in the water or any others liquid. The product are not waterproof.
3. If any liquid enters the product by accidentally, please disconnect and remove the connection immediately.
4. Please make sure that there is no water on your hands when installing or uninstalling the product to avoid electricshock.
5. Do not put the product near by the heat source or expose it to the fire source directly.
6. Do not put the product in the environment with strong electromagnetic force, otherwise it will cause product malfunction.

Product parameter

Earbuds parameters:

Bluetooth version: V5.0

Transmission distance: ≥10 M

Music time: About 25H(ANC on)/
40H(ANC off)

Standby time: About 200 hours

Charging time: About 3 hours

Charge the product Connect to the 5V power adapter with a Type-C charging cable. When the product charging, red led on; When the product fully charged, blue led stay. Low battery warning: When the battery level is below 3.3V, the red light flashes twice every 5 seconds and a low battery warning sound appears every 10 minutes.

Product Operation Instructions

Power On: hold "▲" for 4 seconds.

Power Off: hold "▲" for 4 seconds.

Pairing: When you start up, the device displays "TAS 230", Click Connect.

Play/Pause: Click on "▲" once.

Previous song: hold "Δ" for 3 seconds.

Next song: hold "∇" for 3 seconds.

Volume down: Click on "∇" once.

Volume up: Click on "Δ" once.

ANC switch: Click on "ANC" once to switch the ANC MODE/NORMAL MODE/ ambient sound .

EQ switch: hold "ANC" for 2 seconds to switch Balanced-Mode/Signature-Sound .

Voice assistant: Double click on "▲" .

Answering a call: When calling, click the "▲" button once to answer the call.

Hang up: Call completed, click the "▲" button to end the call.

Reject calls: When making a call, double-click the "▲" button to reject the call.

Recall: Three click on "▲" .

One to two function: Connect two phones simultaneously and switch between them to listen to music.

Tripartite call: Call status, there is a third-party call. Double click on the "▲" button to connect the third-party call and maintain the current connection, and double click to switch between second party and third party calls.

Warranty statement

Disclaimer

This user manual does not have any form of guarantee, position expression or other implication. The mentioned products, specifications and information are for reference only, and the content will also be updated on the web at any time without additional separate notice.

Warranty statement:

The product attached to this document is guaranteed as follows: If the product is three (3) months from the date of purchase ("Warranty Period"), under normal conditions of use due to quality defects damaged, can be repaired. Free repair, free replacement if the manufacturer confirms that it cannot be repaired, repaired or replaced product. Continue to enjoy the warranty during the remaining warranty period (the shortest not less than 30 days). Purchased by sale the ticket date shall prevail; if the purchase date cannot be determined, the warranty period shall be 4 (4) months. If you apply for a warranty, please call the product service hotline first and execute it in the manner instructed by us. When applying for warranty, you need to provide an accurate, complete and clearly filled out valid sales invoice.

The above guarantee does not apply to the following situations:

- 1.Exceeding the validity period of the three packs;
- 2.Altering the warranty card and product code does not match the product body;
- 3.Causes caused by misuse, abuse or improper transportation, use, maintenance or storage obstacles or damage;
- 4.Failure or damage caused by force majeure (such as earthquake, war, disaster, etc.) or accident bad;
- 5.The zipper and tower buckle are damaged due to excessive force;
- 6.Disconnection or tearing caused by excessive load;
- 7.Any damage caused by sharp objects;
- 8.Products with signs of burning or flooding;
- 9.Damage caused by unauthorized disassembly;
- 10.Aging, discoloration, abrasion, rupture and other losses that occur during the normal use of the product.
- 11.If the original identification label of the product is changed or damaged, this guarantee will become invalid.

The completeness and appearance of the product and accompanying materials are not within the scope of the guarantee. You should check on the spot and raise objections to any discrepancies.

The above guarantees are all guarantees we make regarding the products, and are only applicable in mainland China. Nothing in this document affects consumer rights that cannot be excluded or restricted under the law profit.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.