


7KEYS

Typewriter Keyboard

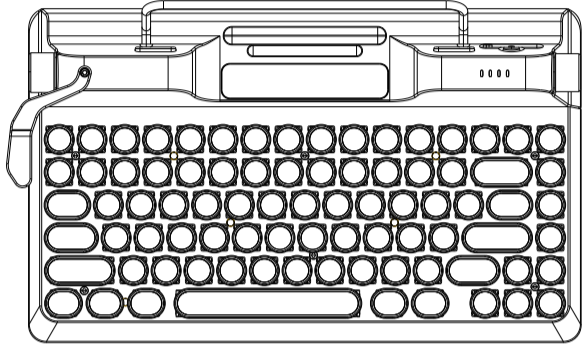

7KEYS TW1868 User’s Manual

Function description

② System switch

① Power switch

Type-C Port

Volume

① Power switch

② System switch

③ Volume

④ Charging Port

⑤ Type-C: Wired mode
 2.4G: Wiredless mode
 BT: Bluetooth mode

⑥ Backlight mode

⑦ Lightness

Turn off the power

Turn on the power

⑤ Type-C: Wired mode
 2.4G: Wiredless mode
 BT: Bluetooth mode

⑥ Backlight mode

⑦ Lightness

⑤ Type-C: Wired mode
 2.4G: Wiredless mode
 BT: Bluetooth mode

⑥ Backlight mode

⑦ Lightness

Indicator description

① INDICATOR LIGHT COLOR

RED: Wired mode
PURPLE: Wiredless mode
BLUE: Bluetooth mode

② SYSTEM INDICATOR

WINDOW:Light off MAC:Light on

③ CAPITALS LOCK INDICATOR (A/a)

④ CHARGING INDICATOR

Pull rod

Left Metal ring

②

③

①

④

②

③

①

④

②

③

①

④

FN combination keys manual

Window/Android

Mac/ios

FN+F1	My Computer	F1	Screen Brightness-
FN+F2	Search	F2	Screen Brightness+
FN+F3	Calculator	F3	Call out all programs
FN+F4	Multimedia	F4	Start interface
FN+F5	Last Song	F5	Keyboard Brightness-
FN+F6	Next Song	F6	Keyboard Brightness+
FN+F7	Pause	F7	Last Song
FN+F8	Stop	F8	Play / Pause
FN+F9	Mute	F9	Next Song
FN+F10	Volume+	F10	Mute
FN+F11	Volume-	F11	volume +
FN+F12	Web	F12	volume -
FN+WIN	WIN Lock	PrtSc	screenshot
FN+Pause	Cortana	FN+Pause <small>(Only in Mac)</small>	Start-up Siri

How to use Pause key to start up Siri:
Mac Apple—System Preferences—Siri—
Keyboard shortcuts—Enter Pause—Finish

Backlight combination keys manual

FN+ BACKSPACE	Turn on/off the backlight
FN+ [\	Switch backlight colour
FN+ ↑ FN+ ↓	Adjust the lightness
FN+ ← FN+ →	Adjust the speed of flashing
FN+HOME	Switch the backlight mode
FN+ESC	Press 3 seconds to restore the original design
FN+ Del	Insert
FN+ PgUp	Scroll Lock

Sleep patterns

In the Bluetooth mode/2.4G Wireless Mode. If you don't press any keys on the keyboard for one minute, the backlight will go out.it will enters sleep patterns after 30 minutes without press any key.It needs a few seconds pause to rework.
Backlight effect remains on in wired mode.

Specifications data

Number of keys: 84
Number of Multimedia Keys: 12
Materials: ABS & Metal
Battery: 3,000mAh
Charging Time: Around 10 hrs
Interface: Type-C
Mode: 2.4G&Bluetooth&Wired
Switch lifespan: >50milions
Keyboard function:All keys anti-ghosting
BT Name: 7KEYS TW1868
Dimensions:33.4*19.5*9.3CM
Weight: Approx.2.51lb

WHAT'SIN THE BOX:
7KEYS Typewriter BT TW1868*1
Metal Switch Puller*1
Keyboard Blue Switch*4
Type-C USB Cable*1
User Manual*1
Wrist-rest*1
2.4G receiver*1

Dear Customer:

Thank you for purchasing at 7KEYS, we hope that our products will bring you a pleasant experience.
If you have any problems with our products, please feel free to contact us, we will try our best to solve all problems for you.
If you are satisfied with our products, please leave a positive comment as an encouragement to us, we are very grateful if you would share your shopping experience with our customers.
In any case, don't forget. If you encounter any problem, big or small, we're at your disposal, any time.

MADE IN CHINA

三折页 展开：190*300mm 折好190*100mm

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

RF Exposure

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment can be used as portable exposure without any restriction.