


INSTRUCTION

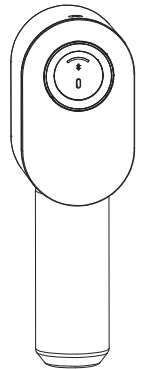

Aroma Diffuser User Manual

Introduction

This device adopts an all plastic structure, which is easy to operate. The product has a exquisite appearance and is perfectly integrated with various styles. It adopts touch and Bluetooth dual control modes. It can be placed independently, and the fragrance is accurate and stable. Its main function is to create different fragrance styles for life, suitable for KTV, sales office, shopping mall, 4S store, hotel, airport, home and health center and other place.

Attentions



- Please read this manual in detail before using the device and keep it carefully.
1. Please do not use overloaded power sockets, broken wire and charger. It may endanger your safety and cause a fire, please replace in time if it happens.
 2. Please do not try to modify, disassemble or repair the device in order to avoid damage to the device, if you are not a technician. If the device is abnormal, please check whether it is operated normally according to the user manual, or check according to the Malfunction Debugging. If it cannot be solved, please contact seller timely.
 3. Please do not invert or tilt the device when used. If the device needs to be transported to other sites, please maintain and clean the device (see Maintenance for details) first before package and transportation, in case of oil leakage to damage the device.
 4. Please maintain and clean the device regularly to ensure the device in best working states.

Instruction of Essential Oil

1. Before refill canister with essential oil, please turn off the device for 2 minutes till oil from atomizer backs to canister then take off the oil canister.
2. It's recommended to control the amount of essential oil and run out within 45 days, in order to avoid the deterioration of essential oils by oxidation.

Parameters


Size	H197*D60*W65(mm)
Capacity	110ml
N.W	200g
Coverage	200m³
Voltage	AC100-240V
Power	2.5W
Noise	≤38db
Package	W90*D100*H225(mm)

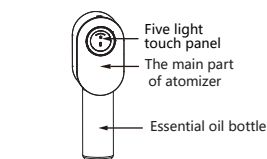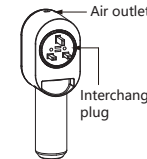

Accessories

Item	Power cable
Diagram	User manual

Installation

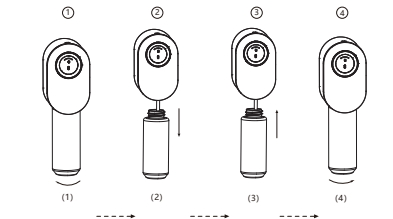

1. Take out the device, hold the upper atomization device (1), and rotate the essential oil bottle clockwise to separate it from the atomization device. ②
2. Load essential oils (110ml, maximum). ③
3. Tighten the essential oil bottle that containing essential oil counterclockwise with the atomization body and assemble it back into the entire machine. ④
4. Plug in the outlet, set the working hours, and the device starts working.


Precautions



Touch panel description

1. Operating instructions:

- ① Plug the device into a power outlet (100-240V). When the device is powered on, the indicator light and buzzer remind to turn off for 1 second, entering the shutdown state.

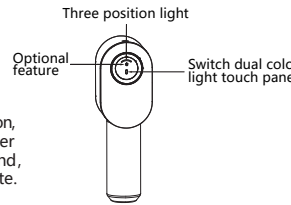

2. Panel function description:

Gently touch the touch panel for three seconds to turn on and off the machine. After turning on the machine, the switch indicator light and gear position light will turn on blue, and there will be a buzzer to remind you. The following operations are all in the power on state.

Touch mode:

- A: When the device is turned on for the first time, it defaults to the first gear of the gear mode, and multiple taps on the device will rotate between gears 2-3-0-1, with gear 0 being the standby mode, and the control panel lights red;
- a: At first gear, one gear light will light up, the buzzer will sound a reminder, and the first gear will work for 15 seconds and pause for 240 seconds.
- b: In second gear, two gear lights will light up, the buzzer will sound twice to remind, and the second gear will work for 15 seconds and pause for 120 seconds.
- c: Third gear, three gear lights are on, the buzzer sounds three times to remind, and the third gear operates for 15 seconds and pauses for 60 seconds.
- d: The machine gear is set to work continuously by default, and shifting does not reset the timing, and there is a gear light and buzzer prompt. After the timer ends, return to 0 gear for standby.

Bluetooth mode:

- B: After turning on the device, tap the touch panel in gear working mode. When the device beeps shortly, and then release the panel to switch to Bluetooth mode. If you continue to touch the panel until the device beeps once, the device will be off. After entering Bluetooth mode, the Bluetooth gear light is on only. (In Bluetooth mode, short touch the panel to switch modes, and long touch to turn it off).
- a: Turn on mobile GPS/positioning, Bluetooth. When pairing with Bluetooth, the Bluetooth light flashes slowly, but remains on when the match is successful.
- b: Execute the work plan set by the APP in Bluetooth working mode. When the Bluetooth settings are changed, the Bluetooth light flashes quickly once and there is a buzzer.

Working frequency:

The spray time can be adjusted for 5 to 300 seconds (5 seconds beat), and the pause time can be adjusted for 5 to 300 seconds (5 seconds beat)

Working day setting:

The default is every day, and other settings are adjustable for the week.

Maintenance

In order to ensure the best diffusing effect, please check and maintain the device every six month, or when you replace a new fragrance, or when the diffusing effect get weak as the following steps.

1. Take off the oil canister which is spent.
2. Filling industrial alcohol into the canister and clean it.
3. After clean the oil canister, refill canister with little alcohol and install it on the device then make the device stay in working status for 5-8 minutes.
4. Turn off the power when finishing cleaning.

Malfunction Debugging

Please try to solve the problem as below before fixing the machine.

Breakdown	Solution	Breakdown	Solution
Not working	-Please check if the power socket can be powered on normally. -Check if device is not in work period.	Oil leakage	-Check if canister connects to atomizer closely. -Check if seal ring is deformed or damaged -Check if atomizer is damaged.
No mist Mist gets weak	-Check if pump works or not, and if airflow from air outlet. -Check if atomizer core and oil tube are loose or blocked. -Check if seal ring gets damaged or fall off.	Abnormal noise	-Check if air pump is loose, please fix it correctly. -Check if air pump is damage, please replace a new one.

After-sale Service

The warranty is 1 year from the date of sale, not including device shell, adapter, electric wires, seal ring and the other vulnerable parts, as well as the damage caused by human or accident. Permanent maintaining for value will be provided if the machine exceed the warranty. If there is any issue of after-sales, please contact authorized sales service in corresponding area, or contact Sales Center directly.

Warranty Card

This card is the warranty for device's quality, please fill it with actual information.

Warranty card one		Warranty card two	
Start Date of Warranty Period		Start Date of Warranty Period	
Malfunction Description		Malfunction Description	
Date of Verify		Date of Verify	
Maintenance Result		Maintenance Result	
Maintainer's Signature		Maintainer's Signature	

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The devices has been evaluated to meet general RF exposure requirement , the device can be used in portable exposure condition without restriction