


Karaoke microphone instruction manual

Y5

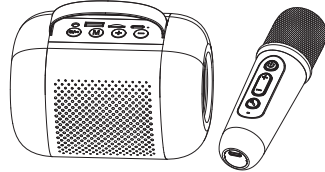


Welcome

Thank you for choosing to purchase this karaoke microphone, which uses industry advanced technology. With strong compatibility, you can easily enjoy mobile song practice and KTV anytime and anywhere just by linking the audio playback device. Wish you a pleasant use!

Function

This karaoke microphone speaker set adopts advanced 1-wire communication technology, mobile phone karaoke Bluetooth connection, wireless accompaniment, and is fully compatible with current mainstream mobile phones. Whether you are a karaoke fan or an Android K fan, you can enjoy the pleasure of karaoke with energy conservation and ease.

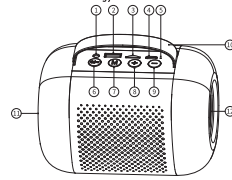

- ① AUX 3.5mm audio input
- ② USB-A USB drive interface
- ③ TF card slot
- ④ Type-c
- ⑤ Indicator light: Charging (red light)/Bluetooth (blue light)
- ⑥ Key: Short press play/pause Long press reset
- ⑦ Mode key: Short press Bluetooth/AUX/USB/TF card; Double click to switch the color light mode; Long press to turn on/off the colored light
- ⑧ Next key: Long press one song; Short press to gradually increase the accompaniment volume
- ⑨ Previous key: Long press the previous song; Short press to gradually decrease the accompaniment volume
- ⑩ Built handle
- ⑪ Left horn unit
- ⑫ Right horn unit

Instructions for microphone functions

- 1. Power on key: long press to turn on / off short press switch: microphone adjustment / reverberation adjustment style adjustment / double click control audio playback pause.
- 2. *key: short press to switch microphone volume up/Reverb volume increase/companiment volume increase; Long press to control the next music
- 3. *key: short press to switch microphone volume down/Reverb volume decrease / accompaniment volume decrease: Long press to control the previous music
- 4. Microphone key: Short press to switch: Short Talk Mode/Male to Female/Female to Male/Warcraft Sound/Drill Sound; Double click to cancel the original sound on/off; Long press the microphone on/off
- 5. Bluetooth / charging indicator: blue light / red light
- 6. Type-c: DCSV / charging

Function

Support Bluetooth connection to play music / support TF card and USB to play music / karaoke sound reinforcement function / built-in reverberation sound effect function / AUX audio input function.

Accessories



Loudspeaker box



Microphone



Type-c cable



Instructions

Accessories

Loudspeaker box

Type-c cable

Microphone

Instructions

Precautions for using speaker microphone

Switch on / off-

When the machine is turned off, the product starts automatically with the Chang An On / Off key. When the TF is not inserted when the card is used, it will enter the Bluetooth mode by default, and the voice prompt will be "Bluetooth mode". Long press The ON / OFF key turns off the machine.

Bluetooth connectivity-

Open your phone's Bluetooth settings, search for the device name, and then make a pairing connection. After the connection is successful, there will be a prompt tone and the blue Light will always be on.

Mobile Playback-

After the Bluetooth connection is successful, open the mobile music player and download your favorite songs or the accompaniment can be played, and the volume can also be adjusted to the appropriate level on the mobile phone.

TF card play-

Insert the TF card into the device, and the device will automatically play the music in the TF card.

USB playback-

Insert the USB drive into the device, and the device will automatically play the music from the USB drive.

AUX audio input playback-

Insert the 3.5AUX audio cable into the device, and the device will automatically play music transmitted from AUX.

Sound adjustment-

The volume of microphone and accompaniment can be adjusted through the buttons on the device control panel.

Charge-

Connect the standard charging line to the charger for charging. The red light is always on when charging, and it is full off.

Attention

1. Please disconnect the charger and turn it off before cleaning the machine.
2. Non professionals are not allowed to disassemble the equipment by themselves to avoid machine failure and loss of warranty rights.
3. Please do not place the equipment in the direct sunlight to avoid premature aging of electronic parts.
4. Avoid using in places with flying dust or dirty environment (dust is easy to cause equipment failure)
5. Do not place the equipment in an excessively cold or overheated environment, which may cause the equipment to fail to operate normally.
6. It is recommended that the ambient temperature of the equipment used should not exceed -10°C~40°C. Which is relatively moderate 10%~95%.
7. Please do not put any objects into the equipment to avoid short circuit or circuit damage. Please do not spill any liquid on the product.
8. Avoid friction and collision between the machine and hard objects to avoid scratching, falling off or other hardware damage.
9. The product shall not be exposed to the sun, fire or similar overheating environment.
10. It is forbidden to disassemble, impact, squeeze or put the product into fire. If the battery has serious failure, do not continue to use.
11. This manual contains important information, please reserve it.

Bluetooth

1. Press and hold the speaker power on key to start the machine, and the voice prompt "Bluetooth mode" will flash at the same time. Connect the success blue light is always on.
 2. Turn on the mobile phone Bluetooth and scan, search for the device, and then pair and connect, and you can hear it after connecting. The device sends a successful connection tone.
 3. After the microphone is turned on, it will automatically pair the speakers. When the microphone is not paired, the blue light will flash, and the Bluetooth light will flash always bright.
- Note: After the device is connected to the mobile phone once, Bluetooth has a memory function, and it will automatically connect when the phone is turned on. To disconnect, disconnect Bluetooth through the phone settings. If you listen to music only, you can turn the microphone volume adjust to the minimum.

Sing K audio & microphone features

Intelligent anti squealing-

Sing loudly without howling within 10cm.

High radio sensitivity-

It is easy to sing with a 5-10cm microphone. The microphone is loud and has good sound quality.

Low latency-

It has delay of less than 40ms

Al functions-

5 kinds of sound effects; One click to cancel the original sound; Flexible adjustment of accompaniment reverberation and microphone volume.

Note: The company's products are constantly innovative and subject to change without notice

Speaker

Bluetooth version: 5.3
Horn diameter: 52mm×2PCS
Horn power: 10W
Working voltage: 3.7V
Frequency range: 20Hz-20kHz
Reverberation: echo sound effect reverberation
Power adapter: DCSV≤1A
(common with mobile phone charger)
Charging duration: 3.5-4 hours

Microphone

Pickup: back pole condenser microphone
Working voltage: 3.7V
Frequency range: 20Hz-20kHz
Power adapter: DCSV≤1A
(common with mobile phone charger)
Charging duration: about 2.5 hours

Information

Product name: mini karaoke microphone speaker set
Product model: Y5

Note: The company's products are constantly innovative and subject to change without notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction