

# Air Wallet

## User Manual




# Getting Started

01

02

# Add Your Item Locator

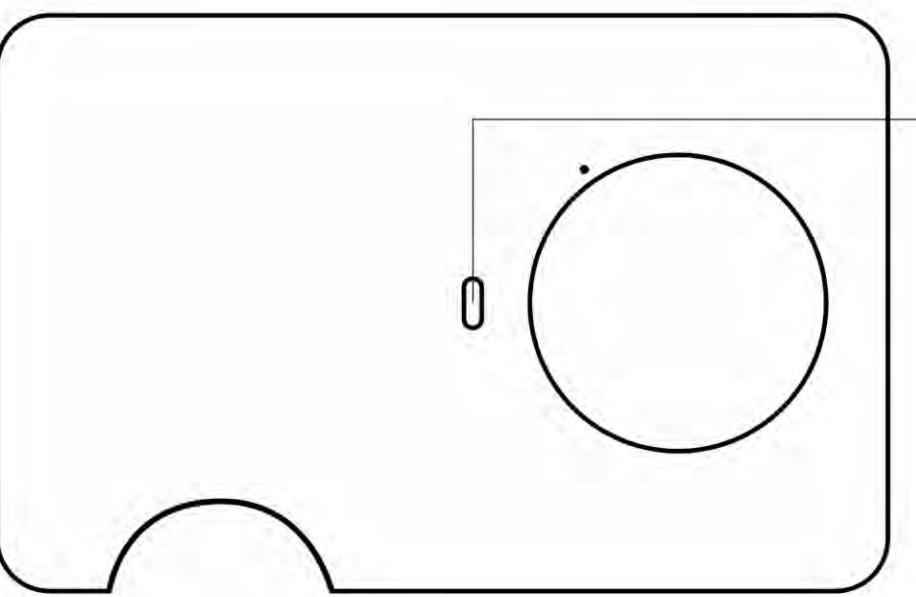

## Function Button

### 01.1 Power On / Off:

- Press your Air Wallet's Function Button once to turn on, it should beep once indicating it is powered on.
- To power off, hold the same button for at least 3 seconds. You will hear 2 beeps indicating your Air Wallet is powered off.

### 01.2 Check For Updates:

To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended. The Find Items app on Apple Watch requires the latest version of watchOS.

### 02.1 Start The App

- Open Find My app on your supported iPhone or iPad.
- Allow notifications from the app.

### 02.2 Connect Your Air Wallet

- Power on your Air Wallet.
- Tap +, then "Add Other Item".
- Once your Air Wallet is located, tap "Connect".
- Choose a recognizable name and emoji for your Air Wallet and tap "Continue".
- Find My will ask for confirmation to add your Air Wallet to your Apple ID Tap "Agree".
- Tap "Finish" and your Air Wallet will be set up and ready to be connected to whatever item you wish to locate, e.g. your keys.

# Locate Your Item

03

04

# Find Item Out Of Range

## 03.1 Find AirWallet When It's Nearby:

- Open Find My app and select the "Items" tab or open the FindItems app on your Apple Watch.
- Tap on your Item Locator from the list.
- Tap "Play Sound" to make your Item Locator beep.
- Tap "Stop Sound" to stop the beeps once you find.

## 03.2 Find AirWallet Last Known Location:

- Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch.
- Tap on your Air Wallet from the list.
- Your Air Wallet's last known location will appear on the map.
- To navigate to that last known location, tap "Directions" to open the Apple Maps app.

## 04.1 Enabling "Notify When Left Behind":

- Open Find My app and select the "Items" tab or open the FindItems app on your Apple Watch.
- Tap on your Air Wallet from the list.
- Under "Notifications" enable the "Notify When Left Behind" toggle.
- You will receive a notification when you leave your Air Wallet behind and it's no longer in range of your device.

## 04.2 Enabling "Notify When Found":

- Under "Notifications", enable the "Notify When Found" toggle.
- When your Air Wallet is seen by another Find My enabled device, you will receive a notification of its updated location.
- Note: "Notify When Found" can only be activated when your Air Wallet is out of range.

## When Your Item Is Lost

05

## Resetting Air Wallet

### 05.1 Enabling "Lost Mode":

- Open Find My app and select the "Items" tab or open the FindItems app on your Apple Watch.
- Tap on your Air Wallet from the list.
- Under "Lost Mode" tap "Enable".
- A screen detailing Lost Mode will pop up, tap "Continue".
- Enter your phone number or email address and tap "Next".
- You may enter a message that will be shared with the person that finds your item.
- Tap "Activate" to enable "Lost Mode".
- Note: When "Lost Mode" is enabled, "Notify When Found" is automatically enabled.
- Note: When "Lost Mode" is enabled, your Air Wallet is locked and cannot be paired to a new device.


### 06.1 Remove The AirWallet From Find My App:

- Open Find My app and select the "Items" tab.
- Tap on your AirWallet from the list.
- Please ensure "Lost Mode" is disabled.
- Scroll to the bottom of the screen and tap "Remove Item".
- A summary will open, tap "Remove" to confirm.


### 06.2 Factory Reset Your AirWallet:

- After successfully removing the AirWallet from Find My app, press the AirWallet's function button four times rapidly and then hold it a fifth time until you hear a ringing chime.
- The AirWallet is now reset and ready to be paired to a new device.

# Extras

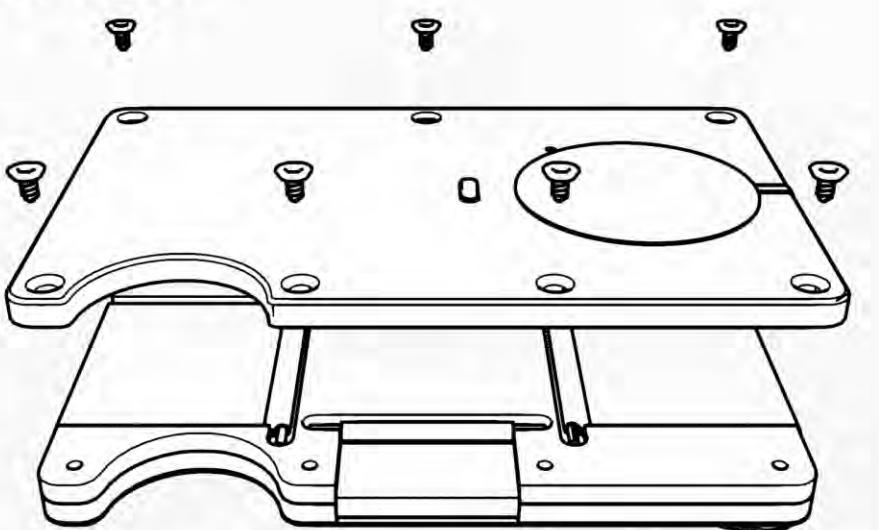

# 07

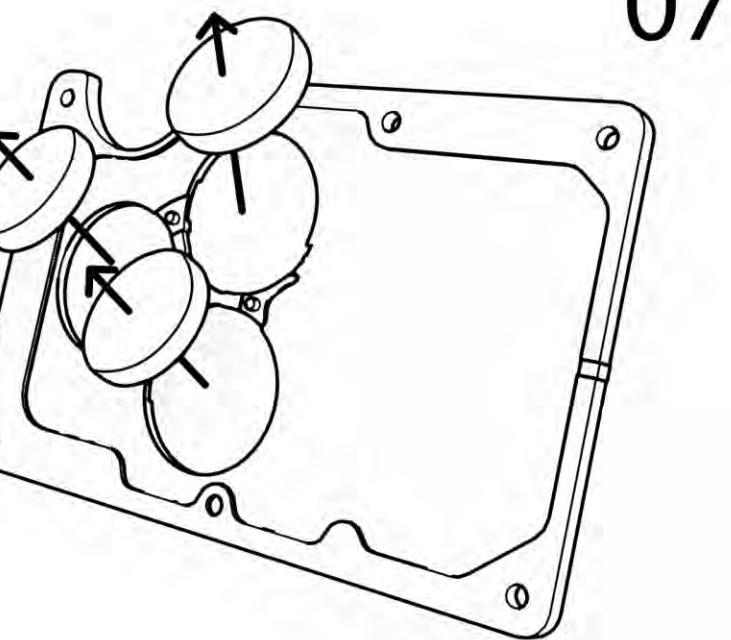

## 07.1 Replace The Battery:

- Remove the screws on front of your Air Wallet with a screwdriver
- Replace the batteries with new CR2016 battery placing them positively up (text facing up).
- Carefully close the Air Wallet by fastening the screws on both sides.

## 07.2 Unwanted tracking:

If any Find My network accessory separated from its owner is seen moving with you over time, you'll be notified in one of two ways:

- 1. If you have an iPhone, iPad, or iPod touch, Find My will send a notification to your Apple device. This feature is available on iOS or iPadOS 14.5 or later.
- 2. If you don't have an iOS device or a smartphone, a Find My network accessory that isn't with its owner for a period of time will emit a sound when it's moved.

These features were created specifically to discourage people from trying to track you without your knowledge.

# 08

# The Fine Print

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes not expressly approved by the party responsible for compliance could void the user's authority to operate this device. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. Federal Communication Commission (FCC) Radiation Exposure Statement Power is so low that no RF exposure calculation is needed.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.