 


A20 Quick Start Manual




Product Overview

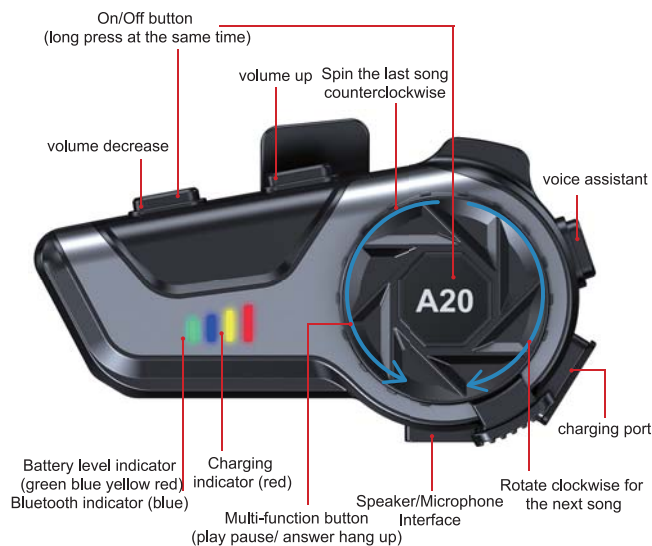


Important Reminder:
Before installing the headset, please connect your cell phone according to the quick manual guide to test the sound effect and volume.
If there is a big difference in sound effect and volume after installing into the helmet, please adjust the position of the speaker inside the helmet.

Power on/off

Simultaneously long press the multi-function key + volume up key for 3 seconds to turn on/off the phone

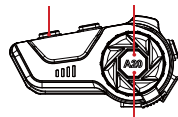


When powering on, the LED light will show the current battery level for 3 seconds. After that, it will resume the indication function status

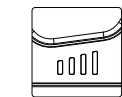

Blue LED flash


Double-tap to switch between English and Spanish voices (Disconnect wireless connection)

Pairing

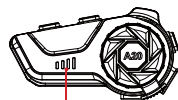


Bluetooth waiting for pairing status: Blue LED blinking fast

Bluetooth mode tone

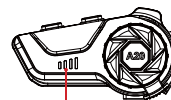


Bluetooth pairing is successful: Blue LED flashes slowly

Charge Mode

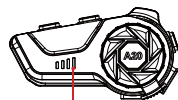

Red light when charging


(When the machine is turned on and the charger is plugged in, the machine automatically shuts off)

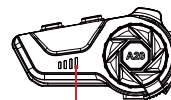

FULL LIGHT OUT

Telephone function

Double-click to toggle manual auto answering (When Bluetooth is not connected)

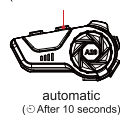

automatic (After 10 seconds)



Answer



Manually answer "short press"



Answer



Press and hold for 2 seconds



Refusal to answer



"Short press" while on a call



End of the call



Double-click



Last-code replay




Short press



Cancel outgoing calls

Voice assistant

voice assistant button (Bluetooth connected)

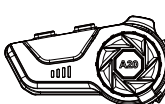

short press

(Short press again to turn off, long press to display current LED power, and 3S to automatically restore the current indication status) (Display 3S automatically restores the current indication status)



Wake up voice assistant

Music function



Short Press



(music stops)




Play



(music playing)



Pause

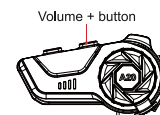

Volume + button


(music playing)



Clockwise (next song) (Twist clockwise without releasing or letting go to switch to the next song)



Short or long press Volume up

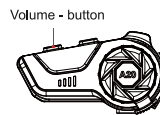

Volume - button

(music playing)



Counterclockwise (previous song) (Twisting counterclockwise without releasing or letting go switches the previous song)



Short or long press Decrease Volume

Battery level display



(green/blue/yellow/red)

100% Green, blue, yellow, red all light

80% Blue, yellow and red all light

50% Yellow and red all light


20% red all light

10% red light flashing fast


After powering on the device and displaying the current power level of 3S clock, it enters the Corresponding status indicator; In the process of using ,Long press the voice key to display 3S current power level after Restore the current status indicator

List of items


A20 Host *1

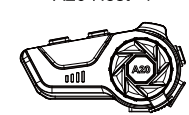


Speaker microphone*1

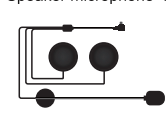


Clip-on base*1

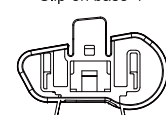


Velcro installation package*1

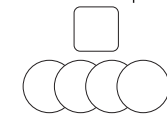

Type-C charging cable*1

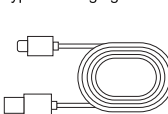

Instruction manual*1

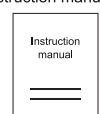

Instruction warning

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions.

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Manual de inicio rápido




Productos



Recordatorio importante:
Antes de instalar el casco, conecte su teléfono móvil de acuerdo con la guía rápida del manual para comprobar el efecto de sonido y el volumen. Si hay una gran diferencia en el efecto de sonido y el volumen después de la instalación en el casco, por favor, ajuste la posición del altavoz dentro del casco.


Encender/apagar

Pulsación larga simultánea de la tecla multifunción + la tecla para bajar el volumen durante 3 segundos para encender o apagar el teléfono.

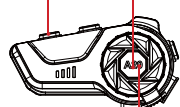


Doble clic para cambiar entre inglés/español (Desconectar Bluetooth)

Al encenderse, la luz LED mostrará el nivel actual de la batería durante 3 segundos, tras lo cual reanudará el estado de la función de indicación. Después, reanudará el estado de la función de indicación.

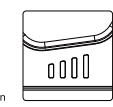


Flash LED azul

Emparejamientos

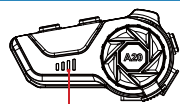


Bluetooth en espera de estado de emparejamiento: LED azul parpadeando rápidamente

Tono del modo Bluetooth

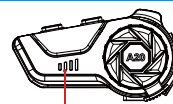


El emparejamiento Bluetooth se ha realizado correctamente: El LED azul parpadea lentamente

Modo de carga

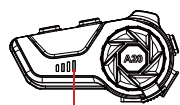

Luz roja durante la carga

(Cuando la máquina está encendida y el cargador enchufado, la máquina se apaga automáticamente)

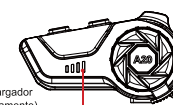


APAGADO TOTAL

Función música




prensa corta

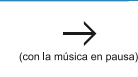

(con la música en pausa)




jugable

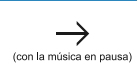

(con la música en pausa)



pausa

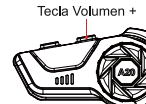


Tecla Volumen +



(con la música en pausa)




(con la música en pausa)

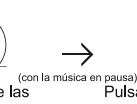


(con la música en pausa)



Subir volumen

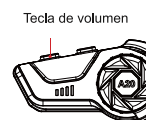


Tecla de volumen

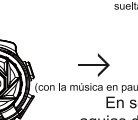

(con la música en pausa)



(con la música en pausa)

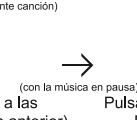

(con la música en pausa)



Bajar volumen

Indicación del nivel de batería



(verde/azul/amarillo/rojo)

100% Luz verde, azul, amarilla y roja

80% Luz azul, amarilla y roja

50% Amarillo y rojo todo luz

20% luz roja

10% luz roja parpadeando rápidamente

Después de encender la máquina y mostrar el nivel de potencia actual del reloj 3S, entra en el Indicador de estado correspondiente; En el proceso de utilizar Mantenga pulsada la tecla de voz para mostrar el nivel de potencia actual de 3S después de Restablecer el indicador de estado actual

Función teléfono

Pulsa dos veces para subir el volumen. Alternar respuesta manual/automática (Cuando Bluetooth no está conectado)



(Llamada entrante)



contestar al teléfono



Respuesta manual "pulsación corta"




(Llamada entrante)



contestar al teléfono




Mantenga pulsado durante 2 segundos

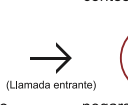

negarse a contestar al teléfono



"Pulsación corta" durante una llamada

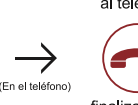


(En el teléfono)



finalizar una llamada




doble clic

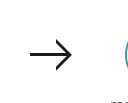

repetición del final de la partida



prensa corta

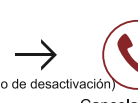


Cancelación de llamada


Asistente de voz



tecla del asistente de voz (conexión Bluetooth)

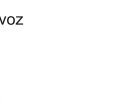

prensa corta

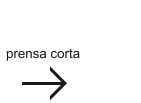


(Pulsación corta de nuevo para apagar, pulsación larga para mostrar la potencia LED actual, (La pantalla 3S restablece automáticamente el estado de indicación actual).




Despierta al asistente de voz

Lista de artículos


A20 mainframe *1

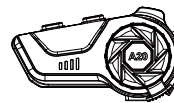

Altavoz Micrófono*1

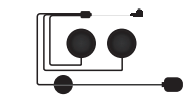


Base con clip*1

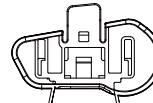

Kit de instalación con velcro*1



Cable de carga tipo C*1

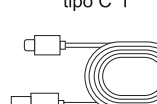

Manual de instrucciones*1



Advertencia

1. No ponga el producto en el fuego abierto para evitar explosiones;
2. por favor, no desmontar el producto, para evitar daños a la electrónica del producto;
3. Por favor, no cerca de los objetos punzantes, objetos para causar daños en el producto;
4. Por favor, colóquelo en un lugar seco si no se utiliza durante mucho tiempo.