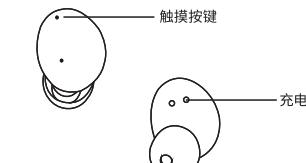
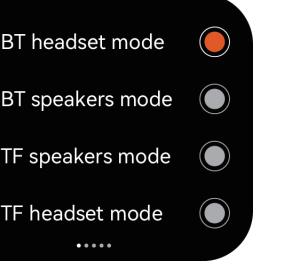
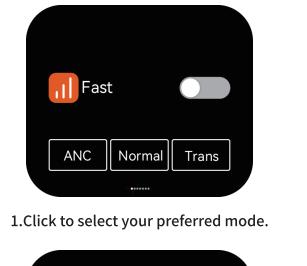
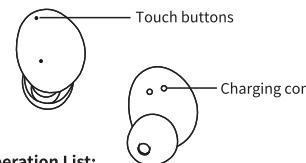
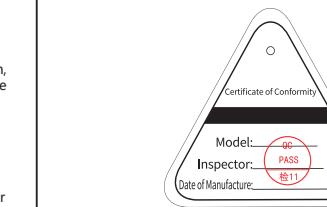


单页尺寸:6*8cm

 <p>S11 蓝牙耳机</p>	 <p>1.长按屏幕更换屏保图案</p>	<h3>播放模式</h3>  <p>1.单击蓝牙耳机模式,手机搜索“S11”连接,耳机进入工作状态。 2.单击蓝牙音响模式,手机搜索“S11”BOX连接。 3.单击内存卡音响模式,盒子播放内存卡歌曲。 4.单击内存卡耳机模式,盒子搜索“S11”连接。 耳机播放内存卡歌曲。</p>	<h3>耳机功能模式</h3>  <p>1.单击选择自己喜欢的模式。 1.单击选择自己喜欢的音效。</p>	<h3>耳机操作指南</h3>  <p>操作列表</p> <table border="1"><tr><td>配对</td><td>当你打开盖子取出耳机时,左右两边耳机快闪5秒左右,后只有一个耳机红白闪烁,配对成功。</td></tr><tr><td>电源ON/OFF</td><td>充电仓取出自动开机,长按8s放入充电仓充电关机,未连接长按8s</td></tr><tr><td>音乐:播放/停止 通话应答/挂断</td><td>单击任意边</td></tr><tr><td>语音助手</td><td>四击任意边,呼出语音助手</td></tr><tr><td>来电拒接</td><td>长按任意边拒接来电</td></tr><tr><td>上一首曲子</td><td>双击左边</td></tr><tr><td>下一首曲子</td><td>双击右边</td></tr><tr><td>音量加</td><td>三击右边</td></tr><tr><td>音量减</td><td>三击左边</td></tr><tr><td>模式切换</td><td>长按任意边2S,标准-通透-降噪</td></tr></table>	配对	当你打开盖子取出耳机时,左右两边耳机快闪5秒左右,后只有一个耳机红白闪烁,配对成功。	电源ON/OFF	充电仓取出自动开机,长按8s放入充电仓充电关机,未连接长按8s	音乐:播放/停止 通话应答/挂断	单击任意边	语音助手	四击任意边,呼出语音助手	来电拒接	长按任意边拒接来电	上一首曲子	双击左边	下一首曲子	双击右边	音量加	三击右边	音量减	三击左边	模式切换	长按任意边2S,标准-通透-降噪	<h3>通讯模式</h3>  <p>1.当耳机与充电盒通讯断开时,打开充电盒盖子,单击按键三下BT显示白色,通讯成功。 2.单击\blacktriangle暂停播放当前歌曲。 3.单击\blacktriangle上一曲。单击\blacktriangle下一曲。 4.单击\square减小音量,单击$\square+$加大音量。</p>	<p>感谢您购买和使用无线蓝牙耳机。</p> <p>此手册将帮助您如何使用您的蓝牙耳机,在使用蓝牙耳机之前,您必须事先了解和熟悉您手机的蓝牙功能或者其他蓝牙电子设备的蓝牙功能的使用,如电脑的蓝牙功能。</p> <p>安全规则:</p> <ol style="list-style-type: none">1.为确保安全,敬请遵守此手册中提到的规则,在使用蓝牙耳机之前,我们强烈建议您阅读此手册。2.请着重提防锋利的边缘,不平的表面,金属件,配件和包装,以避免出现任何可能的伤害。3.请不要拆除,维修此产品。这样可能会导致起火,电子击穿甚至彻底损坏本产品,这些都不在保修之列。4.请不要用油及其它挥发性液体擦拭本产品。5.请不要在有危险的地方使用本产品。 <p>安全警示:</p> <p>电池不得暴露在诸如日照、火烤或类似的过热环境中。电池若出现严重鼓胀,请勿继续使用。 电池更换不当会有爆炸危险,严禁私自更换电池。 适用于本机充电的电源适配器为DC5V-1A,如使用过高的电压电源适配器为本机充电则有充坏耳机的风险。</p>	<p>保修卡</p> <p>感谢您购买本公司产品,请在购机时填写以下内容并妥善保存此卡,以便我们为您提供完善的售后服务,为保证您的合法权益和使用权,请仔细阅读保存条款。</p> <p>产品型号:_____ 用户姓名:_____ 购买日期:_____ 联系电话:_____</p> 
配对	当你打开盖子取出耳机时,左右两边耳机快闪5秒左右,后只有一个耳机红白闪烁,配对成功。																										
电源ON/OFF	充电仓取出自动开机,长按8s放入充电仓充电关机,未连接长按8s																										
音乐:播放/停止 通话应答/挂断	单击任意边																										
语音助手	四击任意边,呼出语音助手																										
来电拒接	长按任意边拒接来电																										
上一首曲子	双击左边																										
下一首曲子	双击右边																										
音量加	三击右边																										
音量减	三击左边																										
模式切换	长按任意边2S,标准-通透-降噪																										

 <p>S11 Bluetooth Earphones</p>	 <p>1.Long press the screen to change the screensaver pattern</p>	<h3>PLAY MODE</h3>  <p>1.Click on the Bluetooth earphones mode, the phone searches for “S11” to connect, and the earphones enter the working state. 2.Click on the Bluetooth speaker mode, the phone searches for “S11” BOX to connect. The box plays songs from the phone. 3.Click on the memory card speaker mode, the box plays songs from the memory card. 4.Click on the memory card earphones mode, the box searches for “S11” to connect. The earphones play songs from the memory card.</p>	<h3>EARPHONES FUNCTION MODE</h3>  <p>1.Click to select your preferred mode.</p>	<h3>EARPHONES OPERATION GUIDE</h3>  <p>Operation List:</p> <table border="1"><tr><td>Pairing:</td><td>When you open the cover to take out the earphones, both sides will flash quickly for about 5 seconds. After that, only one earphone will flash red and white, indicating a successful pairing.</td></tr><tr><td>PowerON/OFF:</td><td>The earphones will turn on automatically when taken out of the charging case. To turn them off, hold down for 8 seconds. To charge, place them in the charging case, and they will turn off if not connected after holding down for 8 seconds.</td></tr><tr><td>Music:Play/Pause, Answer/End call:</td><td>Single click either side.</td></tr><tr><td>Voice Assistant:</td><td>Quad-click either side to summon the voice assistant.</td></tr><tr><td>Call Rejection:</td><td>Long press either side to reject an incoming call.</td></tr><tr><td>Previous Track:</td><td>Double click the left side.</td></tr><tr><td>Next Track:</td><td>Double click the right side.</td></tr><tr><td>Volume Up:</td><td>Triple click the right side.</td></tr><tr><td>Volume Down:</td><td>Triple click the left side.</td></tr><tr><td>Mode Switching:</td><td>Long press either side for 2 seconds to switch between standard, transparency, and noise reduction modes.</td></tr></table>	Pairing:	When you open the cover to take out the earphones, both sides will flash quickly for about 5 seconds. After that, only one earphone will flash red and white, indicating a successful pairing.	PowerON/OFF:	The earphones will turn on automatically when taken out of the charging case. To turn them off, hold down for 8 seconds. To charge, place them in the charging case, and they will turn off if not connected after holding down for 8 seconds.	Music:Play/Pause, Answer/End call:	Single click either side.	Voice Assistant:	Quad-click either side to summon the voice assistant.	Call Rejection:	Long press either side to reject an incoming call.	Previous Track:	Double click the left side.	Next Track:	Double click the right side.	Volume Up:	Triple click the right side.	Volume Down:	Triple click the left side.	Mode Switching:	Long press either side for 2 seconds to switch between standard, transparency, and noise reduction modes.	<h3>COMMUNICATION MODE</h3>  <p>1.When the earphones lose connection with the charging case, open the lid of the charging case and triple-click the button markedBT to display white, indicating a successful reconnection. 2.Single click button\blacktriangle to pause the currently playing song. 3.Single click button\blacktriangle to play the previous track. Single click button\blacktriangle to play the next track. 4.Single click button\square to decrease the volume. Single click button$\square+$ to increase the volume.</p>	<p>Thank you for purchasing and using the Wireless Bluetooth Earphones.</p> <p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.</p> <p>If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none">-- Reorient or relocate the receiving antenna.-- Increase the separation between the equipment and receiver.-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.-- Consult the dealer or an experienced radio/TV technician for help. <p>The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p>	<p>Warranty Card</p> <p>Thank you for purchasing our product. Please fill in the following information at the time of purchase and keep this card properly to facilitate in providing you with comprehensive after-sales service. To ensure your legal rights and usage privileges, please carefully read and retain the terms and conditions.</p> <p>Product Model:_____ User Name:_____ Purchase Date:_____ Tel:_____</p> 
Pairing:	When you open the cover to take out the earphones, both sides will flash quickly for about 5 seconds. After that, only one earphone will flash red and white, indicating a successful pairing.																										
PowerON/OFF:	The earphones will turn on automatically when taken out of the charging case. To turn them off, hold down for 8 seconds. To charge, place them in the charging case, and they will turn off if not connected after holding down for 8 seconds.																										
Music:Play/Pause, Answer/End call:	Single click either side.																										
Voice Assistant:	Quad-click either side to summon the voice assistant.																										
Call Rejection:	Long press either side to reject an incoming call.																										
Previous Track:	Double click the left side.																										
Next Track:	Double click the right side.																										
Volume Up:	Triple click the right side.																										
Volume Down:	Triple click the left side.																										
Mode Switching:	Long press either side for 2 seconds to switch between standard, transparency, and noise reduction modes.																										