


# Lighted Bluetooth Blanket Manual

## Product Introduction:

1. Multilingual;  
(English, German, Russian, Spanish)
2. Bi-amplified Dual Speakers;
3. 6 LED Lights on the Control Box;
4. Blanket with Lights, adopting  
PMMA Side Light Guide Technology;
5. Bluetooth Connection;
6. Three-digit LED Display;
7. Adjustable Volume Size;
8. Mute Function
9. Sleep Mode

Figure 2:

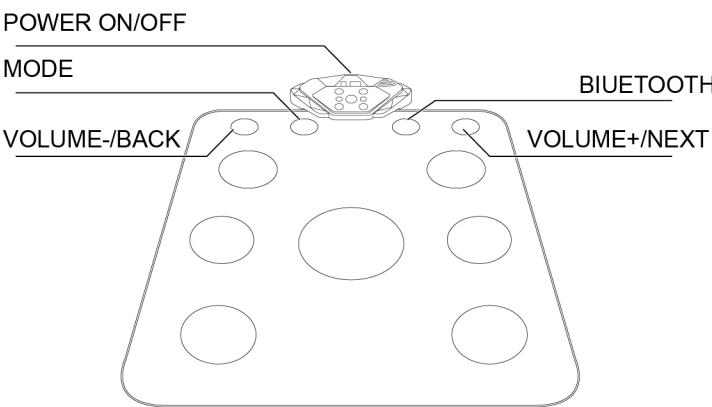

## 1. Battery Installation

First, use a Phillips screwdriver to remove the screws on the battery cover of the control box. Then, correctly insert 4x DC 1.5V AA non-rechargeable batteries according to the battery polarity and the method shown in Figure 1. Finally, lock the battery cover in place;

## 2. Button Function Description

As shown in Figure 2.

## 3. Operating Instructions

### 1. Language Selection:

Upon powering on, the system will automatically enter the language selection menu. Please select your desired language by pressing the corresponding button on the blanket: 1. for English, 2 for Russian, and 3. for German. Adjust the volume to your preference by using the Vol + or Vol - button on the blanket;

### 2. MODE 1 Free Dance Mode

To activate Mode1, press the MODE button on the blanket. This will start the music and the player will dance to the rhythm. The blanket button light will also light up with each step on the button light.

Additionally, the left button will produce a 'cha-ching' sound effect while the right button will produce a 'thud' sound effect. Mode1 comes with 3 pre-installed songs.

### 3. MODE 2 4-Button Breakout Mode

To activate Mode 2, press the MODE button on the blanket. Select one of the three levels indicated by the button lights. Each level has a one-minute countdown. The control box and the 4 LEDs at positions 1, 2, 5, and 6 on the blanket will light up with the program. Step on the corresponding button on the blanket before the LEDs go out.

### 4. MODE 3 6-Button Dance Mode

To activate Mode 3, press the MODE button on the blanket. Select one of the three levels indicated by the button lights. Each level has a one-minute countdown. The control box and the 6 LEDs on the blanket will light up with the program. Step on the corresponding button on the blanket before the LEDs go out. MODE2 and MODE3 Scoring Rules: Step on all the lit buttons before the LED lights turn off to accumulate 1 point. If you do not step on the buttons or step on 1 wrong button, you will not score any points. If the number of errors is greater than 5 when the game time is over, you have failed that level and cannot proceed to the next level automatically. If the number of errors is less than or equal to 5, you have succeeded in that level and will automatically proceed to the next level.

### 5. MODE 4 Memory Challenge

To activate Mode 4, press the MODE button on the blanket. The player must then step on the buttons in the order that the different colored lights on the blanket light up. If the player correctly follows the program's order, the game continues and increases in difficulty. If the order is incorrect, the game is over and resets.

## 6. MODE 5 Electric Drum Kit

The electric drum kit includes a bass drum, toms, snare drum, suspended cymbal, rhythm cymbal, and pedal cymbal. The drummer presses or stomps the buttons on the blanket according to the drum score, the button light on the blanket lights up, and the speakers emit drum instrument sound effects.

## 4. Advanced Operation: Bluetooth Operation Mode

### 1. Bluetooth Connection

- 1.After selecting the language, press the "BT" button on the blanket to enter Bluetooth mode.
- 2.Turn on the Bluetooth switch on your cell phone, search for "KUSTIN PLAYMT" and click on pairing to connect;
- 3.When the connection is successful, the speaker emits a Bluetooth connection success tone;
- 4Press the "BT" button again to exit Bluetooth mode.

### 2. Bluetooth Mode Operating Instructions

- 1.After the Bluetooth connection is successful, open the music player on your phone, select your favorite music and click the play button to start playing;
- 2.Press the MODE button on the blanket and follow the button light prompts. There are three levels to choose from, ranging from easy to hard.
- 3.After selecting the level, the dancing blanket will start to play the music on your cell phone. Follow the instructions on the control box or blanket. Step on the corresponding buttons on the blanket before the lights go out to score points. The LED display will show your total score. Adjust the volume on your cell phone to change the music volume level; the volume of the cue is adjusted by the Vol - or Vol + button on the blanket.
- 4.Scoring Rules: Step on all the lighted buttons before the LED lights go out, the score will be accumulated 1 point; no points will be scored for not stepping on the buttons or stepping on 1 wrong button. When the game time is over and the number of errors is more than 8, it means that you failed in the level and cannot enter the next level automatically. If the number of errors is less than or equal to 8, it means that you have succeeded in that level and will automatically enter the next level. Regardless of the success of the level, when restarting the level, the music of the phone will also automatically switch to the next song; when you fail to break through the level, tap the Mode button to select the level again to start the game. (3 minutes countdown for each level)

### 3. Attention

- 1.If the music player on the cell phone is interrupted or disabled by other programs, the dancing blanket may not play any music or may produce incorrect sounds. To ensure proper functioning, keep the music player on the cell phone active. Please note that different Bluetooth versions, connection distances, and music player modes may cause delays in the music playback, which is a normal occurrence.
- 2.If the battery is low, the product may not function properly or may have difficulty connecting to Bluetooth devices. It is recommended to promptly replace the battery with a new one.

## 5. Bluetooth Speaker Mode

After successfully connecting in Bluetooth mode, open the music player on the cell phone, press and hold the Vol + button on the blanket for more than 3 seconds, the LED display will show "888", the system will automatically play the songs on the cell phone through Bluetooth, adjust the volume on the cell phone, you can change the volume size of the music, and tap the Vol - or Vol + button on the dance carpet, you can switch to the cell phone songs on the previous/next song;

## 6. Mute Function

Press and hold Vol- for more than 3 seconds to enter mute mode. Tap Vol+ or Vol- to exit the mute mode. However, if no song is played or muted in Bluetooth Speaker mode, it will automatically turn off after 3 minutes. After shutting down and restarting, it will automatically return to the default volume.

## 7. Sleep Power-saving Function

If you do not perform any operation in the power-on state, the system will remind you once every 20 seconds, and if you still do not perform any operation for 15 times, the system will automatically shut down and enter the power-saving mode; after shutting down, any button can wake up and turn on the system.

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.