

单页尺寸: 75*140MM
说明书边缘线不印刷

75MM

140MM



User Manual
Thrusting and Vibrating Pocket Pussy
(This product is for ages 18 and over only)

Product Specification

Product Specification:	Thrusting and Vibrating Pocket Pussy
Material:	TPE+ABS+Medical silicone
Weight:	3.5 lbs
Size:	5.0*1.9.5 inches
Function:	9 thrusting modes, 9 vibrating modes, APP control
Battery:	Polymer li-ion battery 1150mAh
Usage Time:	90 minutes
Charging Time:	About 2h
Power charging:	USB magnetic charging
Input voltage:	4.2V
Output voltage:	3.0V
Max noise:	<60dB

OPERATION GUIDANCE

- Press and hold power button for 1.5 seconds to turn on/off and enter standby mode.
- In standby mode, short press thrusting button to switch thrusting frequency, long press for 1.5 seconds to turn off pocket pussy off.
- In standby mode, short press vibrating button to switch vibration frequency, long press for 1.5 seconds to turn off vibration mode.

Charging Instructions

How to Use

- Put lubricant in the channel of doll, also put some lubricant on the penis, insert penis into the channel get ready to use.
- Below the power button are tow magnetic metal ports for charging. Just connect the provided charging cable to these ports for charging-no need to worry about positive or negative polarity.
- Press and hold the power button for 1.5 seconds to turn on/off and enter standby mode. Then, select either the vibration or thrusting function, or turn on both.
- Do not use the detergent containing alcohol, gasoline or acetone.
- Avoid direct sunlight.
- If you don't know if your cleaner is gentle, test it first on a cross-section of the doll's legs.
- A full charge will take 120-150 minutes. The specific charging time varies according to the internal residual power of the product.
- Clean the pussy's surface and interior using water not exceeding 50°C, and you may also add a small amount of mild body wash or neutral soap for clean.

APP Usage Instructions

Modes for Play on APP

Maintenance

- Scan the QR Code on the right to download and install App.
- Register an account with your email.
- Login the App.
- After cleaning, wipe Gently with dry lint free cloth or use towel pat to dry.
- Press and hold the power button for 1.5 seconds to turn on/off and enter standby mode. Then, select either the vibration or thrusting function, or turn on both.
- Do not use the detergent containing alcohol, gasoline or acetone.
- Avoid direct sunlight.
- If you don't know if your cleaner is gentle, test it first on a cross-section of the doll's legs.
- A full charge will take 120-150 minutes. The specific charging time varies according to the internal residual power of the product.
- Clean the pussy's surface and interior using water not exceeding 50°C, and you may also add a small amount of mild body wash or neutral soap for clean.

Attention

- Wear a waterproof cloth when you use it, as they may stain the doll even after wash. If you prefer dark clothes, wash it multiple times and test it on a small area of the doll before starting.
- Keep the device dry and clean. If water gets into the device, turn it off and dry it with a soft, dry cloth. If necessary, limit the duration of wearing tight clothing.
- Do not place the product in high-temperature areas.
- Do not share the product with others to prevent infection.
- The product is water-resistant, avoid excessive use to prevent damage to the waterproof layer.
- Immediately clean the device if any abnormality or damage is experienced.
- Do not use the device if the vibration is not strong enough or broken.
- Using chemicals such as harsh acids, skin screen, gasoline, acetone, etc., for lubrication or professional lubricants are recommended.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.