


# K12 WIRELESS KARAOKE SPAKER

## User Manual

### Product Introduction

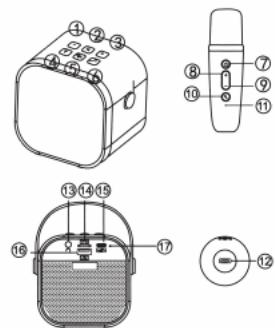

### About Karaoke Machine

1. Short press "-" to turn down the volume, long press to switch to previous song.
2. Short press "M" to switch the play mode, such as Bluetooth/TF card/USB, etc.
3. Short press "+" to turn up the volume, long press to switch to next song.
4. Short press to turn on the LED lights, long press for 3 seconds to turn off the LED lights.
5. Short press to play or pause; double-click to turn on or off the echo; long press for 3 seconds to turn the power on or off.
6. Short press to turn on or off the speaker's original sound.
13. Headphone jack.

14. TF card slot; when a TF card with MP3 audio files is inserted, it automatically switches to TF card mode.
15. The speaker's Type-C 5V charging port.
16. USB port; when a USB drive with MP3 audio files is inserted, it automatically switches to USB mode.
17. Speaker indicator light; the blue light flashes before connected, stays on when connected successfully, turns red when charging, and goes out when fully charged.

#### About Microphone

7. Long press for 3 seconds to turn the power on or off; short press to turn on or off the original sound; double-click to play or pause.
8. Short press to turn up the volume; long press for previous song.
9. Short press to turn down the volume; long press for next song.
10. Short press to turn on or off the magic sound; long press to switch the reverb and accompaniment functions.
11. Microphone indicator light; the blue light flashes before connected, stays on when connected successfully, turns red when charging, and goes out when fully charged.
12. Microphone's Type-C 5V charging port. Comes with 2 microphones.

How to charge?

Data cable connection for charging

Q&A

1. If the indicator light does not light up after turning on the power, please check if the battery of the speaker is sufficient or connect the speaker to a 5V/1A power source to charge. The charging time is about 3-4 hours.
2. If there is no sound from the microphone, it might be because the power is not turned on, the mode is incorrect, or the volume is not adjusted. Please adjust the microphone volume accordingly.
3. If there is no reverb from the speaker, it might be because the reverb switch is turned off. Please turn on the reverb switch.
4. If there is noise from the microphone, it might be due to environmental noise, signal interference, or the microphone being too close to the speaker. Please readjust the

direction of the microphone.

5. If Bluetooth playback is interrupted, it might be because the Bluetooth distance is too far, or there are obstacles between the phone and the amplifier affecting the signal transmission. Please move closer to the connected phone and avoid any obstacles.

6. If you cannot connect to Bluetooth, it might be because of the distance being too far, the presence of obstacles, or being connected to another phone. Please move closer to the phone, avoid obstacles, and disconnect the other phone.

7. If you cannot charge the device, check if the charger is functioning properly, and if the red indicator light at the charging port lights up when charging.

#### Product Information

- Product Name: WIRELESS KARAOKE SPAKER
- Battery :18650 lithium battery (audio) 14500 lithium battery (microphone)
- Product Model :K12

- Charging Voltage: DC5V
- Frequency Range: 90Hz 18KHz
- Output Force Rate: 6W
- Power Supply: DC charging and built-in battery

#### FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following

two conditions: (1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device

can be used in portable exposure condition without restriction.