

R379	Scand Bugg	R443	Jive2	R507	8 Beat Pop1	T055	Synth Voice	T119	Synth Drum	T183	Kawala 2
R380	Rock Cha Cha	R444	Pasodoble	R508	8 Beat Pop2	T056	Orchestra Hit	T120	Reverse Cymbal	T184	Didgeridoo 2
R381	Organ Swing	R445	Samba1	R509	8 Beat Soul1	T057	Trumpet	T121	Guitar Fret Noise	T185	Soft Guitar
R382	Secret Service	R446	Samba2	R510	8 Beat Soul2	T058	Trombone	T122	Breath Noise	T186	Suona 2
R383	Animation Bld	R447	Schlager Rock 1	R511	8 Beat Rock1	T059	Tuba	T123	Seashore	T187	Twin Bones
R384	Christmas Waltz	R448	Schlager Rock 2	R512	8 Beat Rock2	T060	Muted Trumpet	T124	Bird Tweet	T188	Jazz Organ 3
R385	Movie Swing	R449	Foxtrot2	R513	Classic 8Beat	T061	French Horn	T125	Telephone Ring	T189	Woodblock 3
R386	Movie Ballad	R450	Viennese Waltz	R514	Vintage Gtr Pop	T062	Brass Section	T126	Helicopter	T190	Soft Santur
R387	Bubblegum Pop	R451	Tango2	R515	Schlager Italia	T063	Synth Brass 1	T127	Applause	T191	Koto 4
R388	Rock & Roll Shfl2	R452	Tango3	R516	70's Disco1	T064	Synth Brass 2	T128	Gunshot	T192	Castanets
R389	West Coast Pop	R453	German Waltz	R517	70's Disco2	T065	Soprano Sax	T129	Yong Gin	T193	Viola Attack 3
R390	Classic 16 Beat	R454	Carnival	R518	Funky Disco	T066	Alto Sax	T130	Zheng	T194	Woodblock 4
R391	Jazz Pop	R455	Organ Samba	R519	Saturday Night	T067	Tenor Sax	T131	Zhong Ruan	T195	Bright String 2
R392	Kool Shuffle	R456	Reel	R520	Club Latin	T068	Baritone Sax	T132	Pi Pa	T196	Twin Bones 2
R393	8 Beat Ballad2	R457	Gay Gordons	R521	Disco Chocolate	T069	Oboe	T133	Big Souna	T197	Tenor Sax 2
R394	Chillout	R458	Scand Waltz	R522	Disco Fox	T070	English Horn	T134	Souna	T198	Wind Organ
R395	16 Beat Ballad1	R459	60's Rock Style	R523	Disco Funk	T071	Bassoon	T135	Er Hu	T199	Tron Flute
R396	Epic Ballad	R460	Standard Rock	R524	Disco Hands	T072	Clarinet	T136	Yue Hu	T200	Bohdran 2
R397	Easy Ballad	R461	Brit Rock Pop	R525	Disco Party	T073	Piccolo	T137	Di Zi	T201	Tron Flute 2
R398	Cuban Son	R462	60's Vintage Rock	R526	Disco Samba	T074	Flute	T138	Bong Di	T202	Jazz Organ 4
R399	Bachata2	R463	Chart Rock Shfl	R527	UK Pop	T075	Recorder	T139	Koto 2	T203	Soft Santur 2
R400	Forro	R464	60's Pop Rock	R528	Club Dance	T076	Pan Flute	T140	Qu Di	T204	Woodblock 5
R401	70's Chart Ballad	R465	Rock Billy	R529	Modern R&B	T077	Bottle Blow	T141	Jungle Bass	T205	Shamisen 4
R402	Romantic Ballad	R466	Rock Boogie	R530	Hip Shuffle	T078	Shakuhachi	T142	Koto 3	T206	Indian Flute 2
R403	90's Cool Ballad	R467	Latin Cha Cha	R531	Charleston	T079	Whistle	T143	Marimba 2	T207	Electric Viprphone 2
R404	Alp Ballad1	R468	Rock Classical	R532	Disco Pop	T080	Ocarina	T144	Tsugaru	T208	Soft Guitar 2
R405	Alp Ballad2	R469	Rock Shuffle	R533	Disco Soul	T081	Lead 1 (square)	T145	Kawala	T209	Mute Barafon 3
R406	E_Ballad	R470	Rock Pop	R534	Disco Trot	T082	Lead 2 (sawtooth)	T146	Attack Clav.	T210	Dual Horns 2
R407	Unplugged 9	R471	Rock'n Roll 1	R535	Euro Beat2	T083	Lead 3 (calliope lead)	T147	Crystal	T211	Xylophone 2
R408	Pop Ballad	R472	Rock'n Roll 2	R536	Rap 3	T084	Lead 4 (chiff lead)	T148	Bright String	T212	Didgeridoo 3
R409	Pop New Age	R473	Straight Rock	R537	Rave	T085	Lead 5 (charang)	T149	Clavi 2	T213	Wind Organ 2
R410	8 Beat Modern	R474	Jazz Rock2	R538	Techno2	T086	Lead 6 (voice)	T150	Chorus Guitar.	T214	Church Bells 2
R411	Country Ballad1	R475	Fast Gospel	R539	Techno3	T087	Lead 7 (fifths)	T151	Barafon	T215	Tsugaru 3
R412	Love Song	R476	Folk Rock2	R540	70's Disco Funk	T088	Lead 8 (bass+lead)	T152	Jazz Organ	T216	Nay 2
R413	Modern Country Pop	R477	Skiffle	R541	Disco Philly	T089	Pad 1 (new age)	T153	Indian Flute	T217	Guitar Pinch 2
R414	Electro Pop	R478	Funk Pop Rock	R542	Disco House	T090	Pad 2 (warm)	T154	Mute Barafon	T218	Grow Guitar
R415	Acoustic Ballad 2	R479	Contemp Rock	R543	80's Disco	T091	Pad 3 (polysynth)	T155	Dual Horns	T219	Indian Flute 3
R416	Piano Ballad 1	R480	Acoustic Rock	R544	Schlager Polka	T092	Pad 4 (choir)	T156	Electric Giutar (Clean) 2	T220	Synth Harpsi. 2
R417	R&B Ballad	R481	50's Pop2	R545	Polka Pop	T093	Pad 5 (bowed)	T157	Clavi 3	T221	Soft Sax 2
R418	Rock Ballad	R482	Cool Pop	R546	Blue Grass 1	T094	Pad 6 (metallic)	T158	Soft Sax	T222	Xylophone 3
R419	Slow & Easy	R483	Groovy Pop	R547	Blue Grass 2	T095	Pad 7 (halo)	T159	Electric Viprphone	T223	English Horn 2
R420	Analog Ballad	R484	60's Vintage Pop	R548	Blue Grass 3	T096	Pad 8 (sweep)	T160	Didgeridoo	T224	Soft Guitar 3
R421	Slow Rock 5	R485	80's Pop2	R549	Pop Waltz2	T097	FX 1 (rain)	T161	Barafon 2	T225	Castanets 2
R422	Slow Rock 6	R486	Rap Pop	R550	USA March	T098	FX 2 (soundtrack)	T162	Tubular Bells 2	T226	Soft Guitar 4
R423	Slow Rock 7	R487	Pop Rock 3	R551	Hully Gully	T099	FX 3 (crystal)	T163	Soft Accord	T227	Hard Vibe 2
R424	Slow Soul	R488	60's Soul	R552	Tarantella	T100	FX 4 (atmosphere)	T164	Barafon 3	T228	Reed Horn
R425	8 Beat Adria	R489	70's Soul	R553	Limbo Rock	T101	FX 5 (brightness)	T165	Clavi 4	T229	Nay 3
R426	Classic Piano	R490	Funk	R554	Swing Waltz	T102	FX 6 (goblins)	T166	Nay	T230	Bari & Tenor
R427	80's EP Ballad	R491	16 Beat Shuffle	R555	Pub Piano	T103	FX 7 (echoes)	T167	Oct Harp	T231	Kawala 3
R428	80's Boy Band	R492	Twist2	R556	Jazz Waltz2	T104	FX 8 (sci-fi)	T168	Attack Barafon	T232	Indian Flute 4
R429	Country Ballad2	R493	British Pop 4	R557	Jazz Waltz3	T105	Sitar	T169	Clavi 5	T233	Didgeridoo 4
R430	Country Two Step	R494	British Pop 5	R558	Show Tune	T106	Banjo	T170	Kalimba 2	T234	Attack Clav. 2
R431	Country 6	R495	Hard Rock1	R559	Polka2	T107	Shamisen	T171	Tsugaru 2	T235	Marimba 3
R432	Country 7	R496	Hard Rock2	R560	Ober Polka	T108	Koto	T172	Shamisen 2	T236	Bari & Tenor 2
R433	Finger Pickin	R497	Fusion2	R561	Party Polka	T109	Kalimba	T173	Woodblock 2	T237	Slow Violin
R434	Country Brothers	R498	Fusion3	R562	Pop Mambo	T110	Bagpipe	T174	Crystal 2	T238	Organ Flute
R435	New Country	R499	Funk Shuffl 1	R563	Latin Party Pop	T111	Fiddle	T175	Shamisen 3	T239	Jazz Organ 5
R436	Brisk Country	R500	Funk Shuffl 2	R564	Cumbia2	T112	Shanai	T176	Synth Harpsi.	T240	Electric Viprphone 3
R437	70's Chart Cntry	R501	Fusion Shuffl 1	R565	Parranda	T113	Tinkle Bell	T177	Jazz Organ 2	T241	Dual Horns 3
R438	Hoedown	R502	Fusion Shuffl 2	R566	Carnival2	T114	Agogo	T178	Viola Attack	T242	Indian Flute 5
R439	Country Shuffle	R503	Club Pop1	R567	BossaNova2	T115	Steel Drums	T179	Viola Attack 2	T243	English Horn 3
R440	Waltz2	R504	Club Pop2	R568	Mambo 2	T116	Woodblock	T180	Hard Barsoon	T244	Dulcimer 2
R441	Cha Cha2	R505	16 Beat Pop1	R569	Mambo 3	T117	Taiko Drum	T181	Mute Barafon 2	T245	Koto 5
R442	Rumba2	R506	16 Beat Pop2	R570	Bolero2	T118	Melodic Tom	T182	Bodhran	T246	Tubular Bells 3

R769	Gospel Sisters2	R837	16 Beat Ballad5	R905	Big Band Shuffle 10
R770	Italian Waltz2	R838	Straight Rock3	R906	Big Band Shuffle 11
R771	Limbo Rock2	R839	Easy Ballad3	R907	Big Band Shuffle 12
R772	Bluegrass2	R840	Forro3	R908	Fast Band 6
R773	Country Brothers2	R841	Fusion6	R909	Fast Band 7
R774	Scand Country3	R842	Funk3	R910	German Waltz2
R775	Scand Country4	R843	Viennese Waltz3	R911	Carnival3
R776	Scand Shuffle2	R844	Show Tune3	R912	Organ Samba3
R777	70's Chart Cntry2	R845	Dixieland3	R913	Reel3
R778	Pub Piano2	R846	Big Band Shuffle7	R914	Gay Gordons3
R779	Polka3	R847	Big Band Shuffle8	R915	Scand Waltz2
R780	Rock Cha Cha3	R848	Big Band Shuffle9	R916	Pop Classics3
R781	Schlager Rock3	R849	Pop Waltz4	R917	Live 8 Beat3
R782	Organ Samba2	R850	USA March3	R918	Power Rock5
R783	Gay Gordons2	R851	Hully Gully3	R919	Acoustic Rock5
R784	Swing Waltz2	R852	Tarantella2	R920	Cool 8 Beat4
R785	Reel2	R853	Limbo Rock3	R921	Uptempo 8Beat3
R786	Movie Ballad2	R854	Swing Waltz3	R922	90's Rock Ballad3
R787	Cool Pop2	R855	Pub Piano3	R923	Chart Rock Shf14
R788	Rock & Roll Shf13	R856	Jazz Waltz 5	R924	Brit Pop4
R789	Hard Rock3	R857	Jazz Waltz 6	R925	Brazilian Samba3
R790	Hard Rock4	R858	Show Tune4	R926	Brit Pop Swing4
R791	Club Pop4	R859	Polka4	R927	60's 8 Beat3
R792	8 Beat Pop3	R860	Ober Polka3	R928	Fast Bossa4
R793	8 Beat Pop4	R861	Party Polka2	R929	60's Guitar Pop4
R794	60's Rock 4	R862	Waltz3	R930	70's 8 Beat2
R795	16 Beat Ballad4	R863	Cha Cha3	R931	90's Guitar Pop2
R796	Straight Rock2	R864	Rumba4	R932	Soft Rock3
R797	Easy Ballad2	R865	Jive4	R933	Chart Guita rPop2
R798	Pop Mambo2	R866	Pasodoble3	R934	Guijira4
R799	BossaNova3	R867	Samba5	R935	Easy Listening3
R800	Forro2	R868	Samba6	R936	Bebop2
R801	Pop Classics2	R869	Schlager Rock5	R937	Orch Big Band3
R802	Live 8 Beat2	R870	Schlager Rock6	R938	Big Band Fast4
R803	Power Rock4	R871	Foxtrot4	R939	Orchestra Swing6
R804	Acoustic Rock4	R872	Viennese Waltz4	R940	Orchestra Swing7
R805	Cool 8 Beat3	R873	Tango8	R941	Rock Cha Cha4
R806	Uptempo 8Beat2	R874	Tango9	R942	Organ Swing2
R807	90's Rock Ballad2	R875	Country Ballad5	R943	Secret Service2
R808	Chart Rock Shf13	R876	Country Two Step2	R944	Animation Bl2
R809	Brit Pop3	R877	Country 8	R945	Christmas Waltz2
R810	Brazilian Samba2	R878	Country 9	R946	Frankly Soul2
R811	Brit Pop Swing3	R879	Finger Pickin3	R947	Jazz Funk2
R812	60's 8 Beat2	R880	Country Brothers3	R948	Classic Big Band2
R813	Fast Bossa3	R881	New Country2	R949	French Jazz4
R814	60's Guitar Pop3	R882	Easy Country3	R950	Jump Jive2
R815	90's Soul2	R883	70's Chart Cntry3	R951	Mod Big Band Shf14
R816	Guijira3	R884	Hoedown2	R952	Modern Big Band4
R817	Euro Hip Hop3	R885	Country Shuffle2	R953	Pop Gtr Ballad2
R818	Disco Pop3	R886	Schlager Polka3	R954	Ibiza 2002_2
R819	Disco Philly3	R887	Polka Pop4	R955	Euro Trance4
R820	Mod Big BandShf13	R888	Blue Grass 7	R956	6-8 Trance2
R821	Modern Big Band3	R889	Blue Grass 8	R957	Latin DJ's2
R822	8 Beat Adria3	R890	Blue Grass 9	R958	Bomba2
R823	Disco Chocolate3	R891	70's Disco Funk2	R959	Chillout Cafe3
R824	Euro Trance3	R892	Disco Philly4	R960	70's Glam Piano2
R825	Love Song3	R893	Disco House3	R961	French House3
R826	Disco Party3	R894	80's Disco2	R962	English Waltz2
R827	Club Dance3	R895	Swing Fox2	R963	8 Beat Ballad3
R828	Modern Jazz3	R896	Slow Fox2	R964	Club House2
R829	Polka Pop3	R897	Organ Cha Cha2	R965	House3
R830	Fast Band5	R898	Organ Quick Step2	R966	Jazz Gtr Club3
R831	Orchestra Swing5	R899	Cat Groove3	R967	Modern Jazz4
R832	Movie Ballad3	R900	Dixie Jazz2	R968	Acoustic Jazz2
R833	Rock & Roll Shf14	R901	Medium Jazz2	R969	Cool Jazz Ballad2
R834	Hard Rock5	R902	Jazz Big Band2	R970	Modern Jazz Bl2
R835	8 Beat Pop5	R903	Jazz Club2	R971	Modern Pop Bl2
R836	8 Beat Pop6	R904	Ragtime3	R972	Soul R&B2

8.Speed

After pressing the [Speed], you can use **[+/-]** to increase/decrease the speed continuously. The speed control has a total of 270 segments (30~300), and the default value is at the 90th segment after power-on (speed = 120).

9.Transpose

After pressing the [Transpose] button, you can use the **[+/-]** button to transpose. There are 25 segments (-12~12) for the transposition control, and the preset value is in the 13th segment after power-on. Hold **[+/-]** button for more than 1 second, can continuously increase/decrease the transposition. The chord pitch also changes with the transposition value.

10.Dual keyboard

Press [Dual Keyboard] button for the first time to activate the dual keyboard function, and press [Dual Keyboard] button for the second time to cancel the dual keyboard function. When the dual keyboard function is activated, the scales of the left keys A1 ~ B4 will be played corresponding to the scales of A2 ~ B5, and the scales of the right keys C5 ~ C9 will be played corresponding to the scales of C4 ~ C8. You can use the **[+]** **[-]** keys to select the main tone to replace the tone of the right key.

11.Keyboard drums

Press [Keyboard Drum] button for the first time to activate the keyboard drum function, and press [Keyboard Drum] button for the second time to cancel the keyboard drum function. When the keyboard drum function is activated, the corresponding drum sound will be played when you play the key.

12. Lesson

Press [Lesson] button for the first time to enter the single-key mode, and press [Lesson] button for the second time to exit the single-key mode.

After entering the single-key mode, use the current song to teach,

After the song is played, if the user presses the keys at will, it is the main melody. If the main melody does not reach the next bar, the background sound will repeat the bar until the end of the song.

Press [Lesson] for the third time to enter the follow-up mode. Press [Lesson] for the fourth time to exit the follow-up mode. After entering the follow-up mode, use the current song to teach. After the song is played, the main melody will not be played. The user must press the corresponding key according to the notes displayed on the digital tube to continue playing the next note. The background sound will play the section repeatedly until the song ends.

Press [Lesson] for the fifth time to enter ensemble mode, and press [Lesson] for the sixth time to exit ensemble mode. After entering the ensemble mode, the current song is used for teaching. After the song is played, the user can play the keys at will and interrupt the main chords. If no keys are pressed after 5 seconds, the main chord will resume playback on its own. The background sound plays in full until the song ends and the teaching will be repeated. After the song ends, will ensemble the next song.

13.Start/stop

Press the [Start/Stop] button for the first time to start playing the rhythm, and press the [Start/Stop] button for the second time to stop playing the rhythm.

Exit this mode under the mode of teaching, recording, playback, metronome, demo music, etc.

14. Volume **-/+**

There are **[+]** and **[-]** sequential selection, a total of 2 keys. Can be used to select the tone, rhythm, song, volume, accompaniment volume, speed, transpose quickly.

If the number pressed exceeds the maximum number of tone, rhythms or songs, the original value will be maintained.

15.Sync/Velocity

Press [Sync] for the first time to enter the sync mode, and press the [Sync] for the second time to exit the sync mode. When entering the sync mode, stop playing the rhythm, and then press the first 34 keys to automatically play the selected rhythm (chord). For the chord synchronization part, please refer to the single fingering accompaniment or multi-fingering accompaniment instructions.

(The default value of power on is the velocity off. Press and hold this key for 5 seconds to control the velocity on/off.)

FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled

environment. This equipment should be installed and operated with minimum distance 20cm between

the radiator& your body. This transmitter must not be located or operating in conjunction with any other antenna or transmitter.

ISED RSS Warning/ISED RF Exposure Statement

ISED RSS Warning:

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

ISED RF exposure statement:

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator& your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Le rayonnement de la classe b repecte ISED fixaient un environnement non contrôlés. Installation et mise en œuvre de ce matériel devrait avec échangeur distance minimale entre 20 cm ton corps. Lanceurs ou ne peuvent pas coexister cette antenne ou capteurs avec d'autres.

ISED RF exposure statement:

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement.

Le matériel est conforme aux limites de dose d'exposition aux rayonnements énoncés pour un autre environnement. Ce dispositif a été évalué à satisfaire l'exigence générale de l'exposition aux rf.

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.