

**NR-8803W**

WIRELESS

SPEAKER & KARAOKE MICROPHONE



User manual

Dear customer:

Thank you for choosing our product, please read all the instructions carefully and retain the manual for future use.

Presentation of the product



Speaker and microphone charging

Wireless speakers and microphones have built-in rechargeable lithium batteries. When the battery runs out, the speaker and microphone will automatically turn off. Please charge your speakers and microphones promptly.

Charging method:

■ Plug the Type-C end of the charging cable into the charging port of the speaker or microphone, and plug the other side into the charger slot or the USB port of the computer/other USB charging device used on the USB charging device. When charging successfully, the indicator light under the charging port will be shining red LED, and the red LED light will turn off when the speaker is fully charged.

Important reminder

- Do not disassemble, repair or modify the speaker without authorization.
- The speaker contains a built-in lithium-ion battery, please do not discard the battery or put the speaker in the fire.
- Do not expose the speaker to rain or humid environment to prevent the speaker from being damaged.
- Do not expose the speaker to the sun or high temperature environment to prevent the speaker from being damaged.
- Do not charge the device repeatedly for a long time to avoid accelerated aging of the built-in lithium-ion battery.

Instructions for wireless microphone

- Long press the **○** key to turn on the power of the speaker.
- Short press the **-** or **+** key to adjust a comfortable volume.
- Long press the **○** key to turn on the microphone, then it will connect to the speaker automatically.
- When the microphone pairing is complete, the indicator LED will shining blue light.

Action buttons

Action buttons	Use features
Long press ○ key	Microphone:Power on/off
Short twice ○ key	Speaker control:Play/Pause
Long press + key	Speaker control:Next song
Long press - key	Speaker control:Previous song
Short press EFF key	Different effect of voice
Long press EFF key	Turn on/off the original sound



Instructions for wireless speaker

- Long press the **○** key to turn on the power of the speaker.
- Short press the **-** or **+** key to adjust a comfortable volume.
- Power on:flash blue light, connected:blue light always on, Power off: the light turn off.
- Wireless connection would be the start-up mode when the speaker is turned on, ready for your wireless device.
- USB mode&TF card mode: the speaker will play songs automatically when when insert USB or TF Card.
- When the speaker is not in use, please turn off.

Press twice **○** key

Turn off the microphone vocals

Short press **+** key

Microphone:Volume increase

Short press **-** key

Microphone:Volume decrease

Short press: press once

Long press: hold for 2 seconds

Wireless connection

- Turn on speaker power, select wireless paring name "NR-8803W" in your device(phone,tablet,etc.), then wireless connected.
- Power on:flash blue light, connected: blue light on. Power off: the light turn off.
- The speaker will reconnect to the last paired wireless device automatically when power on.

USB/TF Card mode

- Insert the USB or TF Card, Music will play automatically.

Aux input mode

- Use the included 3.5mm auxiliary cable to connect the speaker to other audio sources devices. Music will play. Control the playlist previous or next songs only from audio sources devices.
- Short press the **EFF** button on the microphone twice to turn off the pure singing function.
- In order to save power, please remember to turn off BT speaker and microphones when you are not using them.

Tip:

Please Long press the **○** switch to turn OFF the power of the speaker

Magic voice on the microphone

- Turn on the speaker and microphone to ensure that both are paired successfully.
- Press the **EFF** button on the microphone to change voice modes:Remix effect / Echo effect / Male voice / Female voice / Children's voice,etc.

How to use

Mode	How to fuction	Functional effects
Wireless/TF Card/USB/Aux input modes	Short press + key	Volume up
	Short press - key	Volume down
	Short press ○ key	Switch to Play/Pause
	Long press - key	Previous track
Wireless/TF Card/USB modes	Long press + key	Next track

Troubleshooting

Problem	Possible cause	Solution
Low sound level	Source (Tablet, Mobile phone, Laptop, etc.) volume too low.	Adjust source volume
Low battery or battery dead	Low battery or replace battery	Low battery or replace battery
Sound distorted	Low battery or battery nearly dead	Low battery or replace battery

No sound at all

- Source (Tablet, Mobile phone, Laptop, etc.) turned off.
- Speaker turned off
- Media paused on source

■ Turn the speaker on

Wireless cannot connect

- There are short functional obstacles in the product.

■ Restart the speaker

Speaker has been connected with other devices

- Disable wireless of other source devices and search for wireless again

Microphone specifications

Built-In rechargeable battery	3.7V / 800mAh
Operating frequency	2.4G

Sound specifications

Wireless version	5.3 + EDR
Wireless distance	up to 10 metres
Woofer Output Power	20W + 20W
Tweeter Output Power	10W + 10W
Horn size	3.5inchx2,1.2inchx2
Unit size	L350 x W145.6 x H195.1 mm
Power input	DC 5V 2A
Charging time	5 hours
Play time	4 hours (70% Volume)
Built-In rechargeable battery	4000mAh
Micro TF card/USB flash drive slot	Support up to 32GB
Multiple functions	Wireless play / Colorful lights USB flash drive / Micro TF card / AUX input

Care & Maintenance

Read the following recommendations before using the wireless speaker. Following these you will be able to enjoy the product for many years.

- Do not expose the unit to liquid, moisture or humidity to avoid the product's circuit being affected.
- Do not use abrasive cleaning solvents to clean the unit.
- Do not expose the unit to extremely high low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Do not dispose of the unit in fire as it will result in an explosion.
- Do not expose the unit to contact with sharp objects as this will cause scratches and damage.
- Do not let the unit fall down onto the floor, the internal circuit might get damaged.
- Do not attempt to disassemble the unit as it may get damaged if you are not professional.

RoHS



MADE IN CHINA



CE



FCC



WEEE



Recycling

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.