


Diagram Location of Controls

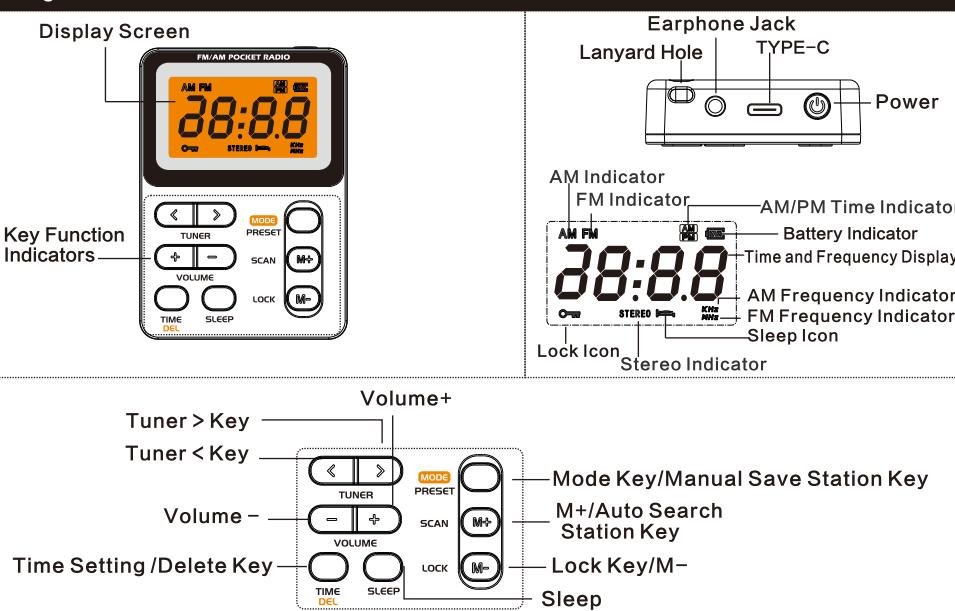

Product Parameter

Power supply	lithium battery	Battery capacity	600mAh
Charging voltage	5V	Charging port	TYPE-C
Product size	80x57x17mm	Product weight	65g
Radio Frequency		FM 87-108 MHz, AM 522-1710 KHz (Europe)	
		FM 87-108 MHz, AM 520-1710 KHz (USA / North America)	
		FM 76-108 MHz, AM 522-1710 KHz (Japan)	
Included items	Radio, USB Cable 3.5mm Earphone, Lanyard, Bag, Box		

Product Function Introduction

Power on/off

Long press the “POWER” button to turn on the device and the display clock will enter standby mode. Press the “POWER” button to enter the radio mode. Press “POWER” button again to return to the clock state. Long press “POWER” button to turn off the device.

MODE Key Introduction

In the radio mode, press the “MODE” key to switch FM、AM.

Tuner Function

In the radio mode, press “TUNER>” or “TUNER<” to adjust frequencies by stepping forward or backward. Long press the “TUNER>” or “TUNER<” key to quickly search radio stations forward or backward. When a radio station is received, the search will stop and the radio station received will begin to play.

Scan Function

In the radio mode, long press “SCAN/M+” key to enter automatic search and store stations. The available stations will automatically numbered and stored from low to high frequencies according to P01, P02-----. The FM/AM programs can store 50 stations separately.

Note: The scanned stored stations and PRESET stored stations share the storage space of the 50 stations.

Memory + / Memory – Function

After scanning the stored radio, press the M+ or M- key to play the stored radio stations.

Preset Function

When listening to the radio, press and hold the "MODE/PRESET" button, the screen will show the location number of the saved station (e.g. P16), and wait for 2 seconds to finish saving. The manually saved station is automatically saved at the end of the automatically saved station location.

Please note that all saved stations (including manually saved stations) will be overwritten when searching stations automatically.

Time Settings

In the clock model, long press “TIME/DEL” key, enter the time setting. At the same time, the screen flashes for 24H or 12H. Press “TUNER <” key or “TUNER>” key to switch 12H or 24H, press “TIME/DEL” key again, the 12H or 24H will be confirmed. Meanwhile hour-digit flashing, press “TUNER<” key or “TUNER>” key to adjust hour-digit time. Press “TIME/DEL” key again, hour-digit will be confirmed while minute-digit flashes, press “TUNER+” key or “TUNER-” key adjust minute-digit time. Press the “TIME/DEL” key again to complete the setup and exit the TIME setting.(The system will return to the main screen automatically if no operation within 10 seconds.)

Lock Function

Long press “M-/LOCK” key, the lock icon “” will appear on the screen, which indicates the system has entered the keys locked mode, if you press other keys they will not function and the lock icon “” will appear on the screen. Long press the “M-/LOCK” key and the lock icon “” will disappear and all the keys return to the normal function.

Volume Function

Press the “VOLUME +” or “VOLUME -” to adjust the volume. Long press to quickly adjust the volume.

Switch countries

In standby state, long press the MODE/PRESET key, three regions including USA (USA), JAP (Japan) or EUP(Europe) are displayed on the screen. In this case, press the volume + or - to switch the corresponding region.

After the switch is completed, wait for three seconds, it will automatically return to the time state and then the corresponding region or country will be switched. (This function is convenient to listen to the local radio programs when traveling abroad. Do not use this option easily)

5

Notes for Listening to the Radio

When listening to FM programs, the device is used as an FM antenna with earphones. The device is built-in AM antenna, when listening to AM programs, try to avoid listening in the environment with strong electronic interference, so as not to affect the listening effect. When the AM signal is not very stable, please adjust the device Angle to find the best listening position.

NOTE:

This device is used as an FM antenna with earphones. Please make sure that the earphones have been plugged in before searching the FM station.

Important Safety Instructions :

1. For safety purposes, please read carefully this manual before use and follow the rules stated in it.
2. Please keep the product away from direct sunlight, high temperature and dampness.
3. Please do not use such powerful solvent to clean the product.
4. Please keep the product and the accessories out of the reach of children to prevent any danger.
5. Non-professional people are prohibited from disassembling or repairing the product without authorization.

7

Delete function

In the radio mode, long press the TIME/DEL key, P-- appears on the screen, and the currently playing station is deleted. Please note that deleted stations cannot be restored.

Sleep Function

In standby or radio mode, press the “SLEEP” key to enter the SLEEP mode setting, and the screen will display 90-60-45-30-15-10-off successively. When the time is set to OFF, the sleep function will be canceled. The Sleep icon “” flashes when SLEEP is active.

Notes for Charging

The device is equipped with a micro-USB 5V charging cable. When the low battery icon “” flashes, it indicates that the battery is nearly exhausted. Please charge the device as soon as possible. While charging, the battery icon shown on the display moves from right to left and stops when the battery is full charged. Prior to using for the first time charge the lithium battery for 3 hours. After the first time, charging time should be about 1.5 hours, which can last for about 15 hours.

(After being fully charged, put away the charging line for next use. Try not to charge for too long, which will affect the battery and the whole machine life.)

6

6. Please charge the product using the power adaptor of the rated voltage (5V). To ensure the receiving effect.
7. Use the lowest volume necessary to protect your hearing.
8. Small parts, Not for children under 3 years.
9. If the user finishes using the unit, the unit will automatically turn off the screen after 10 minutes of standby. Press the Power button to light up the screen and return to standby mode.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

8