

S9 wireless karaoke speaker	S9 wireless Bluetooth speaker User manual Please read carefully before use ❶ Mode conversion ❷ Volume up/previous track ❸ Volume decrease/next track ❹ Pause/Play ❺ Power on/off ❻ AUX interface ❼ TF card interface ❽ USB interface ❾ Charging interface	Please read the manual carefully before use and save it for future use! Packaging List Portable audio system * 1 Charging cable * 1 Microphones * 2 Carrying strap * 1 USB mode Insert the USB drive into the USB slot, and the speaker will automatically switch to USB mode and play the songs stored in the USB drive Charging port Type - C adapter input charging Microphone Wireless Bluetooth connection TF card mode Inserting the TF/SD card into the slot will automatically switch the speaker to TF card mode and play the songs stored in the TS/SD card Charging indicator light When charging the speaker, the indicator light remains red and on for a long time. When the speaker is fully charged, the speaker indicator light goes out Charging mode When the battery level of the speaker is below 20%, the speaker will display a "low battery" prompt This product is not sold with a power adapter. If consumers use a power adapter for power supply, they should purchase a matching power adapter that has obtained CCC certification and meets standard requirements. The output specifications of the adapter should comply with DC5V2A	Parameter specifications Model : S9 wireless Bluetooth speaker Bluetooth version : 5.1 Power : 10W * 2 Speaker Diameter : 52 MM Bluetooth link distance : 10M Battery capacity : 3200MAH Play time : 5-6H (50% volume) Charging time : 1-2h Input : 5V-1A Speaker size : 202 * 80 * 90mm Speaker weight : 0.98kg Health maintenance - Do not use any form of detergent or cleaning agent to clean the product, as any type of chemical substance may render this device unusable. - Do not disassemble this product as it does not contain user repairable components. - Please do not fall or step on the speaker. - Please place this speaker in a dry place. Dust, dirt, and moisture can all cause damage to the speaker. - Do not place this product in a fire, as the battery may explode or leak.	Bluetooth function operation instructions 1. When turned on, the speaker defaults to Bluetooth search mode, with a blue light flashing quickly and waiting for pairing. 2. Open the phone, enter the "Device" menu option, find the Bluetooth function option, click the scan button, and wait until the product model is found and connected. Wireless charging microphone function description Instructions for using a wireless charging microphone connection: Press and hold the microphone power button to turn on the device. The screen will display the default frequency value, and the speaker and wireless charging microphone will automatically connect successfully; In the power on state, long press the microphone power button, and the screen will turn off to indicate that the microphone is turned off Microphone Instructions	A: Power button Long press for 3-5S : turn on / turn off; Double click : pause / play; Short press : (switch mode - reverb adjustment - accompaniment adjustment - microphone adjustment) B: Plus Short press : (microphone volume increase/accompaniment volume increase/reverb effect increase) Long press : Next song C: Reduce Short press : decrease in microphone volume/decrease in accompaniment volume/decrease in reverb effect; Long press : Previous track D: Mic function keys Short press : switch sound effects (shout mode/female to male/ male to female/baby sound/magic sound); Long press : (The original sound / Cancel the original sound)
--	--	--	---	---	--

S9 说明书

材质:105G铜版,正反面印刷

折后尺寸：70×90mm