 


210x292mm

 
claire's

BLUETOOTH® KARAOKE MICROPHONE
WITH VOCAL EFFECTS


AGES
6+

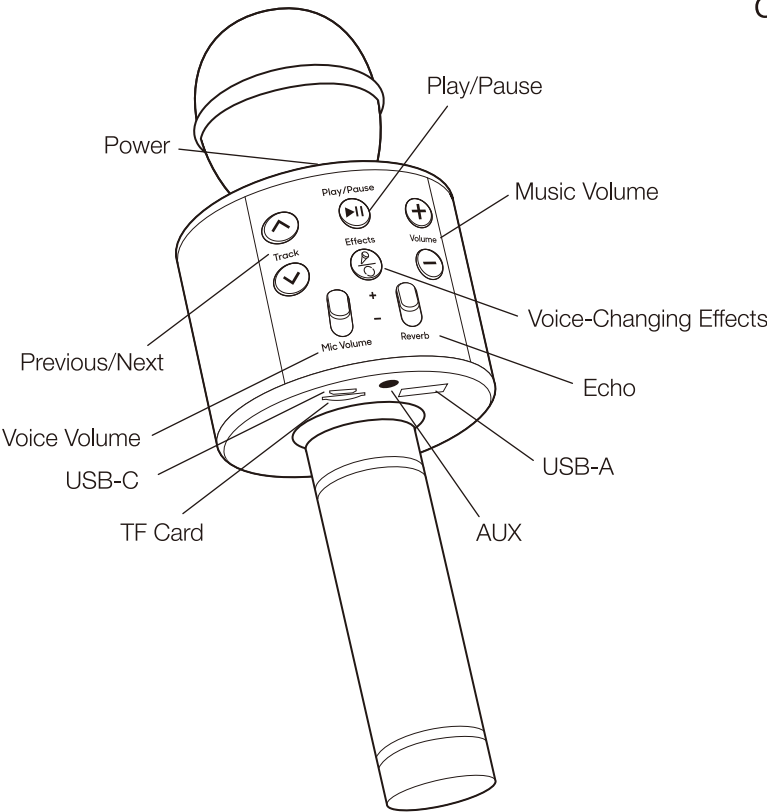

CONTENTS

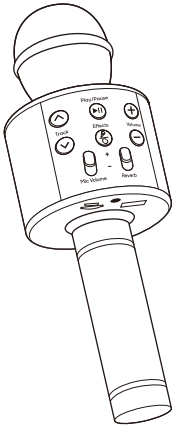

1 Microphone

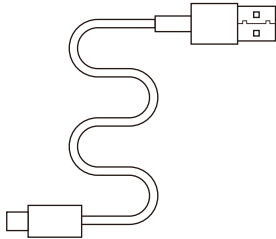 

1 USB-C to USB-A Power Cable

SAFETY WARNINGS

- Adult supervision required.
- Microphone is not water resistant. Do not expose to liquids other than to a damp cloth.
- Do not ingest any items included in this set.
- Use this product only for its intended purpose. Do not use attachments of any kind.
- Inspect product before every use. If product appears damaged in any manner, discontinue use and discard immediately.
- Put this product into its package when not in use and store in a cool, dry location protected from direct sunlight.

BATTERY WARNINGS

- This product contains batteries that are non-replaceable.
- There is a risk of fire and personal injury if battery is punctured, damaged, or misused.
- Do not dismantle, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- Only charge using the provided charger, cable, and/or adapters.
- Rechargeable battery is only to be charged by an adult.
- Adult supervision is required while charging the battery.
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
- Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts. In the event of such damage, chargers must not be used until the damage has been repaired.
- Recycle or dispose of battery according to federal, state, and local laws.
- Keep these instructions for future reference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Model No.: 1019573



™ & ©CBI Distributing Corp, 2025. All rights reserved. Distributed by and ©2023, 2024 MerchSource, LLC. Irvine, CA 92618. All rights reserved.

Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

Android is a trademark of Google LLC.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Computers, tablets, Smart Phones, and music players must have built-in BLUETOOTH® wireless technology to connect. This product is not affiliated with or endorsed by any of the above mentioned, referenced or pictured trademarks, companies or devices.

For customer support, please visit www.msccustomercare.com or call 1-800-374-2744.

Printed in China.

KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE.

 
Due to continuous product improvements, the illustrations in this manual may differ slightly from the actual product.




WARNING:

CHOKING HAZARD - Small Parts.
Not for Children under 3 years of age.


GETTING STARTED

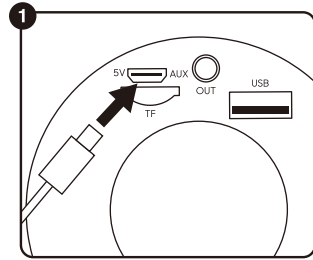

 Insert the USB-C cable into the charging port. Insert the USB-A side into a power source. The LED near the charging port will turn on.

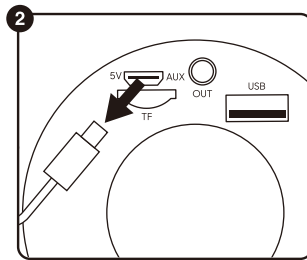


 Once fully charged, the LED will turn off. Disconnect the cable.

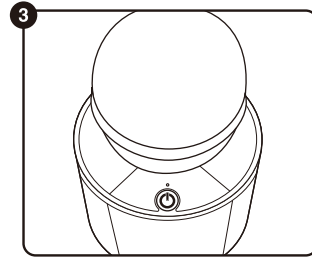


Press and hold the **Power** button for 2 seconds to power on and off.

 
CONNECTING YOUR DEVICE

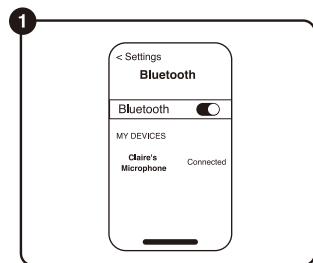

 
The microphone will default to Bluetooth mode. Go to your Bluetooth-enabled device's Bluetooth menu and select "Claire's Microphone". (Max range: Up to 80 ft / 24.38 m)

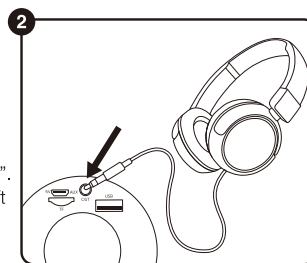

 
You can also listen to music by plugging headphones into the AUX jack.

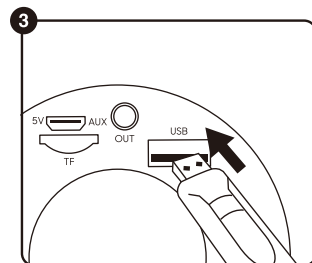

 To play music from a USB drive, plug the USB flash drive into the USB-A port on the bottom of the microphone.

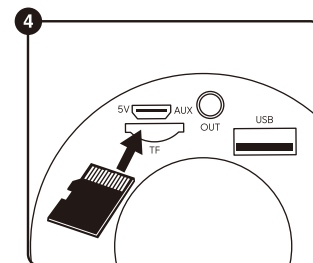


 To play music from a TF card, plug the TF card into the TF card slot on the bottom of the microphone.

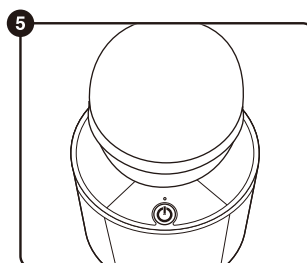


To change between Bluetooth, USB, and TF card modes, short press the power button after your device is connected.

 
CONTROLS

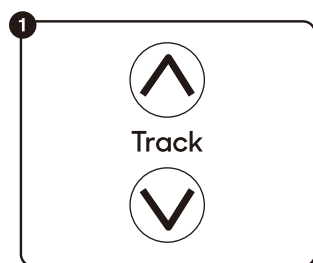


Press to go to the previous/next song.

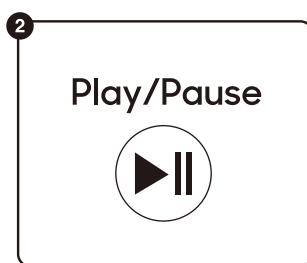 


Press to play/pause the music.

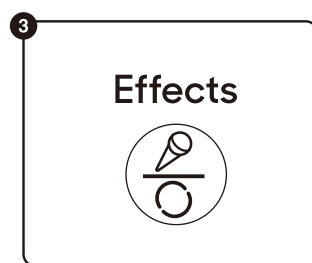 

 
Press and hold to cycle through 4 voice-changing special effects. When the music is playing, short press to mute the music and press again to return to normal.

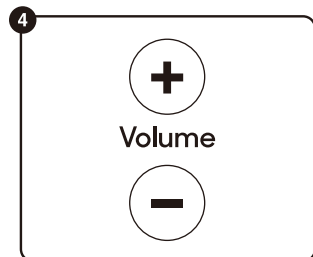

Press to control the music volume.

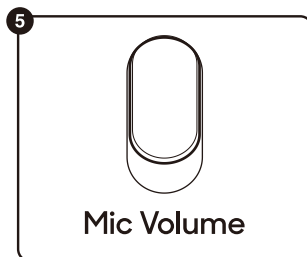 


Slide to control your voice's volume.

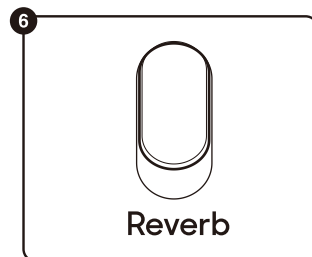 


Slide to control the echo effect. **TIP:** Echo works best when Mic Volume is not at the max.

 
SELFIE MODE

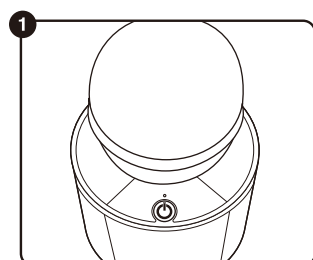

 After powering on the microphone, short press the **Power** button 1 time.

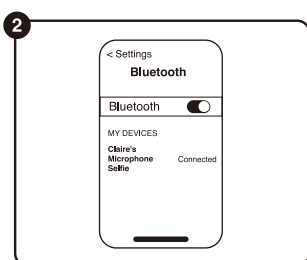

 Go to your Bluetooth-enabled device's Bluetooth menu and select "Claire's Microphone - Selfie".

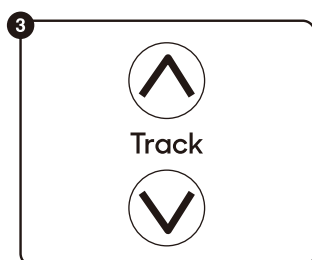

Press either Track arrow to take a selfie.