





阿凡达50 PRO中英文中性说明书 尺寸:83*86mm*7页 材质:105g双铜单黑双面印刷

<div></div> <div>无线耳机 使用说明书</div>	<div></div> <div>[1]</div>	<div>产品参数</div> <div><ul style="list-style-type: none">无线版本: V5.4工作范围:无障碍10米无线频率:2.402-2.480GHz充电盒容量:3.7V, 300mAh充电输入:DC 5V-500mA充电时间:约2小时耳机内置电池:3.7V, 30mAh*2播放音乐:约4.5小时 (80%音量)通话时间:约4小时 (80%音量)充电盒给耳机充电次数:约4次充电循环:≥300次充电端口:Type-C</div> <div>注:本产品规格参数均为实验室测试数据,不同环境使用会有所不同;产品不断升级改进,具体功能和产品图片可能与实物略有不同,请以实物为准。</div>	<div>操作方式-耳机</div> <div><ul style="list-style-type: none">开机:打开充电盒盖,耳机自动开机,等待蓝牙连接关机:耳机放入充电盒,并关闭充电盒盖配对模式:耳机开机后自动进入配对模式暂停/播放:单击左或右耳机接听/挂断:单击左或右耳机接听来电:单击左或右耳机来电拒接:长按左或右耳机2秒下一曲:三击右耳机上一曲:三击左耳机音量+:向下滑动左/右耳机减小音量音量-:向上滑动左/右耳机增加音量语音助手:长按左耳机2秒ANC降噪功能:长按右耳机2秒,ANC ON-ANC OFF-通透模式循环操作音乐模式(默认):在游戏模式下,4击左或右耳机切换到音乐模式清除配对设备列表:同时6击左或右耳机入耳检测:安卓默认关闭,iOS默认开启,5击可开启或关闭入耳检测</div>	<div>操作方式-充电盒彩屏</div> <div><ul style="list-style-type: none">充电仓开机:首次使用时需充电激活耳机,或长按背面按键6秒开机充电仓关机:双击背面按键选择关机(界面显示:关机/重启/恢复出厂设置)暂停/播放:上下曲:中间图标“播放”“暂停”,左图标上一曲,右图标下一曲音量+/-:左图标减小音量,右图标增加音量均衡器界面:点击左/右图标,可以切换音效设置两种:可以设置5分钟,10分钟,30分钟,60分钟调节屏幕亮度:左图标降低亮度,右图标增加亮度(增加亮度耗电越快)语音切换:点击左/右图标进行语音切换设置降噪模式:点击左/右图标可更换降噪模式查找耳机:点击L/R,界面出现,点击开始,对应L/R耳机发出声音,点击停止结束时间设置:可以手动更改时间和保存(因充电仓长久不用时间不准,耳机连接上手机后,将时间自动重置)锁屏点亮功能:点击中间心形图标给锁屏点亮,点击左/右图标切换到锁屏上按下下一个锁屏播放(iOS手机需开启辅助触控的触控辅助功能)拍照控制功能:先开启手机上的相机功能,再点击彩屏上的拍照图标,即可控制手机拍照</div>	<div>充电</div> <div><ul style="list-style-type: none">耳机电量提醒:当电池电压低于3.3V时,每隔1分钟提醒一次耳机充电:耳机放入充电盒,关闭盖子后自动充电,约1.5小时充满充电盒电量提醒:电量低于10%时,充电仓图标显示红色(充电仓电压低于3.4V时,充电仓自动关机,彩屏不显示)充电盒充电:彩屏显示充电图标,30秒后熄灭,约1.5小时充满</div> <div>通用无线连接操作</div> <div><ol style="list-style-type: none">请将无线耳机和手机(或其他连接设备)放在一起;确保耳机有电状态,打开充电盒盖子,左右耳机已互相连接,耳机即可进入配对模式;开启用户手机(或其他蓝牙设备)蓝牙功能,并进行搜索或扫描,此时手机会搜索到附近所有的蓝牙耳机,点击连接对应的蓝牙型号名称,成功配对连接后,即可进行耳机通话、听歌等。</div> <div>无线连接时注意事项</div> <div><ol style="list-style-type: none">请将无线耳机和手机(或其他连接设备)的距离控制在1米的范围内,越近越好;</div>	<div>2. 打开充电盒盖子即可连接;</div> <div>3. 取出连接时,确保左右耳机互连且已开启状态;</div> <div>4. 充电盒需要有足够电量,如取出耳机不能开机,请将耳机放入充电盒中,关盒盖插上充电线最少充电一小时上;</div> <div>注意事项</div> <div><ol style="list-style-type: none">切勿使用具有腐蚀性的清洁剂清洗本产品;切勿让本产品加热或靠近火源,如煮食炉;切勿让本产品长时间受阳光直接照射,避免高温;切勿将本产品放置于火中,避免发生火灾;切勿在雨中或使用本产品,请您将它存放在干燥的环境中,并每月至少为耳机充电一次以延长寿命,避免极端的湿度和灰尘。</div> <div>※首次使用时需充电或长按背面按键6秒激活充电仓</div>
---	---	--	---	--	--	---

<div></div> <div>Wireless Earphones user manual</div>	<div></div> <div>[1]</div>	<div>Product parameters</div> <div><ul style="list-style-type: none">Wireless version: V5.4Working range: barrier-free 10 metersWireless frequency: 2.402-2.48GHzCharging box capacity: 3.7V, 300mAhCharging input: DC 5V-500mACharging time: about 2 hoursEarphone built-in battery: 3.7V, 30mAh*2Play music: about 4.5 hours (80% volume)Talk time: about 4 hours (80% volume)Number of times the charging case charges the earphones: About 4 timesCharge and discharge cycle: ≥300 timesCharging port: Type-C</div> <div>Note: The specifications and parameters of this product are all laboratory test data, which will be different in different environments; the product is constantly being upgraded and improved, and the specific functions and product picture may be slightly different from the actual product, please refer to the actual product.</div>	<div>Operation Method - Earphones</div> <div><ul style="list-style-type: none">Power on: Open the charging case cover, the headphones will automatically turn on, wait for Wireless connectionPower off: Put the earphones into the charging case, And close the charging case coverPairing mode: The earphones automatically enter pairing mode when turned onPause/Play: Click on the left or right earphonesAnswer incoming calls: Click on the left or right earphonesHang up the phone: Double click on the left or right earphonesCall rejection: Long press the left or right earphones for 2 secondsNext song: Three clicks on the right earphonePrevious song: Three clicks on the left earphoneVolume +: Swipe down the left/right earphones to increase volumeVolume -: Slide up the left/right earphones to decrease volumeVoice assistant: Long press the left earphone for 2 secondsANC noise reduction function: Long press the right earphone for 2 seconds, and the ANC ON/ANC OFF - transparent mode will cycle through operationMusic mode (default): In game mode, switch to music mode by 4 consecutive clicks on the left or right earphonesClear paired device list: Simultaneously clicking on the left and right earphones 6 times in a rowWear detection: Android defaults to off, iOS defaults to on, 5 consecutive clicks can turn on or off in ear detection</div>	<div>Operation method - charging case color screen</div> <div><ul style="list-style-type: none">Charging case Power on: When using it for the first time, it needs to be charged to activate the power on, or long press the button on the back for 6 seconds to turn it onCharging case Power off: Double click the button on the back to select shutdown (interface display: shutdown/instant/restore factory settings)Pause/Play/Up/Down Song: Center icon "Play" and "Pause", left icon for previous song, right icon for next songVolume+/-: Left icon reduces volume, right icon increases volumeEqualizer interface: Click on the left or right icons to switch sound effectsSet alarm clock: can be set for 5 minutes, 10 minutes, 30 minutes, 60 minutesAdjusting screen brightness: The left icon reduces brightness, while the right icon increases brightness (increasing brightness consumes more power)Language switching: Click on the left/right icon to switch languagesSet lock screen wallpaper: Click on the left/right icon to replace the lock screen wallpaperFind headphones: Click on L/R, the interface will appear, click on start, the corresponding L/R headphones will emit sound, click on stop to endTime setting: You can manually change the time and save it (if the charging case is not used for a long time, the time will be automatically updated when the headphones are connected to the phone)Video like function: Click on the heart-shaped icon in the middle to like the video, click on the left/right icon to switch to the previous or next video playback (iOS phones need to enable touch assist in the touch assist function)Photo control function: First, turn on the camera on the phone, then click on the take photo icon on the color screen to control the phone to take photos</div>	<div>charging</div> <div><ul style="list-style-type: none">Reminder of low headphone battery: When the battery voltage is below 3.3V, remind every 1 minuteEarphone charging: Put the earphones into the charging case, close the lid, and automatically charge them. It takes about 1.5 hours to fully charge themLow battery reminder for charging case: When the battery level is below 10%, the charging case icon displays red (When the voltage of the charging case is below 3.4V, the charging case will automatically shut down and the color screen will not display)Charging case charging: The color screen displays the charging icon, which goes off after 30 seconds and takes about 3 hours to fully charge</div> <div>Universal wireless connection operation</div> <div><ol style="list-style-type: none">Please put the wireless headset and mobile phone (or other connected devices) together;Ensure that the earphones are charged, open the charging case cover, and the left and right earphones are connected to each other. The earphones can enter pairing mode;Turn on the Wireless function of the user's mobile phone (or other Wireless device), and search or scan. At this time, the mobile phone will search for all nearby Wireless devices. Click the corresponding Wireless model name to connect. After successfully pairing and connecting, you can make a headset call, Listening to songs, etc.</div>	<div>Considerations when connecting wirelessly</div> <div><ol style="list-style-type: none">Please control the distance between the wireless headset and the mobile phone (or other connected equipment) within 1 meter, the closer the better;Open the charging case cover to connect;When connecting, make sure that the left and right earphones are interconnected and in the on state;The charging box needs to have enough power. If the headphones cannot be turned on when the cover is opened, put the headphones in the charging box, close the cover of the charging box and plug in the charger to charge for at least one hour;</div> <div>Precautions</div> <div><ol style="list-style-type: none">Never use corrosive cleaning agents to clean this product;Do not allow this product to heat or come close to fire sources, such as cooking stoves;Do not expose this product to direct sunlight for a long time to avoid high temperature;Do not dispose of this product in fire to avoid explosion;Do not try to disassemble this product to make any modifications, because it does not contain any maintenance components;Do not use this product in the rain;If you do not plan to use this product for a long period of time, please store it in a dry environment. And change the headset at least once a month to extend the life and avoid extreme temperatures and dust.</div> <div>※ First use requires charging or long pressing the button for 6 seconds to activate the charging case</div>
--	--	---	--	--	---	--

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction