L097 Ulanzi AL120【大白】充气式摄影补光灯_说明书


尺寸:105*142.5mm 材质:100g书纸,双面印刷,骑马钉

105mm Ulanzı 142.5mm Inflatable LED Light 【大白】充气式摄影补光灯 AL120

前言 感谢您购买优篮子产品 重要提示 • 请认真阅读本说明书。 • 请妥善保管说明书。将产品交给他人使用时,请务必附带本说明书。 • 请注意所有警告提示并遵守说明书内的所有指令。 ▲ 警告 请勿将本产品放置在有腐蚀性化学物品的地方,以免产品受到腐蚀,被腐蚀 可能引起产品故障。 • 请用软布、干布清洁本产品。 · 本产品属于精密仪器,请避免使用时掉落、碰撞或承受重击。 • 请勿将本产品放置在温度过高的地方,高温可能导致产品内电池受损或爆炸。

,需要维修时请联系授权的维修人员。本产品内有精密电子线路。未经许可擅 自拆卸导致故 障,不在本司保修范围内,但用户可以付费维修。 ・ 建议使用优篮子原厂线缆。由于使用非优篮子原厂附件导致本产品的任何损坏,不在本司 保修范围内,但用户可以付费维修。 ・本产品已经过 RoHS 和 CE 认证,请参考相关国家标准使用和操作。因使用操作不当而造 成机器损坏,不在保修范围内,但用户可以付费维修。 此说明书依据本公司严格测试制定。设计和规格如有变更,恕不另行通知。 设备的规范使用

• 仔细阅读本说明书,特别是"重要提示"部分。 · 在本说明书规定的工作条件下使用和保存本产品。 • 如不按照本说明书使用产品,或不遵守规定的工作或保存条件,将被视为违规使用。 充电宝支架 *1

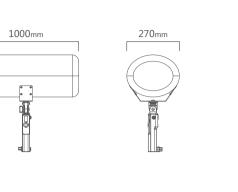


绑带 *1




安装方法 注意: 先充气,充好气再接电源,再开灯。 1 展开未充气的灯体 2 把气柱一端的出气孔气塞,按压紧。 柱进行充气;待气柱完全充饱,按压气泵 位置卡住气柱背面灯板的魔术贴,结合牢 5 手柄顶部 1/4 螺丝,对准气柱底部的 C 型金属 6 把灯板连接线,接上手柄的插座孔。 7 如果需要使用灯架,将手柄固定在灯架上, 8 通过 Type-C 线,连接手柄和电源; 打开灯光,

充电宝使用方式

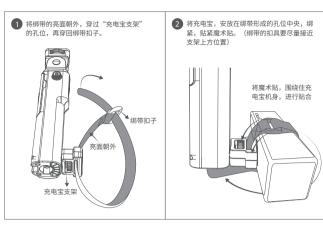

操作指引

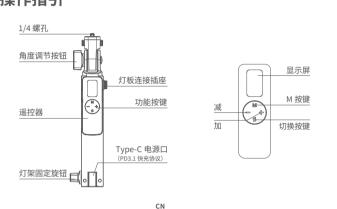

遥控器指引

型号:RC120。"M"键:长按2s开机;短按菜单切换(CCT菜单、FX菜单、MENU菜单) ☞ 蓝牙连接成功 屏幕上蓝牙图标常亮,不成功则图标闪烁。蓝牙连接不成功无法进入开机(解决关机误操作) **1**▶ 长按5s "**1**▶"键,进行对码,对码成功,灯亮灭3下;单击切换二级菜单

按 "-"键降低数值,按 "+"键增加数值,亮度范围 (0~100%)

・遥控器没有放置在手柄上或者手柄没有通电, 10s之内无按键操作屏幕会熄

灭进入待机状态。 - 放置在通电的手柄上,屏幕会常亮。屏幕显示一个空电池符号并闪烁,提示

MENU 单击"M"切换至"MENU"菜单

Low-PWR 电源功率不足提示: Low-PWR

菜单 单击"+"键切换为英文,再单击"-"键切回中文

单击"M"键切换至"CCT"菜单 CCT 单击"**11**"键切换色温/亮度 菜单 色温调节:按 "-"键降低色温,按 "+"键增加色温。色温范围(2700K-6700K) 亮度调节:按"-"键降低亮度,按"+"增加亮度。 亮度范围(0~100%)

按"M"键切换至特效模式 将不在公司的保修范围内: FX 单击"**1**"键切换"FX"菜单/亮度 13. 本设备内部包含精密电子线路,气柱和灯板属于消耗品。未经许可擅自拆卸导致的故障, 将不在公司的保修范围内。您可以选择付费维修,需要维修时请联系授权的维修人员; 14. 损耗品的说明 闪、记者群闪、应急双闪、高低光束) 亮度调节;

注意事项

1. 使用环境应保持干燥、通风;

的污垢,然后用软布将其擦干;

9. LED 灯长时间不用时请切断电源;

能对产品造成损伤;

7. 请勿在儿童伸手可及之内保管本产品;

8. 非专业人士,请勿随便拆卸、否则后果自负;

10. 请遵守此注意事项,否则将可能导致产品损坏;

为了确保您的产品能够长久使用,请注意以下几点: 由于灯板和气柱是由布料制成,它们可能会出现磨损、脏污、发黄。因此,请在使用时

2. 使用中不得有水或其它液体滴入产品中,以免造成内部电路短路,而损坏产品;

4. 移动或安装时,需轻拿轻放,切勿撞击其它物体,以免造成变形或灯体损坏;

6. 请用干软布来清洁摄影 / 摄像灯,您可以用布稍稍沾上一些中性的清洁剂来擦去较难去除

11. 使用时,避免尖锐物品、腐蚀性液体、高温物质,尽量避免挤压、高空跌落,这些都可

12. 建议您使用推荐的充电头规格和线缆。如果因使用非推荐规格的附件而导致本产品损坏,

5. 避免将摄影 / 摄像灯放置在如酒精或汽油等易燃或易挥发的溶剂附近;

3. 灯体稍微有发热为正常现象,注意高温,请不要触摸发光面;

小心轻柔,避免猛烈撕拉,以免损坏; · 请谨慎操作,避免气柱被尖锐物品刺破导致漏气;

• 请妥善保管遥控器,防止遗失。

3. 断开设备供电电源,重新接电

异常场景说明 如果发现遥控器、或者 APP,无法控制灯板,请按照如下步骤操作: 1. 退出手机 APP,确保设备和手机蓝牙断开连接 2. 遥控器安放回手柄,确保遥控器在仓

供电说明

本产品内部不含电池,为保证正常工作,请采用以下方式进行供电:

整机最大输入功率: 136W 灯头最大工作功率: 120W

1. 使用 PD 充电插头供电 建议使用支持 PD 快充协议 140W(28V-5A)规格充电插头进行供电。

2. 使用充电宝供电 为了确保灯板能够达到最佳性能,特别是在需要 100% 亮度使用时,我们建议您搭配使用 C 口单口输出支持 140W 及以上规格的充电宝。

充电宝输出支持: 140W (28V-5A)。 3. 供电线

如果您需要自行购买供电线,请确保选购的线材符合以下规格: 140W、6A的CtoC连接线。 使用不合规格的线材可能会影响设备的充电效率,甚至可能对设备造成损害。为了确保设

备的性能和安全,请使用符合上述规格的线材。

3. 使用完毕后,请务必断开设备的电源。

1. 请先将灯板和手柄通过"灯板连接插座"连接后,再通过 Type-C 电源口给设备通电; 2. 设备通电时,禁止用手触碰手柄上的"灯板连接插座";

供电注意事项

Preface

Thank you for choosing ULANZI products.

Important Hint

 Please read this manual carefully. Please keep the instructions properly. When giving the product to others for use, be sure to include

this instruction manual. • Please heed all warnings and follow all instructions in the manual.

A Warning

Do not place this product in an area with corrosiv and potential product malfunction. Use only a soft and dry cloth for cleaning the product.

• Do not leave the product in excessive heat, high temperature can cause the product to malfunction. Please have the product check by the authorized service or agent of your product has some porblems. Please note that this warranty does not apply to repair arising out of the malfunction of the unauthorized disassemble, althought you may request such repairs on a chargeable basis.


repairs arising out of the malfunction of non-original accessories, although you may request such

operation standards. Please note that this warranty does not apply to repairs arising from malfunction, although you may request such repairs on a chargeable basis. procedures. Further notice will not be given if the design and specifications change.

Standard Use Of Equipment

• Please read these instructions for use carefully, especially the "Important information" section • Please use and store the product under the working conditions specified in this manual. • Improper use means using the products other than as described in these instructions or under operating conditions which differ from those described herein.

Product View

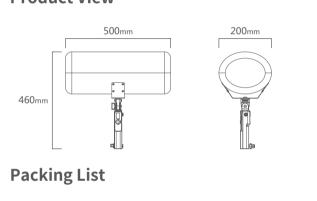



Power Bank Stand*1 Type-C*1 Strap*1 User Manual ×1

 * Pictures in this manual are intended for reference only and may not be an exact representation of the

Specifications

Type-C 线

(C to C) *1

*说明书中的插图均为示意图,仅供参考。由于产品不断更新与升级,产品实物与示意图如有差异,请以实物为准。

产品视图

包装清单

手柄 *1

Power Supply	PD3.1 Type-C
Light Dimensions	1000*270*200MM
Grip Dimensions	240*58*68.5 mm
Weight (only the light)	≈ 1129g
FX	INT LOOP, Lighting, TV, Candle, Badbulb, Pulsing, Strobe, Pazzi, EMER, H/L Beam
Temperature\Humidity	The product should be kept in a dry and well-ventilated area, to to prevent chemical reactions and fire. The product needs to be charged every 3 months. Working temperature: 0~40°C, Storage temperature: -10~40°C, Working humidity: < 70%, Storage humidity: < 70%.
Light Range	3-6m
ССТ	2700K-6500K
Lamp Bead	Bi-color
CRI	≥97
Max. Power	120W

procedures. Further notice will not be given if the design and specifications change

Average data from Ulanzi labs, the brightness of different lights may be slightly different

Installation

规格参数

供电方式

灯体尺寸

手柄尺寸

产品重量(裸机)

Type-C口供电,支持PD3.1快充协议


1000*270*200mm

240*58*68.5 mm


2700K-6500K


双色温灯珠

≥97

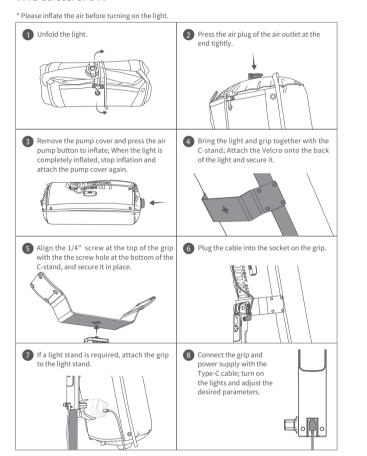

How to attach a power bank

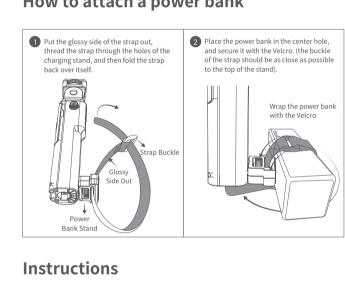

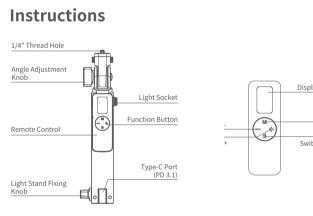

Remote control

Click "M" to switch to "FX" menu;

Click "M" to switch to "MENU";

Low-Power Warning: Low-PWR.

Click "11" to change "FX" menu/dimming;

Badbulb, Pulsing, Strobe, Pazzi, EMER, H/L Beam) Dimming;

Remote turn off and enter the standby mode after 1 minute of inactivity.

Model: RC120. M: Long press for 2s to turn on; short press to switch menu (CCT, FX, MENU). flashes. If you failed to connect the Bluetooth, the light won't be powered on. (Solve the shutdown problem) Long press "11" for 5s to enter pairing. If it is successfully paired, the indicator will flash 3 times; click to switch the submenu.

Dimming(0~100%): press "-" to decrease dimming, press "+" to increase dimming.

FX Mode: cilck "+" or "-" to switch between 10 FX, (INT LOOP, Lighting, TV, Candle

Dimming(0~100%): press "-" to decrease dimming, press "+" to increase dimming.

• If the remote control is not placed on the grip or the grip is not powered, the screen will

always on. When the screen showing a battery symbol indicated it needs to be charged.

Control • When the remote control is placed on the grip which is powered, the display will be

6. Please use a dry soft cloth to clean the light, you can use a cloth slightly moistened with some neutral detergent to clean, and then use a soft cloth to dry it; 7. Keep the product away from children; 8. Never attempt to disassemble it by yourself; Click the "M" to switch to the "CCT" menu: 9. Please turn off the power when it is not used for a long time; Click " \upbeta " to change CCT/dimming; CCT Adjustment(2700K-6700K): press "-" to decrease CCT, press "+" to increase CCT.

10. Please observe this precaution, otherwise it may cause damage to the product; 11. Avoid contact with sharp objects, corrosive liquids and high-temperature substances during use, 12. It is recommended to use charger and cables come with the product. Please note that this warranty does not apply to repairs arising out of the malfunction of non-original accessories, although you may

2. Avoid water or liquids to prevent short-circuiting and damaging the product;

5. Keep it away from flammable or volatile solvents such as alcohol or gasoline;

3. Heating is a normal phenomenon when it is working, please do not touch the light-emitting surface;

4. When moving or installing, please hold it gently and do not hit other objects, so as not to cause

consumables. Please note that this warranty does not apply to repair arising out of the malfunction of the unauthorized disassemble, although you may request such repairs on a chargeable basis. 14. Instructions for Consumables To extend the lifespan of the product, please note the following: • The light panel and air tube are made of fabric, they may be worn, dirty and turn yellowish.

Therefore, please be careful and gentle when using the light and avoid tearing them violently to Please store the remote control properly to avoid getting lost.

13. The product contains electronic circuits inside, and both the air tube and light boards are

Abnormalities

Safety Tips

1. Use the product in dry and vantilated environments;

If you find that the remote control, or APP, cannot control the light, please follow the steps below: 1. Exit the app and make sure the device stay disconnected to your phone. $2. \ Place the remote control back into the handle and make sure the remote control is in the$ compartment. 3. Disconnect the product and then reconnect.

Power Supply

The product does not contain a battery inside it, in order to ensure normal operation, please use the following power supplies to operate: Maximum Input: 136W

Maximum Working Power: 120W 1. PD Charger It is recommended to use a charger that supports PD fast charging protocol 140W (28V=5A). In order to enjoy the ultimate performance, especially when you need to operate at 100% brightness.

we recommend that you use a power bank with Type-C port supporting 100W or above charging. Power bank output: 140W (28V∞5A). Charging Cable If you need to purchase your own power cable, please make sure that the cable you purchase meets

the following specifications: 140W, 6A C to C. Using an incompatible cable may affect the charging speed of the device and may even cause damage to the device.

1. Please connect the light panel and the handle through the "light socket", and then power the device through the Type-C charging port. 2. When the light is working, do not touch the "light socket" to avoid injuries. 3. Please unplug the device after using it.

This device compiles with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Interterence that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio;/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.