

## ⚠️ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



© 2021 MerchSource, LLC. All rights reserved.

Distributed by MerchSource, LLC, Irvine, CA 92618.

For customer support, please visit [www.merchsource.com](http://www.merchsource.com) or call 1-800-374-2744.

The artwork and design of this manual are protected by US copyright law and may not be reproduced, distributed, displayed, published or used for any purpose without prior written permission. It is not permitted to alter, remove or reproduce any trademarks or copyright notice from this manual.

Model Number 1010308

China Patent No. ZL201130504680.0

Printed in China

## PORTABLE ELECTRONIC KEY FINDER



### INSTRUCTIONS

#### IMPORTANT:

KEEP THIS INSTRUCTION MANUAL FOR REFERENCE AS IT CONTAINS IMPORTANT SAFETY INFORMATION.

## INTRODUCTION

The Portable Electronic Key Finder is a device that makes finding keys simple. The everyday hassle of finding lost keys is eliminated with the touch of a button. You can count on an alarm to direct you to your keys. Whether your keys are lying close by or up to 45 feet away, the Portable Electronic Key Finder's wireless transmitter will locate your keys while being carried in-hand with ease. This package includes a remote transmitter, two key ring fobs, and a tabletop cradle for storage.

## CONTENTS

Safety Information and Warnings . . . . .	1
Parts . . . . .	2
Installing Batteries . . . . .	3
Operation . . . . .	4
Battery Warning . . . . .	5

## SAFETY INFORMATION AND WARNINGS

All of the safety and operating instructions should be read, understood and followed before the unit is operated.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Safety Warnings- PLEASE READ CAREFULLY

- This is not a children's product.
- Small parts, especially the button cell batteries, pose a choking hazard to young children.
- If the product appears cracked or broken in any manner, discontinue use and discard immediately.

1

## PARTS

1. Remote Transmitter
2. Transmitter Cradle
3. Key Fobs (2)
4. CR2032 Button Cell Batteries (4) (Not pictured)




2

## INSTALLING BATTERIES

### REMOTE TRANSMITTER

Requires 2 AAA batteries (not included).

1. Grasp the back cover of the transmitter and firmly slide it down to access the battery compartment inside.
2. Insert 2 "AAA" 1.5V batteries into the transmitter, aligning the polarity (+/-) of the batteries to match the labels provided inside the battery compartment.
3. Reattach the back cover of the transmitter. Start by positioning the cover on the device with the top edge aligned at the level of the top-most screws, and then firmly push the entire cover up.

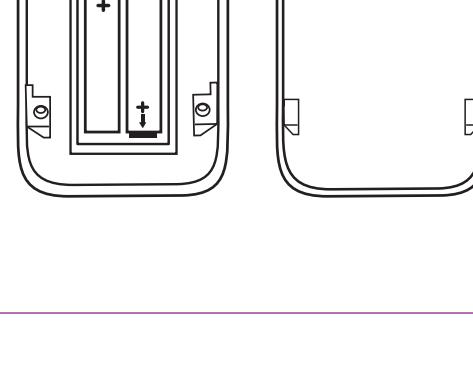

3

## INSTALLING BATTERIES

### FOBS

Each requires one CR2032 (3V) button cell battery (included).

**NOTE:** There are four CR2032 button cell batteries included. Two must be installed prior to your first use and the other two are replacements. Follow these steps for first time installation or if the batteries need to be replaced.

1. Grasp the back cover and screw off counter-clockwise. See Figure A.
2. Insert a new battery into the metal slot, ensuring the "+" side of the battery is facing up. The FOB will make its characteristic beeping sound as it is inserted into the slot.
3. Replace the back cover by screwing it clockwise back onto the FOB. See Figure B.

**NOTE:** Be sure that the "OPEN" markings are facing the bottom as you screw on the cover. This will ensure that the pieces are properly aligned.

## OPERATION


1. Attach the number-coded fobs to key rings or other appropriate devices to be located.
2. Press the corresponding number-coded button on the Remote Transmitter in order to locate the desired fob.

3. If the fob is in range (45 feet in an open area), it will emit an audible beep for a few seconds.

4. If no beep is heard, intermittently press the corresponding button. You may have to change your location if beep is still not heard and continue to intermittently press the corresponding button.

**NOTE:** The Remote Transmitter is portable, it can be removed from the provided Tabletop Cradle and carried with you to locate devices attached to a fob.

4

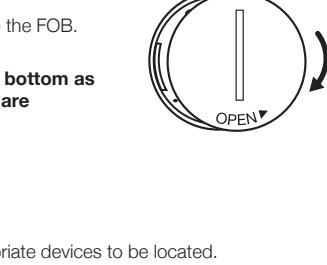

### BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Ensure all batteries are installed correctly according to polarity (+ and -). Do not short-circuit the supply terminals.
- Remove batteries when not in use. Recycle or dispose of exhausted batteries according to federal, state, and local laws. Do NOT dispose of batteries in household trash or incinerate.
- Only use manufacturer specified battery(ies), charger(s) and/or adapter, if applicable, specified by the manufacturer.
- Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Non rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 70 °C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Call a local poison control center for treatment information.

KEEP THIS PACKAGING FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION.

### Warning

Do not ingest the battery. Chemical burn hazard.

(The remote control supplied with) This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children.

Even used batteries may cause severe injury or death.

If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

5