

Digital Music Player

User Guide



Version: V1.0

In order to ensure the best usage experience, please read this Operating Instruction carefully and keep it in a safe place for future reference.

Important Statement:

I. Thank you for purchasing the digital music player. Before using this product, please read the manual carefully. When you start to use the music player, we believe that you have read the manual.

II. The contents covered in this manual are subject to the latest information at the time of preparation. The products are subject to any change without prior notice.


Statement

1. In preparing the manual, we have striven to make the content correct and complete, but not guarantee that there are no errors or omissions in this manual. Our company will not be responsible for any possible error or omission in this manual.

2. We follow the strategies of continuous development. Hence, the company reserves the rights to amend and improve the products described in this manual without prior notice.

3. In any circumstance, we bear no responsibilities to the data or income loss, or any special, incidental or consequential losses, whether the loss is caused by any reason.

Player shape

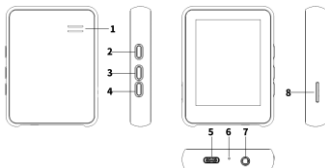

1. Speaker 2. Power key 3. Volume+ 4. Volume-
5. USB Interface 6. Reset Key 7. Headphone jack 8. TF card jack

Definition of the keystroke

Short press The pressing time is shorter than 1.2s.

Long press The pressing time is longer than 1.2s.

Menu Slide the screen from right to left

Return Click the icon  to return to the previous menu.

E-book page down Click the top of the screen

E-book page down Click the bottom of the screen

Browse the last picture Slide from bottom to top

Browse the next picture Slide from top to bottom

Exit the picture browsing Slide from left to right/slide from right

to left

Operating Instruction

ON/OFF

Press and hold the right key of the machine body for more than 3 seconds to turn it on, and press and hold it for 3 seconds to turn it off. When the idle time reaches the shutdown time set by the user, the machine would be turned off automatically. Note: This function is invalid when the player is connected to the PC or charged.

Charging

After turning it on, check the remaining battery power. If the battery is quite low, please charge it in time to ensure the normal application! When the system enters the low power state, it will prompt low power and shut down automatically.

1. Charge via the adapter: Before charging, connect the adapter to the power supply. Plug one end of the USB data cable into the adapter and connect the other end to the USB interface of the player. Under the normal conditions, it could be fully charged about 2 hours. (please choose the 5V 1000mA power adapter that complies with the national standards).

2. Charge via the computer USB: Insert one end of the standard USB cable into the USB socket of the computer, and then check the other end to the USB cable of the recorder to charge. Besides, the recorder could be taken as the mobile disk. (The charging time with the computer USB interface will be longer than that with the adapter.)

* When charging with the PC USB interface, the current input capability of USB interface of different PCs is different, and the charging time will also be slightly different. When charging with the PC USB interface, it is suggested to charge under the shutdown status to accelerate the charging speed!

* During the charging process, the temperature of the charger and recorder would rise, which is normal.

Note: If the machine is not applied for a long time, please charge it every other month.

Expansion card

Insert the TF card in the card slot, which would lock the TF card automatically. When pulling out, push the TF Card inward to the bottom, and then loose. The TF card will pop up automatically, and the card could be taken out.

* It is suggested to select the high-speed TF card with Class 10 and above, to ensure the fluency of music appreciation.

System configuration

Operating system Windows XP/Mac OS 10 and above.

PC connection

Connect the computer to charge this machine and operate the data of this machine at the same time. Under the ON/OFF status, adopt the USB cable attached to connect PC with the player. Open "this computer" to show the new removable disk. Then, select the corresponding folder to copy the files.

Main interface page turning: Under the main interface, slide from left to right or from the right to left.

After turning it on, show the system's main interface: music, E-books, video, picture, recording, radio, alarm clock, folders, Bluetooth, setting, dictionaries. (Click the corresponding function position directly, to enter the application).

Music

Click "music" application in the main interface to enter the music list. Music playing supports breakpoint continuation and background playing;

Background Play: Does not support image, recording, radio and video; It refers to entering the application without conflict with audio while playing songs, and the song plays continuously at the same time. At this time, the music playing would not be stopped.

Click the music icon: Enter the menu setting (including all songs, underplaying, artists, albums, my favorites).

All Songs:

Display a list of all songs in memory. Click the song to play.

Underplaying: Display this menu while playing music.

Artists:

Display the singer list of all songs in the memory by singer name. For example, select the singer, and the songs in play are the songs in the singer directory.

Album:

All songs and albums in the memory are arranged in alphabetical order and name pinyin acronym order. Select the album name, and the list will display all the songs of the album, then click the song list to start playing the corresponding songs of the album.

My Favorites: Store favorite songs (click  while playing music, and mark success when the icon turns red)

Select the "My Favorites" list and play only the marked songs

Menu setting: Click  to play the music (the menu includes the return to home, variable speed playback, repeat playback, bookmark options, delete from my favorites and equalizer).

Return to the main interface: Click here to return to the main interface;

Variable Speed Play: Support level 0-9 growth rate and level 0-9 deceleration playing. (Click the **X** icon in the playing interface).

Repeat Play: Including repeating all, shuffle, single loop and other options (click the icon  to set in the playing interface).

Bookmark option: Can record up to 5 bookmarks.

Equalizer: Display "ordinary, pop, rock, jazz, classic, dance, country", click the menu item to automatically confirm and return.

Add to My Favorites: Add the playing music in my favorite and mark it as the favorite music (it could also be marked as my favorite in the playing interface when clicking . After marking, the heart shape should be red).

Delete from my favorites: After adding the music into my favorite, click  to delete my favorite (the marking could be canceled in the playing interface and the heart shape would be white). At this time, the marking would be canceled.

Repetition: When playing the music, click  to select the starting point of rereading. At this time, the icon is changed to blue. Click  again to select the end point of rereading and start rereading this section of document. During rereading, the icon  would be changed to green. Then, click  again to stop rereading.

E-books:

In the main interface of the player, select e-book application to enter the e-book text list interface. Click the targeted text document to open the e-book. The current number of pages and the total number of pages of the file (the total number of pages calculated in the background) are displayed at the top of the e-book.

Page down Click the bottom of the screen to turn the page down.

Page up Click the top of the screen to turn the page up.

Menu setting: Click the icon  to enter (including auto play time setting, background color, page selection and bookmark option).

Auto play time setting: Set 3-30s option setting.

Background color: Including classic black, pure white and cowhide yellow options.

Bookmark option: Can set up to 5 bookmarks.

Note: E-book specification: Unicode (UTF-8) small-end encoded text;

Video

Click the "video" application for the listed files. Click the bottom of the screen <or> symbol for the list flipping.

Click the documents in the list to play the videos.

Note: It needs to be converted into avi/240*320 format video playing within the specification through the conversion tool.

Picture

Click "pictures" to enter the document list. Then, click the bottom of the screen <or> symbol for the list flipping.

Click the documents in the list to check the pictures.

Return to the list: Slide from right to left to check the pictures, or slide from left to right to exit the list interface.

Recording

Click "recording" application to enter the recording list, which includes: Start voice recording, recording library, high-quality recording, ordinary quality recording and voice detection. Click the icon  to return to the superior menu

In case of any low power signal occurs during recording, the system will automatically save the recording and return to the recording function interface; When the disk is full, the system will prompt "full disk space".

Start Voice Recording: Enter the recording interface to record the voice files. During the recording process, click the icon  to suspend the recording. Click  to prompt whether to save the current recording. Select yes to save the recording. Recording files are saved in the record folder on the local disk by default. The system will automatically check, find or create this folder and save the file.

Recording database: Enter the recording database, if the voice file has not been recorded, it will pop up the "voice recording not found" tip; If the file has been recorded, select the recorded file to play, click the icon  to return to the upper menu during the playing period.

High-quality Recording: wav format high-quality recording.

Common-quality Recording: WAV common-quality recording.

Voice detection: This function is voice detection recording. Do not turn off this function when recording important files.

Radio

Click "radio" to enter the radio interface.

Click the icon  to enter the menu setting (including radio station frequency band, presetting radio station, automatic radio station searching and empty presetting radio station).

Radio Station Frequency Band

Ordinary frequency band -- frequency band range: 87.5MHZ-108.00MHZ

Frequency band in Japan -- frequency band range: 76.00MHZ-90.00MHZ

Frequency band in Europe -- frequency band range: 87.5MHZ-108.00MHZ

Presetting Radio Station: Display the preset radio frequency points, and can save up to 30 frequency points.

Automatic Radio Station Searching: Click the automatic radio station searching to start automatic radio station searching. When the program is searched, the system

will automatically save it.

Empty Presetting Radio Station: Enter the preset station list and select the station to be cleared, and then click to clear the preset radio station.

Alarm clock: Click the alarm application to setting, including alarm clock (switch), alarm time and alarm cycle setting.

Alarm clock switch: Turn on and off the alarm clock.

Alarm clock time: Set alarm clock reminder time.

Alarm clock cycle: Can set single time, daily and working day-time.

Note: The shutdown is invalid after setting the alarm clock (after the alarm clock is turned on, the CPU consumes power quickly, so please turn off the alarm clock when you don't use it).

Folder

Click the folder icon in the main interface, to show all directories and files on the memory card.

Select a file in the file list and click it, and the system will automatically select the corresponding application to open the file. (if you select a music file, the music playing interface will appear; if you select an e-book, the e-book interface will appear). Refer to the corresponding application operating instructions for the corresponding options.

File Deletion: Keep the long press on the selected documents in the list to prompt whether it would be deleted. Then, choose whether the documents could be deleted.

Note: Only support single file deletion, does not support folder deletion.

Bluetooth: Click the Bluetooth application icon (including Bluetooth, device name, paired device, search device).

Bluetooth: Turn the Bluetooth on or off.

Equipment name: Displays the current Bluetooth device name.

Paired device: Can view the paired devices, or cancel or disconnect the paired devices.

Search Devices: Clicking this item, the player will automatically search for connectable Bluetooth devices, and display the device name after searching. Click "device name" to connect the device to be connected.

Note: The top status bar displays the Bluetooth icon after turning on, the Bluetooth icon in the top status bar flashes after entering "search device". When the connection is successful, the Bluetooth icon turns blue, and when the connection is not successful, the Bluetooth icon turns white. (Note: video and radio do not support Bluetooth function).

Setting

Press "setting" to the submenu, whose options include: language, date and time, brightness, screen off setting, idle shutdown, timing shutdown, information, storage status, factory setting and update playlist.

Language: Supported languages include: simplified Chinese, English and other six languages.

Date and Time: Including setting time and setting date.

Brightness: The range is 10-100, the default value is 90.

Screen off Setting: (including screen always lighting and screen off time setting).

Screen normal lighting: Turn on and off the screen always lighting.

Screen off time setting: The range is 10-60s, and the default value is 60s.

Idle Shutdown: (including idle shutdown, idle shutdown time setting)

Note: It is invalid after the alarm clock is turned on.

Idle shutdown: Turn on and off the idle shutdown.

Idle shutdown time setting: The range is 1-60min, and the default value is 5min.

Timing shutdown: Include timing shutdown, setting timing shutdown time.

Timing shutdown: Turn on and off the timing shutdown.

Timing shutdown time setting: 01-99 minutes.

Note: It is invalid after the alarm clock is turned on.

Message: Display software information.

Storage condition: Display total capacity and residual capacity.

Factory setting: Select whether to restore factory settings. Select "Yes" to restore the settings to their original values.

Update Playlist: When copying new videos, pictures, music and e-books, you need to update the playlist, otherwise you may not be able to view or play these files.

Dictionary: Support English-Chinese translation, word play function. **(the dictionary folder and contents shall be copied in the TF card before use).**

Click the dictionary icon to enter the dictionary interface, briefly press the soft keyboard to enter the word to be viewed, and then click the Enter icon to view.

Word playing: Click the speaker symbol on the top of the menu to play the vocabulary.

Exit dictionary: Click < to exit the dictionary.

Specifications

Product model:	Digital player
Overall dimensions	69MM*53.5MM*12.5MM

Software language	simplified Chinese, English and other six languages.
Product weight	About 78g
Display screen	2.4 inches 320*240
Key	High-sensitivity full-screen touch screen
Battery	3.7v lithium battery
Charging specification	5V/1A input
Charging time	About 2 hours
Bluetooth version	5.0
TFcard extension:	≤128GB
Environmental requirement	-5°C ~ 40°C
Audio format	APE (Fast/Normal compression, 800Kbps-1000Kbps), FLAC(1000Kbps-1200Kbps), MP3 (8Kbps-320Kbps), WMA(5Kbps-384Kbps), WAV(32Kbps-1536Kbps), AAC-LC(8Kbps-320Kbps),
Video format	AVI240*320(conversion by conversion tool)
Recording format	WAV
Picture	Support JPG/JPEG/BMP
E-book format	TXT file
Interface	TYPE-C USB1.1, charging
Analogue output	3.5m analogue Outputs
Loudspeaker	1W*8ohm
Operating temperature	-5°C ~ 40°C

* The audio indicators shown in this table are for reference only. There will be slight deviation in audio parameters due to the small difference of electronic components of the product. Please take the material machine as the standard.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.