



- Open the "WIFI UAV" APP that you just download

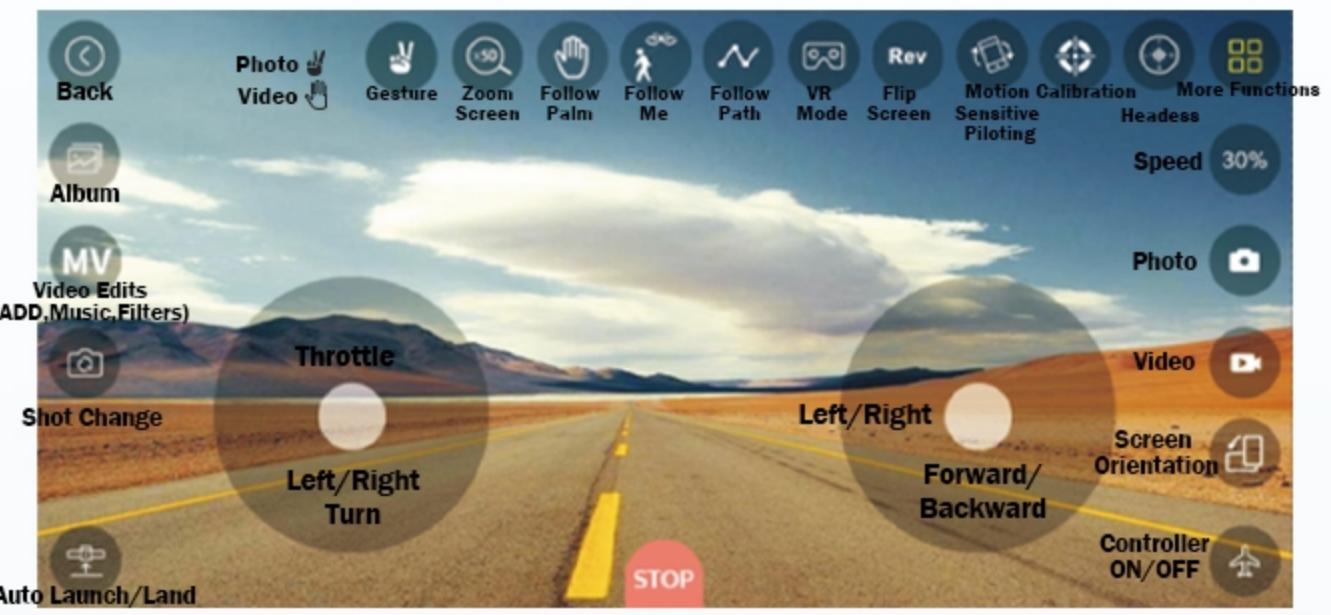

- Go to APP interface, Click Start, You will be able to take pictures, videos, and fly from drone view with the App on your Mobile phone!

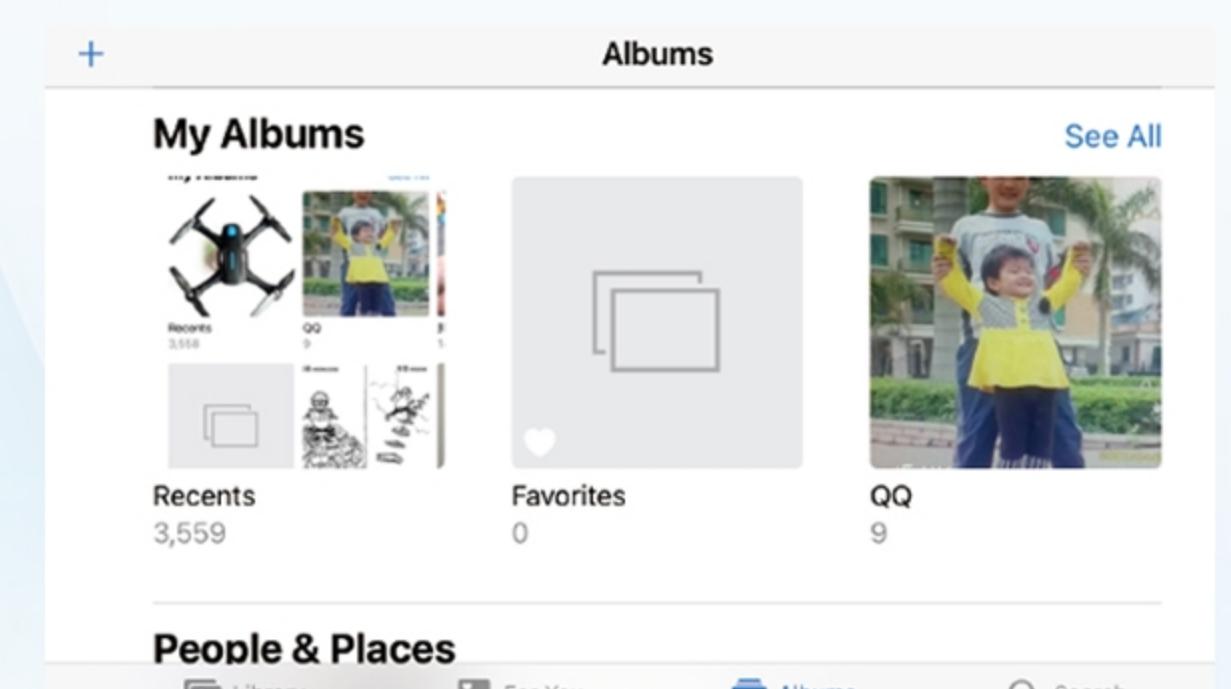

- The Photos and videos will be stored directly in the phone album. No SD card need.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

Reset the drone first before take off every time.  
It is very important.



## RESET

- Reset the drone to factory setting.
- This will recalibrate the drone, after every wrong operation and crash, which will allow optimal flight each time.



## Auto take off/Landing

Press the take-off button on the remote control, the drone will automatically take off to a height of about 1 meter, and maintain a stable flight at this altitude.

- When the drone is flying, press this button, the drone will land slowly and automatically.



## Speed Switch

- The drone is defaults to low speed mode when it takes off.

Press the speed button, the drone will switch to Middle speed after two "beeps" from the controller. Press the speed button again, the drone will switch to High speed after three "beeps" from the controller.



## Emergency Stop

- Emergency Stop button to immediately stop the drone.

Please be cautious to use this function. Please confirm the direction and location of the drone before using it. It may cause loss of the drone.

## How long does the Battery charge



1. Take out Battery in this direction.



2. When the battery is charging, the red indicator light of the USB charging cable will turn off. When the battery is fully charged, the red indicator light of the USB charging cable will light up.



3. Install the fully charged battery in this direction. A modular battery can support 12-13 minutes of flight time when fully charged. It takes 90 minutes to fully charge the battery.

【1】

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

【2】

Important: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.