


11 MOTOR' S POWER SUPPLY


NOTE: Each motor has an EXT-1 and EXT-2 ports for power input, power output, and Run/Stop functionality.

(1)

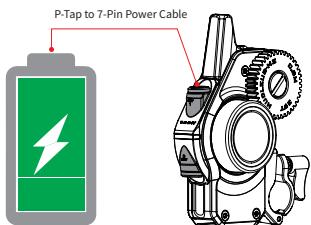


Single Motor Power Supply

(2)

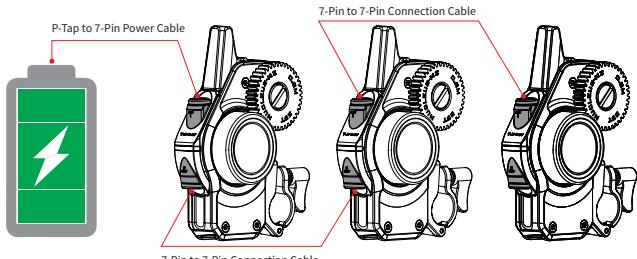

Multiple Motors Power Supply - Series Connection

(3)

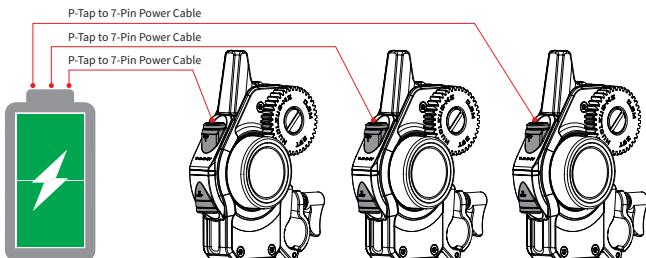

Multiple Motors Power Supply - Parallel Connection

(4)


Each motor can be connected to the camera for run/stop. The motor may be directly linked to a camera that provides both power and Run/Stop capabilities.

For example:

ARRI XT-RS Port


Tilta Alexa Mini Battery Plate - 14.8V 3-Pin R/S Port

Tilta Red DSMC2 Battery Plate - 14.8V 3-Pin R/S Port

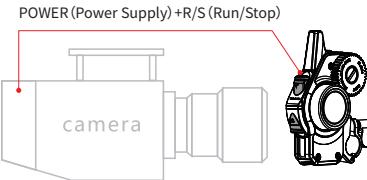


For example:

For cameras without integrated R/S and power outputs, separate connections for power and R/S are required.

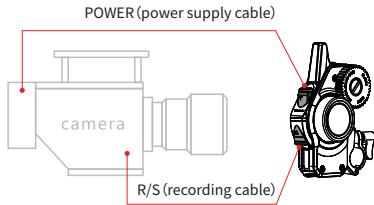


REMINDER
Once the motor is connected to a power supply or an R/S port with power capabilities, do not connect any other power sources to the motor, as it may lead to malfunction or power command errors.

(5)

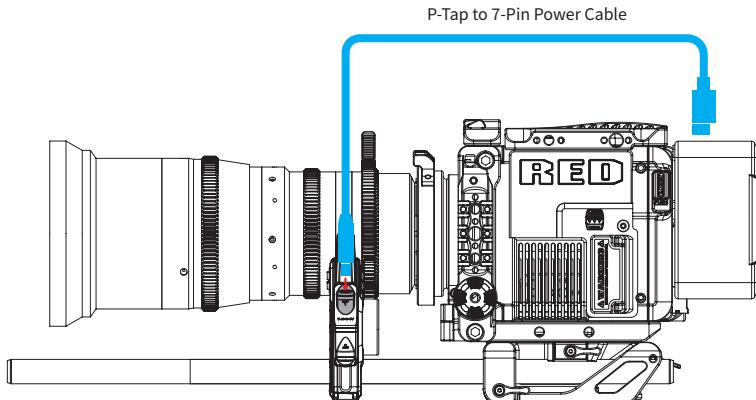

7-Pin to 7-Pin Connection Cable

P-Tap to 7-Pin Power Cable

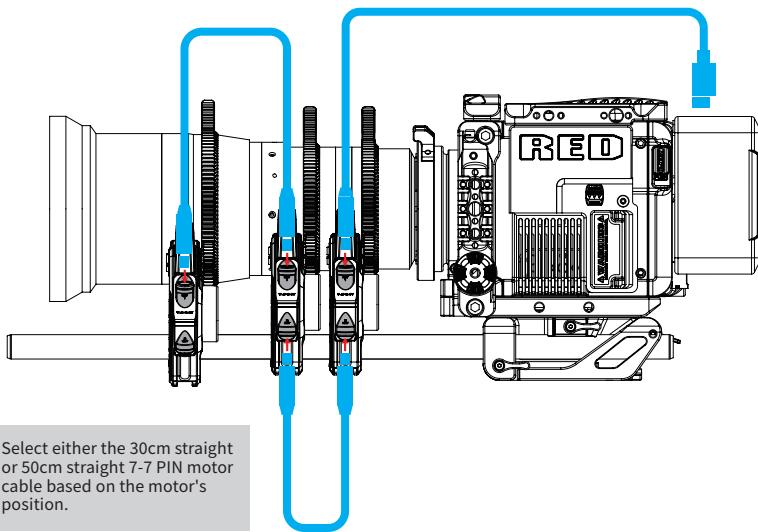

7-Pin to 7-Pin Connection Cable

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
RF Exposure Information (FCCID:2BH3X-WLCT06MK)

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

RF Exposure Information (FCCID:2BH3X-WLCT06HGR)

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

ISED Statement

English:This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

French: Cet appareil contient des émetteurs/récepteurs exempts de licence qui sont conformes aux RSS exemptés de licence d'Innovation, Sciences et Développement économique Canada.

Lexploitation est soumise aux deux conditions suivantes :

- (1) Cet appareil ne doit pas provoquer d'interférences.
- (2) Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil.

IC: 32846-WLCT06MK

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps.

IC: 32846-WLCT06HGR

The device can be used in distance 0mm between the radiator & your body without restriction. L'appareil peut être utilisé dans la distance 0mm entre le radiateur et votre corps sans restriction.

