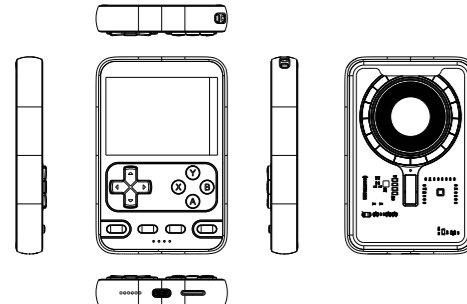 


 

 

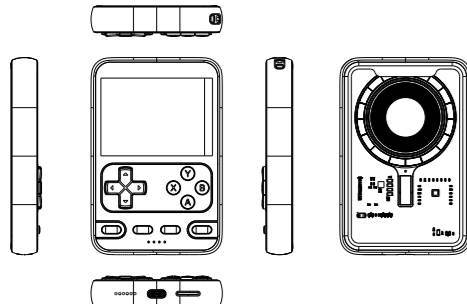 
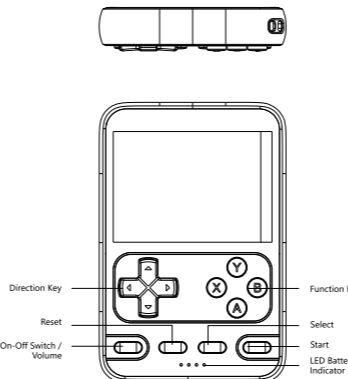 


 
 



说明书尺寸：90\*75mm  
材质：128g铜版纸

磁吸游戏充电宝															
<h3>使用说明书</h3> <div></div>		<h3>使用说明</h3> <p>使用前请仔细阅读说明书，正确使用本产品。 请妥善保管说明书。</p> <h3>健康注意事项</h3> <p><b>警告 为避免对健康造成损害，请务必注意以下事项。</b></p> <p>使用本产品时，请勿坐得离屏幕太近，请勿在远处使用本产品。屏幕发出的光线会对眼睛造成过度刺激。当用户正在观看屏幕时，在强光或射线的刺激下，他或她可能会出现暂时性眩晕或肌肉痉挛，甚至失去知觉。视个人的身体状况和体质而定。如果您遇到任何上述症状，请立即停止使用该产品并及时就医。如果您以前遇到过任何此类症状，请在使用该产品前咨询您的医生。</p> <p>请勿长时间连续使用本产品。为了您的健康安全，请务必在玩游戏时每小时休息 10 到 15 分钟。疲劳时请勿使用本产品。这可能会对您的健康造成不利影响。</p> <p>如果您的手或手臂受伤或感到任何疼痛，请在使用该产品前咨询您的医生。</p> <p>请勿长时间连续使用本产品。为了您的健康安全，请务必在玩游戏时每小时休息 10 到 15 分钟。疲劳时请勿使用本产品。这可能会对您的健康造成不利影响。</p> <p>如果您的手或手臂受伤或感到任何疼痛，请在使用该产品前咨询您的医生。</p> <p>如果您在手或手臂受伤或感到任何疼痛时玩游戏，可能会导致症状恶化。</p> <p>如果您感到头晕或头痛、恶心、晕车，或眼睛、手臂等任何一种疼痛或感到疲倦或不适，请立即停止使用该产品。如果这些症状持续存在，请及时去看医生。</p>		<h3>使用安全注意事项</h3> <p><b>警告 为避免引起火灾、触电、窒息或伤害，请务必注意以下事项。</b></p> <p>请勿在以下场所使用、安装或存放本产品。 孩子容易够到的地方 不稳定的地方 多尘或过于潮湿的地方 受到阳光直射或高温的地方或靠近高热物体的地方 请勿弄湿机器，或将其置于任何液体或异物中。 如果任何液体或异物渗入控制台或电线，请立即停止使用。</p> <p>请勿对机器施加任何强烈的冲击或过度用力。请勿加热电线。 请勿拆卸或改装机器。 如果机器损坏或变形，请立即停止使用，不要尝试自行修理。 不要让端口接触任何金属。 定期用干布或棉签清洁端口或镜头，以防止它们因灰尘而变脏。</p> <p><b>注意 为避免造成损坏、故障或表现出当操作，请务必注意以下事项。</b></p> <p>请勿在 LCD 屏幕表面刮擦或使用手按压。 请勿将 LCD 屏幕长时间置于阳光直射下。在靠近窗户的位置使用产品时，避免阳光直射 LCD 屏幕。 请勿用力按压 LCD 屏幕及其周围区域。由于液晶屏的承重能力有限，如果对其施加过大的力，可能会导致故障。</p> <p>请勿将本产品连接到与本产品不兼容的设备。 请勿使用稀释剂、汽油、酒精或任何其他溶剂清洁产品。 请勿在温度突然变化的地方使用或放置机器，以免显示屏破裂等。 请按照当地政府的指示处理不再有用的产品。</p>		<h3>操作指南</h3> <p><b>警告</b> 插入/拔出连接器时，请确保用手握住连接器直接插入和拔出。不要用力过大。还请务必检查端口的方向并将插头正确插入。</p> <p>从电源插座供电时，请使用市售的 USB 兼容 AC 适配器。建议并适合使用可输出 5V/3.0A/15W 的 AC 适配器。</p> <div></div>		<h3>磁吸游戏充电宝</h3> <p>请将携带电源USB线的Type-C接头插入机器背面的专用接口（图5）</p> <div></div> <p>此外，您可以使用任何其他合适的 USB 兼容 DC 适配器从电源插座供电。连接完成后，按下手机背面的电源开关（图1）即可启动游戏机。</p> <p>如何使用无线充电 请将游戏机无线充电在手机背面（无线充电功能）</p> <div></div> <p>T卡使用方法 如需玩其他游戏，请复制游戏软件，将T卡插入主机侧面的T卡口连接（图3）。</p> <div></div>		<h3>磁吸游戏充电宝</h3> <p>关于 ON/VOL 按钮和 SELECT 按钮 长按“ON/VOL”键约3秒启动游戏机。短按“ON/VOL”键设置音量。</p> <p>关于主菜单用户界面 启动游戏机后，将显示主 UI。 向左或向右移动操纵杆以移动“游戏图标”以选择标题，然后接按钮 A 确认选择。</p> <div></div> <p>关于游戏运营 选择标题后，按“START”键开始游戏，再按“START”键暂停游戏（部分游戏名称可能不同），按键A/B/X/Y的功能请参考各游戏的操作说明。</p>		<h3>磁吸游戏充电宝</h3> <div><div>产品规格</div><div><p>型号：XH003 输入Type-C：5V=3.0A/9V=2.20A    MAX 18.0 W 输出Type-C：5V=3.0A/9V=2.22A    MAX 20.0 W 无线充：2.5W/5W/7.5W/10W/15W 电池容量：5000mAh    19.35 Wh 额定容量：3200mAh 电池：聚合物电池 执行标准：GB/T 35590-2017</p></div></div>		<h3>磁吸游戏充电宝</h3> <div><div>注意</div><div><p> 本产品不应作为一般生活垃圾处理。废弃的电气和电子设备可能含有有害物质，如果处理不当，可能会对环境和人类健康造成损害。相反，请联系您当地的主管部门以获取有关合适的收集地点和回收设施的信息。</p><p>本产品受版权法保护。严禁未经授权复制或转让其内部软件。 请注意，不遵守此规定可能会导致法律诉讼。</p></div></div>	

正面

GAMING POWER BANK	GAMING POWER BANK	GAMING POWER BANK	GAMING POWER BANK	GAMING POWER BANK	GAMING POWER BANK	GAMING POWER BANK
<div>INSTRUCTIONS</div> <div></div>	<div>Introduction</div> <div><p>Please carefully read the INSTRUCTIONS before use, and use the product in the correct manner. Please store the INSTRUCTIONS properly</p></div> <div>Health precautions</div> <div><p><b>Warning</b> To avoid causing damage to health, Please make sure you pay attention to the following items.</p><p>Do not sit too close to the screen when using the product. Do not use the product in a dark place, the light from the screen can cause excessive irritation to the eyes, when a user is watching the screen, he or she may experience temporary vertigo or muscle spasms or even lose consciousness under the stimulation of strong light or rays, depending on the individuals' physical condition and physique. if you experience any of the above stated symptoms, stop using the product immediately and promptly see a doctor. if you have encountered any of such symptoms before, please consult your doctor before using the product.</p><p>Do not continuously use the product for a long time. For the safety of your health, make sure to rest every 10 to 15 minutes per hour of gameplay.</p><p>Do not use the product when you are tired. This may lead to adverse effects on your health.</p><p>If your hand or arm is injured or if you feel any sort of pain, consult your doctor before using the product.</p></div>	<div>Safety precautions for Use</div> <div><p><b>Warning</b> To avoid of causing fires, electric shocks, strangulation hazard or injuries, please make sure you pay attention to the following items.</p><p>Do not use, install or store the product in the following places. -Places your children can easily reach -Unstable places -Dusty or excessively damp places -Places that receive direct sunlight or high temperature or near high-temperature objects Do not get the machine wet, or place them in any liquid or foreign matter, if any liquid or foreign matter penetrates into the console or the wires, stop using them immediately.</p><p>Do not apply any strong shocks or excessive force to the machine. Do not heat the or wires.</p><p>Do not disassemble or modify the machine, if the machine are damaged or deformed, stop using them immediately and do not try to repair them by yourself.</p><p>Do not allow the port to come in contact with any metal.</p><p>Regularly clean the port or plug with a dry cloth or swab to prevent them from becoming dirty due to dust.</p></div>	<div>How to Operate</div> <div><p><b>Warning</b> when inserting/pulling out a connector, please make sure you hold the connector with you hand and insert and pull it out directly without exerting any excessive force. also please make sure you check the direction of the port and insert the plug into it correctly.</p><div></div></div>	<div>Gaming Power Bank</div> <div><p>When supplying power from a power outlet, please use a commercially available USB-compatible AC adapter. It is recommended and suitable to use AC adapter that can output 5V/3.0A/15W.</p><div></div><p>In addition, you can use any other proper available USB-compatible DC adapter to supply power from the power outlet, after the connection completes, press the power switch on the back of the mobile (figure1) to start game machine.</p><p>How to use wireless charging Please the game machine wireless back touch on the back of the mobile (wireless charging function)</p><div></div><p>How to use T card (optional purchase) If you need to play other games, please copy the game software, insert T-card into T-card port on the side of console to connect it (Figure3).</p><div></div></div>	<div>Gaming Power Bank</div> <div><p>About the ON/VOL button and SELECT button Long press the "ON/VOL" button for about 3 seconds to start the game machine, short press the "ON/VOL" button to set the volume.</p><p>About the main menu UI After you start the game machine, the main UI will be displayed. move the joystick left or right to move "Game Icon" to select the title, then press Button A to confirm the selection.</p><div></div><p>About the game operation After selecting the title, press the "START" button to start playing, and then press the "START" button to pause the game(it may be different for some game titles). For the functions of the joystick and button A/B/X/Y, refer to the operating instruction in each game.</p></div>	<div>Product Specifications</div> <div><p>Model：XH003 Type-C Input   ：5V=3.0A/9V=2.20A    MAX 18.0 W Type-C Output   ：5V=3.0A/9V=2.22A    MAX 20.0 W Transmitting：2.5W/5W/7.5W/10W/15W Battery Capacity：5000mAh    19.35 Wh Rated Capacity：3200mAh Battery Type：Polymer Battery Executive Standard：GB/T 35590-2017</p></div> <div>Contact us</div> <div><p> The crossed-out wheeled bin symbol that this product should not be disposed of in your general household waste, waste electrical and electronic equipment may contain hazardous substances which, if not treated properly, could lead to damage to the environment and human health, instead, please contact your local authority for information on suitable collection sites and recycling facilities.</p><p>This product is protected by copyright laws, any unauthorized duplication or transfer of its internal software is strictly prohibited. Please beware failure to abide by this may result in legal actions.</p></div>

反面

**FCC Warning Statement:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### **FCC Radiation Exposure Statement**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.