


**2BH5BKRFR-24V**

**KRFR-24V**


## Feature

- Supply Voltage: 24V, 50-60Hz
- Rating: 2A
- Wireless operation :Rf Connect Button
- Working frequency: 915.055 MHz  
Working distance: 30 Meters

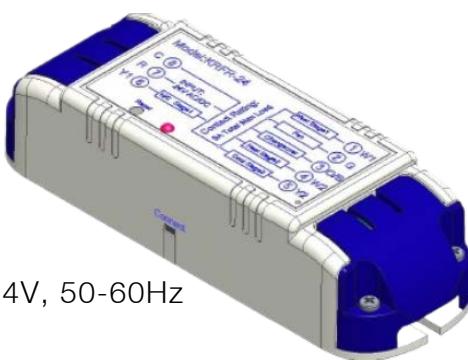


## Installation


1. Open both ends of blue cover by "+" screw driver

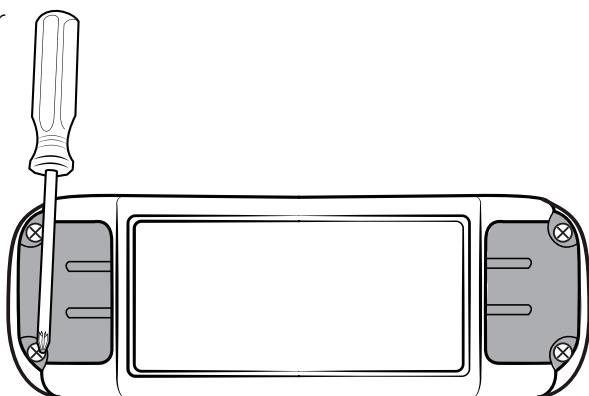


## 2. Pull up the blue cover

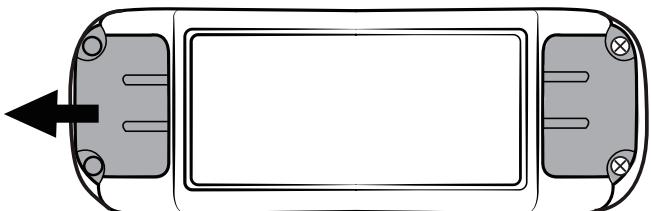


3. You can screw the wire on the terminal now after taking off cover

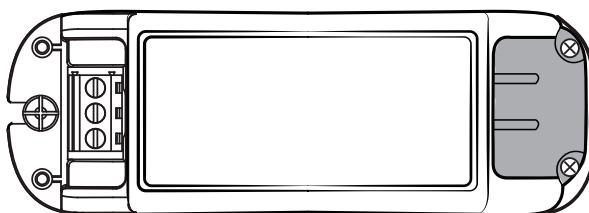

## Wiring Diagram

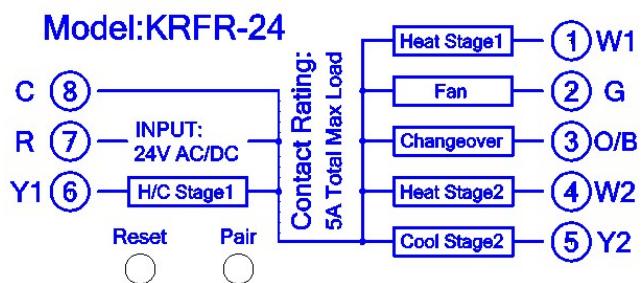

## RF LED indicator (upper front)

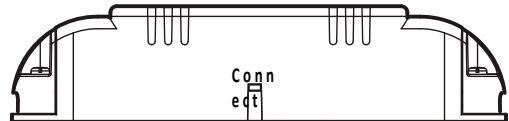

Press and hold the Connect KEY for 5 seconds to enter pairing mode, the LED starts to flash, and waits for the pairing signal from the transmitter.

- A. When KRFR-24V receives a signal, the LED will flash three times.
- B. If not paired, the LED will remain on.

## Warning:

1. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.
2. To comply with FCC RF exposure compliance requirements, a separation distance of at least 20 cm must be maintained between the antenna of this device and all persons.
3. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
4. This device complies with Part 15 of the FCC Rules.  
Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Dimensions(unit:mm)

