


Window Cleaning Robot

User Manual

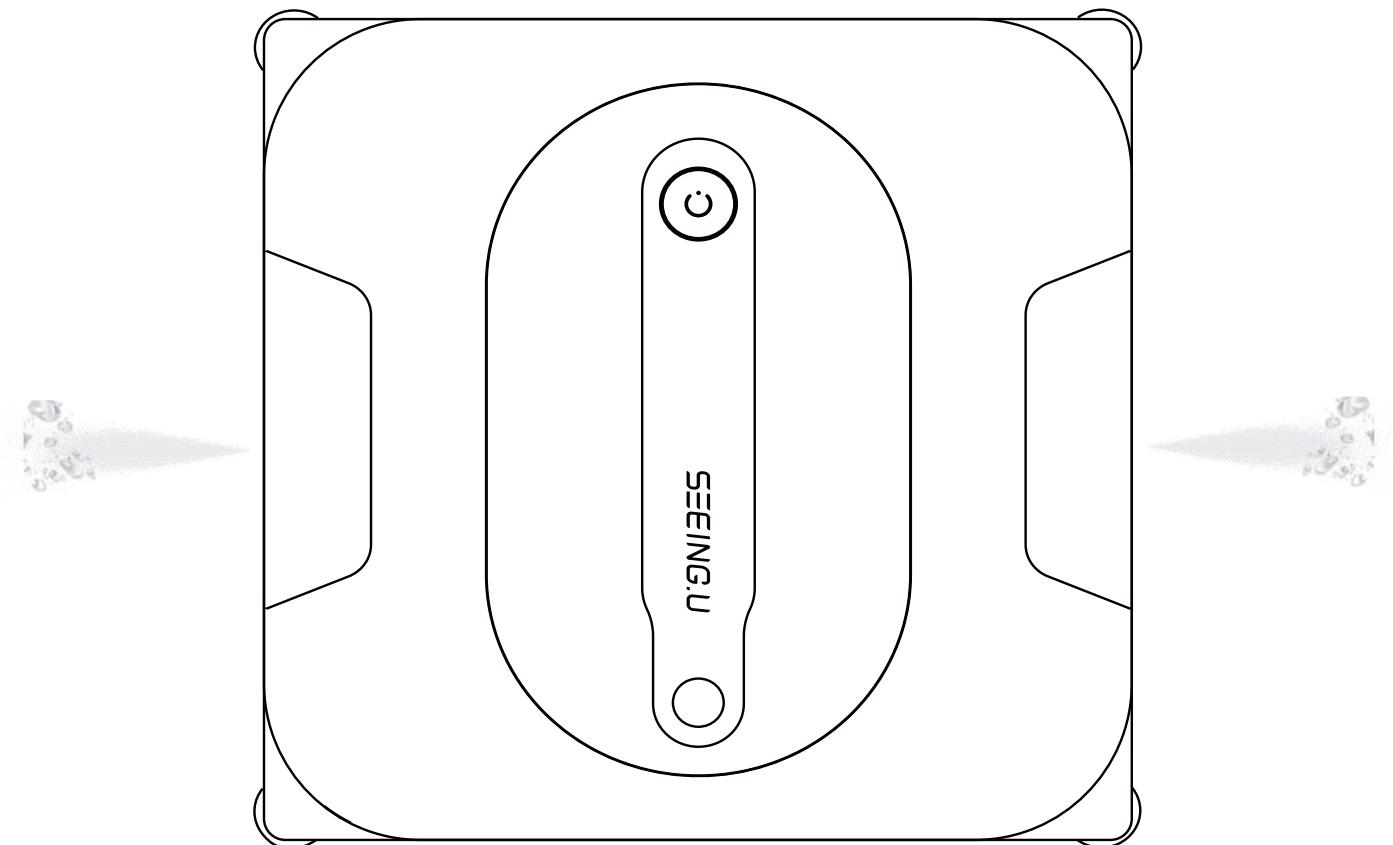

Remote Control

	<table border="1"> <tr> <td></td><td>Auto Left: auto clean from left with N path</td></tr> <tr> <td></td><td>Auto Right: auto clean from right with N path</td></tr> <tr> <td></td><td>Arrow Key: move up/down/left/right manually</td></tr> <tr> <td></td><td>Start/Stop: start automatic cleaning/ stop cleaning</td></tr> <tr> <td></td><td>Auto Water Spray: when the robot is working, press this button to spray water at intervals</td></tr> <tr> <td></td><td>Manual Water Spray: spray water once for each short press</td></tr> <tr> <td></td><td>N +Z: start with N path first , and then with Z path</td></tr> <tr> <td></td><td>N path cleaning mode</td></tr> <tr> <td></td><td>Z path cleaning mode</td></tr> </table>		Auto Left: auto clean from left with N path		Auto Right: auto clean from right with N path		Arrow Key: move up/down/left/right manually		Start/Stop: start automatic cleaning/ stop cleaning		Auto Water Spray: when the robot is working, press this button to spray water at intervals		Manual Water Spray: spray water once for each short press		N +Z: start with N path first , and then with Z path		N path cleaning mode		Z path cleaning mode
	Auto Left: auto clean from left with N path																		
	Auto Right: auto clean from right with N path																		
	Arrow Key: move up/down/left/right manually																		
	Start/Stop: start automatic cleaning/ stop cleaning																		
	Auto Water Spray: when the robot is working, press this button to spray water at intervals																		
	Manual Water Spray: spray water once for each short press																		
	N +Z: start with N path first , and then with Z path																		
	N path cleaning mode																		
	Z path cleaning mode																		

Start/Stop Cleaning

After the robot adsorbs successfully, short press “On/Off” button on the robot or press “” on the remote control to start automatic cleaning.


The robot default cleaning mode is Z path.

Press “” to start /stop cleaning

In the status of " Stop", press "" button to control the cleaning direction of the robot, and to switch cleaning path.



“” for vertical glass.

Clean with "N" path

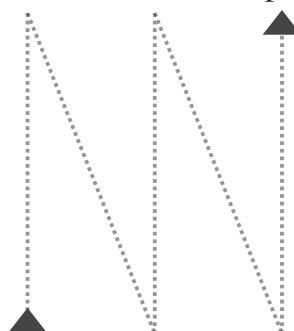

“” for horizontal glass

Clean with "Z" path

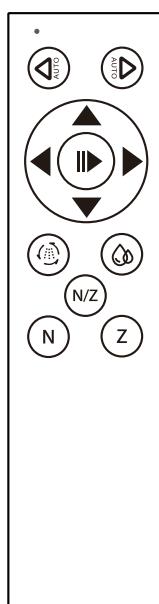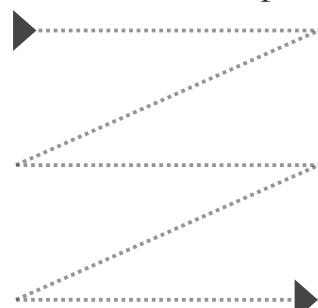

Name: W2 remote control

Model: W2YKQ

Rated voltage : 3V

FCC ID: 2BH5X-W2YKQ

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.