

10000 mAh
POWER BANK
MagSafe Wireless Charging



INSTRUCTION MANUAL

Please read and retain these instructions for future reference.



WARNING

Warning:
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

HIGHLIGHTS

- 10000 mAh
- MagSafe Wireless Charging Compatible
- USB Type-C 18W Input & 20W Output
- Ultra Slim-15mm
- Wireless charging self-start function

PACKAGE CONTENTS


- 10000 mAh MagSafe Wireless Power Bank
- Type-C USB Cable
- Instruction Manual

SPECIFICATIONS

- Lithium Battery Capacity: 10000mAh
- Lithium Battery Energy Capacity: 38.5Wh
- Rated Capacity: 6000mAh(5V/2A)
- Wireless output: 7.5W/10W/15W
- Input: 5V~3A/9V~2A/12V~1.5A
- Output: 5V~3A/9V~2.22A/12V~1.67A
- Energy Conversion Ratio: 70%
- Size: 105*70.9*15mm
- Weight: 172g

2

IDENTIFYING PARTS

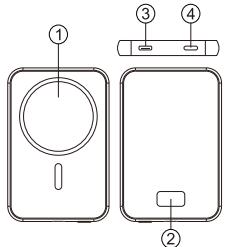

INSTRUCTIONS FOR USE CHARGING THE POWER BANK

- Take the supplied USB cable and plug the USB-A end of the cable into the power source being used; plug the other end of the cable into the Type-C USB port of the power bank.
- If the power bank is switched on but is not being used, it will automatically switch off after approximately 35 seconds.
- The power bank can be charged directly through the mains socket outlet using USB charger (not supplied).
- When the wireless charge starts to work, the Digital Display Screen flashes.
- 0~100%

3

DISCLAIMER

All product and company names are trademarks or registered® trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by them.

CLEANING & CARE INSTRUCTIONS-GENERAL

- **Before Cleaning:** Ensure the product is not charging before cleaning or maintaining it.
- **Cleaning:** Wipe the product's surface using a soft, slightly damp cloth. Do not use harsh or abrasive cleaning chemicals or materials on the product, as doing so may damage or scratch the finish.
- Do not expose the product to direct sunlight or high temperatures for extended periods.
- Do not store in temperatures over 140 °F (60 °C).

ENVIRONMENTALLY FRIENDLY DISPOSAL

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT FOLLOWING THE EUROPEAN DIRECTIVE ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT.

- At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a particular local authority differentiated waste collection centre or a dealer providing this service. Disposing of a household appliance separately avoids possible negative environmental and health consequences from inappropriate disposal. It enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

- Never dispose of used electronics with ordinary solid waste since they contain toxic substances.
- Always dispose of used electronics following the prevailing community regulations that apply to the disposal of electronics. If there are no regulations concerning electronics disposal, please dispose of the device in a waste bin for electronic devices.

WARNING

Lithium-ion Batteries and/or products that contain Lithium-ion Batteries can expose you to chemicals including cobalt lithium nickel oxide, and nickel, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.mellid.com



6

7

CHARGING THE DEVICE

Plug the Type-C connector of the charging cable into the Type-C output port of the charging bank, and then plug the Type-C connector of the charging cable into the charging Type-C port of the device that you want to charge. If your device is not compatible with the Type-C connector on the supplied charging cable, the charging cable supplied with your device can be used.

USING THE WIRELESS CHARGING FUNCTION

- Press the power button, and the power bank LED will display the remaining power level.
- Place the iPhone on the wireless charging area of the power bank. Ensure the wireless charging position of the power bank is precisely aligned with the wireless charging area of the mobile phone. Press the power button to start charging, and the wireless charging function will begin.
- The LED charge indicators will light up, indicating the remaining power level.
- The wireless charging function can be used for other devices, for example, headphones with a wireless charging capability.
- Ensure that the position of the wireless charging areas of the power bank and the device to be charged is properly aligned. Otherwise, the device will not charge.
- Supported iPhones will be fixed to the power bank magnetically due built-in magnets.
- Do not move or bump the mobile phone while charging. Doing so may cause the mobile phone and power bank to miss align.

4

WARRANTY

The 10000 mAh MagSafe Wireless Power Bank includes a standard 12-month limited warranty against manufacturing defects and faults. Should the product be unboxed with any faulty parts, poor finishing, visible damage, or failure to perform due to a manufacturing defect or poor workmanship, please return it with your proof of purchase (bill of sale or invoice) to the store of purchase for an exchange, or repair depending on the store's returns policy.

This warranty commences from the date of purchase. Kindly retain your proof of purchase and the packaging for your warranty period.

NOTE:

The warranty does not apply to a product that:
a.) Has failed due to excessive wear and tear beyond what is considered reasonable.

b.) Has been misused or neglected.
c.) Has been damaged accidentally or by Force Majeure, including fire and flooding.
d.) Has been used or operated contrary to operating or maintenance instructions outlined in this manual.

The Store of Purchase/Seller can only accept returned products that have been returned in accordance with this warranty or which follow their own returns Policy. Please refer to the Store of Purchase/Sellers Returns Policy for details. Please contact the store of purchase if you require assistance or have queries about your warranty.

8