
USER MANUAL

102656 Portable Karaoke Machine




Please read the instruction manual carefully before using


Product Diagram

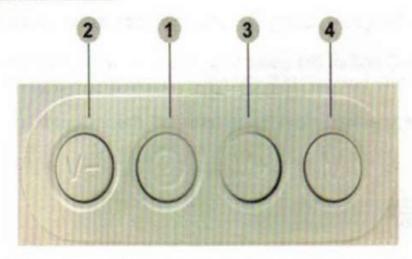

	Speaker Power On/Off	Long press to turn on/off the speaker Short press to PLAY/PAUSE the music
2 5	Speaker Volume -	Short press to turn down volume of the speaker Long press to switch to the previous song
3 8	Speaker Volume +	Short press to turn up volume of the speaker Long press to switch to the next song
4 L	ED Light Control	Short press to switch light modes Long press to turn the light on/off

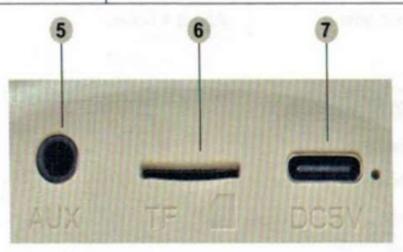

5 Aux In	Aux in jack
6 TF Card Slot	TF card port
7 DC 5V Input	DC 5V Type-c charging input

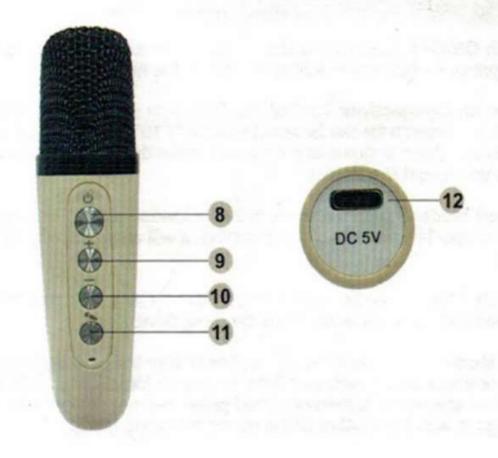

8 Mic Power On/Off	Long press 3s to turn on/off Short press to PLAY/PAUSE the music
9 Mic Volume +	Short press to turn up volume of the microphone Long press to switch to the next song
10 Mic Volume -	Short press to turn down volume of the microphone Long press to switch to the previous song
11 Magic Sound Effect	Short press to switch between magic sounds(male voice/female voice/monster voice/baby voice/KTV/original voice) Long press to remove/restore music vocals
12 DC 5V Input	Charging port for microphone

How to use the karaoke machine

- 1.Switch ON/OFF: Long press the button to turn on the machine, short press + buttons to adjust volume of the machine.
- 2.Bluetooth Connection: Turn on the Bluetooth setting on your mobile device and search for the Bluetooth name "K10". Click and pair with the device. Open a music app on your mobile device and choose the songs you would like to play.
- 3.TF Card Mode: Prepare a micro SD card loaded with MP3 songs, plug the card into TF card slot of the machine, it will automatically play songs.
- 4.AUX- IN: Plug the audio cable into the AUX IN jack, the machine will automatically play the audio from the input device.
- 5.Light Mode: Long press the button to turn the LED light on/off. Short press to switch between light modes. Automatically turns on light when the speaker is turned on, short press the button once, LED lights go in with the rhythm of the music bouncing mode.

How to use the wireless microphone

- 1.Switch ON/OFF: Long press the button 3s to turn on the microphone. The mic and machine will auto-pair with each other after both are powered on. Short press + and buttons of the mic to adjust the volume to a suitable level and start singing.
- 2.Magic Sound Effect: Short press the button of the microphone to switch between 6 kinds of magic sound effects: male voice/female voice/monster voice/baby voice/KTV/original voice.(Note: microphone sound defaults to the original)
- 3.Accompaniment Function: First pair the machine to your phone through Bluetooth and choose a song to play, just Long press button of the microphone to remove, restore music vocals.

How to Charge

- 1. Take out the type-C charging cable included in the package
- Plug type-C end of the cable into the machine or microphone, another USB end into normal USB charging adaptor/PC Port(5V,1A)
- 3. When the speaker/mic is being charged, the indicator light turns red.

Technical Information

Model	102656
Bluetooth Name	K10
Bluetooth Transmission	<=10m (no obstacle distance)
Speaker Specifications:	52mm 4Ω
Frequency	20HZ-20KHZ
Charging Power	5V/1A
Audio Input	Bluetooth / TF Card / AUX connection
Fully charged time	About 4 hours

Package Included

Karaoke Machine

Wireless Microphone

Type-c Cable

User Manual

FAQS

No Power

- Power is not on; long press the power button to turn power on.
- Charge the machine/mic and use it.

No Sound

- Check if the machine/mic is powered on.
- Check whether the Bluetooth is connected successfully.
- Adjust the volume.

Presence of noise

Environmental noise, or mobile phone signal interference, adjust the distance between the karaoke machine and the cellphone, and adjust the distance between mic and machine.

The Bluetooth connection is not available.

- Check to see if Bluetooth is enabled.
- Distant Bluetooth connection, trying adjusting the distance between the karaoke machine and the phone.(<=10m, no obstacle distance)</p>
- The karaoke machine is already paired with another phone. First, turn off the Bluetooth of the other phone and restart the machine, then try to pair with the phone again.
- Check whether there are external devices such as TF card connected, if there are external devices connected, please unplug the device and search for the Bluetooth name again.

Note: If the above method fails to eliminate the fault, please feel free to connect the seller.

Thank you for your support!

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment for portable condition. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.