

Quick Start Guide

 
Video Doorbell Mini Tapo D205, TD20

7106511353 REV1.0.2

*Images may differ from your actual product.


01 / Remove the Bracket

Press the top of the mounting bracket and push down to separate it from the doorbell.



02 / Charge Doorbell Before Use

Plug in the USB cable to charge your doorbell. When you plug in the charger, the LED should blink amber quickly for 3 seconds.

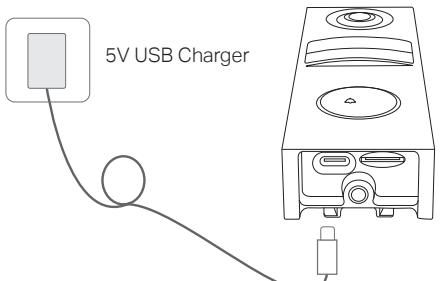

Note:


1. Charge the doorbell before use. This will take about 6.5 hours.
2. The USB charger is not provided.
3. Peel off film from the doorbell before use.
4. Warning: Do not tear off the silicone part by force as it may affect the waterproof performance.
5. Keep the ports firmly covered when not in use to ensure waterproof performance.
6. The doorbell may not power up after falling. Plug in the USB charger to power it on again.

03 / Set Up the Doorbell

1. Get the Tapo app from the App Store or Google Play, and log in.




2. Press the **RESET** button on the back of the doorbell for 3 seconds to power on the doorbell. Follow the app instructions to set up your doorbell.

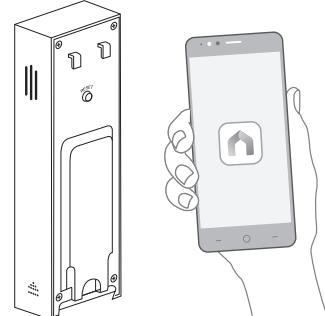

04 / Installation Tips

 1. Install the doorbell on a flat and clean wall.
2. The doorbell should be placed 1.2 m (4 ft) above the ground.
3. Use the included 15° mounting wedge for a more focused view from a specific side.

Without
Mounting WedgeWith
Mounting WedgeWith
Mounting Wedge
(Rotate 180°)


4. Avoid placing the doorbell close to a side wall in the field of view. If you must, use the mounting wedge to adjust the viewing angle to reduce reflected light from the wall for better night vision performance.

05 / Install the Doorbell


*Preview video on the Tapo app to find the desired installation location.

Option 1. Stick to a smooth wall

1. Attach the included adhesive to the bracket **bracket or wedge**. If you use the wedge to adjust angle, first affix the bracket and the wedge with the **mounting wedge screws**.

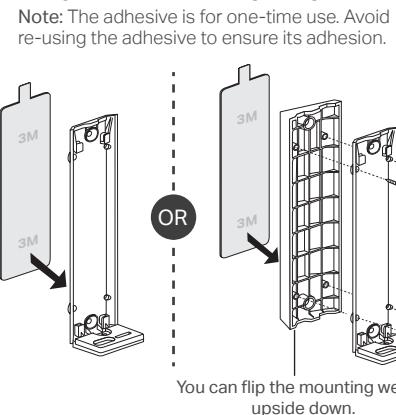


3. Attach the doorbell to the bracket, sliding down to the bottom until it clicks into place. Then tighten the screw at the bottom to secure the doorbell.

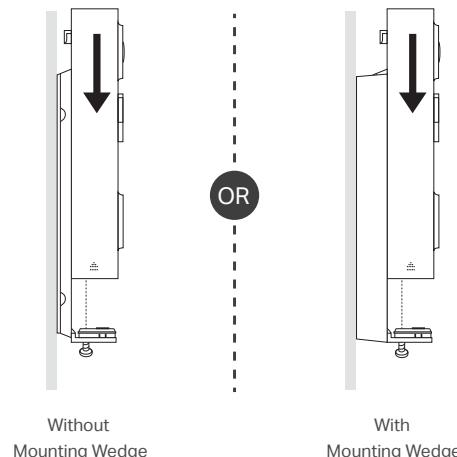


Option 2. Mount to the wall

1. Stick the mounting template to the desired mounting place. Drill two holes according to the template.

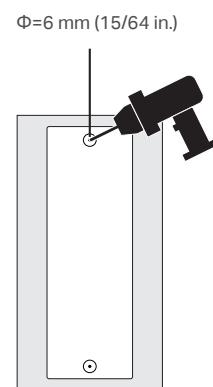


2. Insert two **anchors** into the holes. Use the **mounting screws** to affix the bracket (or wedge with bracket if you use the wedge to adjust angle) over the anchors.

Note: When mounting to uneven walls, stick the foam pad on the back of the bracket.

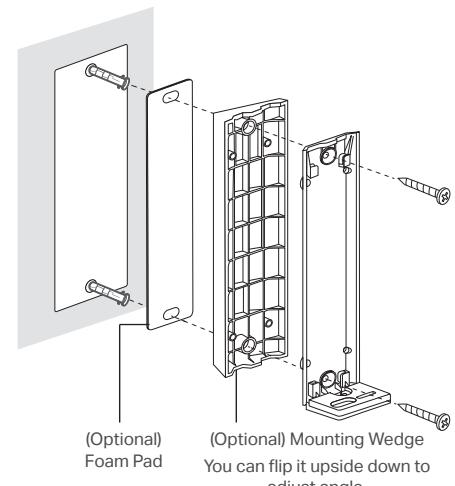

3. Attach the doorbell to the bracket, sliding down to the bottom until it clicks into place. Then tighten the screw at the bottom to secure the doorbell.

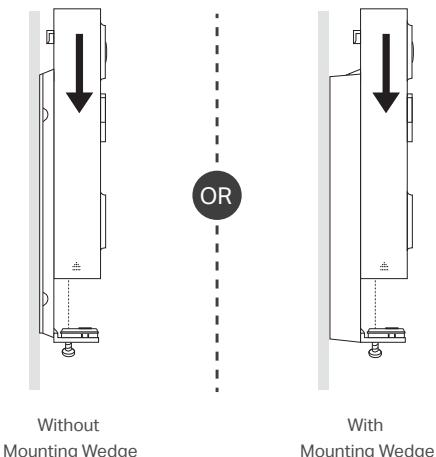

Have a Tapo Solar Panel?

The Tapo Solar Panel charges your Mini Video Doorbell continuously. Say goodbye to tricky wiring and dead batteries. Go solar effortlessly.

If you have a Tapo solar panel:

Connection Instructions

Visit

<https://www.tp-link.com/support/faq/3800/>
or scan QR code






If you don't have a Tapo solar panel:

Charge the rechargeable battery with a standard and high-quality DC 5V/1A battery charger. Keep the charging port firmly covered when fully charged.

If you use a third-party solar panel to charge this doorbell, we cannot guarantee the waterproof performance.

Doorbell Appearance

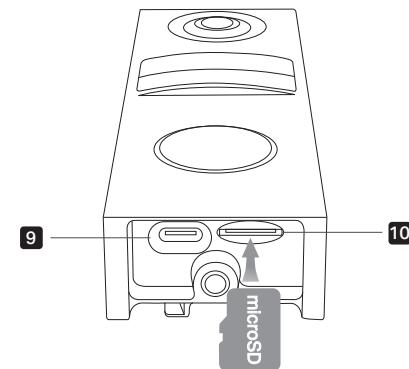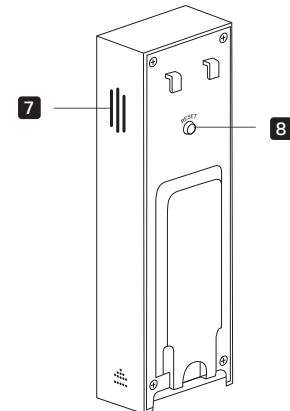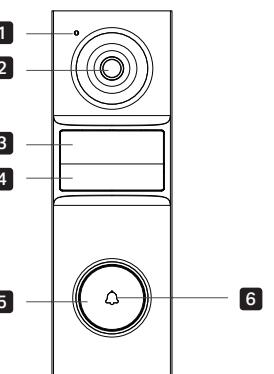

1 Microphone

2 Lens

3 Motion Sensor (PIR)

4 IR LED

5 Ring Button

6 Status LED

7 Speaker

8 RESET Button

Press and hold for about 5s: Reset the doorbell

9 USB Type-C Port

10 microSD Card Slot

Insert a microSD card. Initialize it on the Tapo app for local recording.


*microSD card not included

LED Indication

Solid red	Starting up
Blinking red and green	Ready for setup
Blinking red slowly	Connecting to Wi-Fi
Solid amber	Connected to Wi-Fi
Solid white	Connected to the cloud
Blinking white quickly	Doorbell updating
Blinking red quickly	Doorbell resetting
Blinking amber quickly for 3 seconds	Charging the doorbell

How to Detach Doorbell from the Wall

 Loosen the screw at the bottom of the bracket. Hold the doorbell and pull it up to detach the doorbell from the bracket.



Safety Information

- Do not use damaged charger or USB cable to charge the device.
- Do not use any other chargers than those recommended.
- Do not use the device where wireless devices are not allowed.
- Adapter shall be easily accessible.
- Use only power supplies which are provided by manufacturer and in the original packing of this product. If you have any questions, please don't hesitate to contact us.
- Keep the device away from fire or hot environments. DO NOT immerse in water or any other liquid.
- Do not disassemble, repair or modify the product.
- Do not place near automatically controlled devices such as fire alarms. Radio waves emitted from this product may cause such devices to malfunction resulting in an accident.
- Observe restrictions on using wireless products in fuel depots, chemical plants or when blasting operations are in progress.
- Do not use liquid to clean the product. Only use a dry cloth.
- Never put metal objects inside the product. If a metal object enters the product turn off the circuit breaker and contact an authorised electrician.
- This product is not intended to be used when providing medical care. Consult the manufacturer of any personal medical devices, such as pacemakers or hearing aids to determine if they are adequately shielded from external RF (radio frequency) energy.
- Do not use this product in health care facilities. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.
- Do not place heavy objects on top of the product.
- When you leave the product unused for a long time unplug the product from the power outlet.

- This product may interfere with other electronic products such as TV, radios, personal computers, phones or other wireless devices.
- Always follow the local waste and recycle laws when you get rid of the used battery.
- Do not use the product if the casing has been broken. Danger of electric shock.
- Never touch the product with wet hands.
- This equipment can be powered only by equipments that comply with Power Source Class 2 (PS2) or Limited Power Source (LPS) defined in the standard of IEC 62368-1.
- The mounting height should not be higher than 2 meters.
- Doorbell Operating Temperature: -20 °C ~ 45 °C (-4 °F ~ 113 °F)

CAUTION!

Avoid replacement of a battery with an incorrect type that can defeat a safeguard. Avoid disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion. Do not leave a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; Do not leave a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of directives 2014/53/EU, 2009/125/EC, 2011/65/EU and (EU)2015/863.

The original EU declaration of conformity may be found at <https://www.tapo.com/support/ce/>

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Regulations 2017.

The original UK declaration of conformity may be found at <https://www.tapo.com/support/ukca/>

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
1) This device may not cause harmful interference.
2) This device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement:
This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.
"To comply with FCC RF exposure compliance requirements, this grant is applicable to only Mobile Configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter."

Canadian Compliance Statement
This device contains licence-exempt transmitter(s)/ receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
(1) This device may not cause interference.
(2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :
1) L'appareil ne doit pas produire de brouillage;
2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Radiation Exposure Statement:
This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Déclaration d'exposition aux radiations:
Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

CAN ICES-003 (B)/NMB-003(B)

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。
低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。
前述合法通信，指依電信管理法規定作業之無線電通信。
低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。
為避免本器材影像畫面遭偷窺或擷取，本器材使用者應先修改預設密碼，並定期更新密碼。

安全諮詢及注意事項
請使用原裝電源供應器或只能按照本產品注明的電源類型使用本產品。
清潔本產品之前請先拔掉電源線。請勿使用液體、噴霧清潔劑或濕布進行清潔。
注意防潮，請勿將水或其他液體潑灑到本產品上。
插槽與開口供通風使用，以確保本產品的操作可靠並防止過熱，請勿堵塞或覆蓋開口。
請勿將本產品置放於靠近熱源的地方。除非有正常的通風，否則不可放在密閉位置中。
不要私自拆開機殼或自行維修，如產品有故障請與原廠或代理商聯繫。