 


802.11b AVGPSPD – Ant 0 CDD Mode

 
Channel 01 (2412MHz)

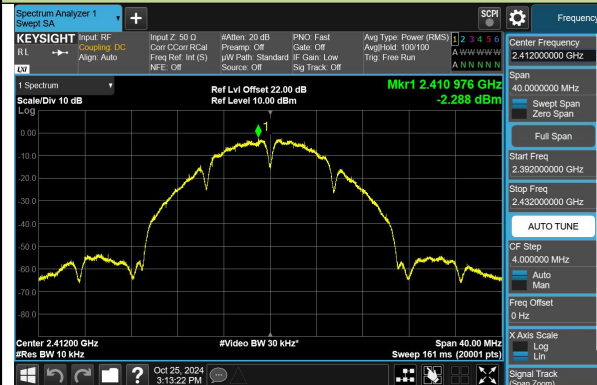

Channel 06 (2437MHz)




Channel 11 (2462MHz)

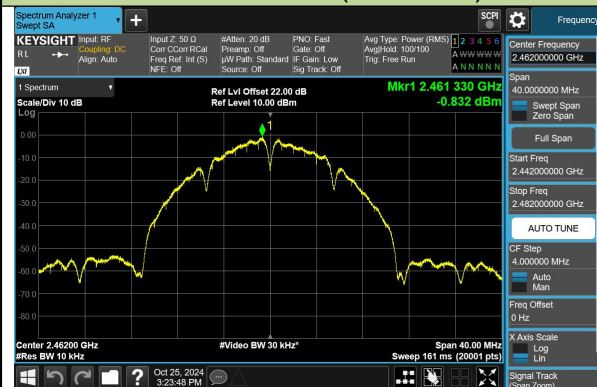

802.11g AVGPSPD – Ant 0 CDD Mode

 
Channel 01 (2412MHz)

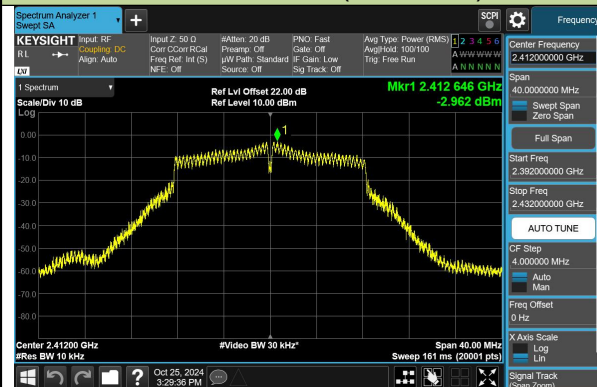

Channel 06 (2437MHz)




 Channel 11 (2462MHz)

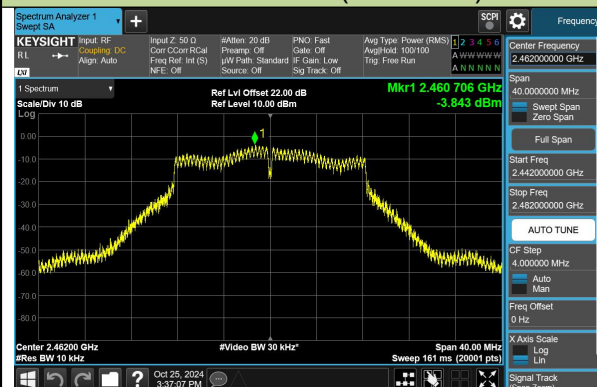


802.11n-HT20 AVGPSD – Ant 0 CDD Mode

 
Channel 01 (2412MHz)

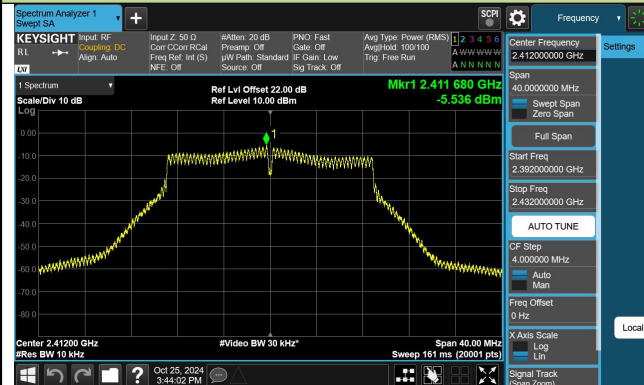

Channel 06 (2437MHz)

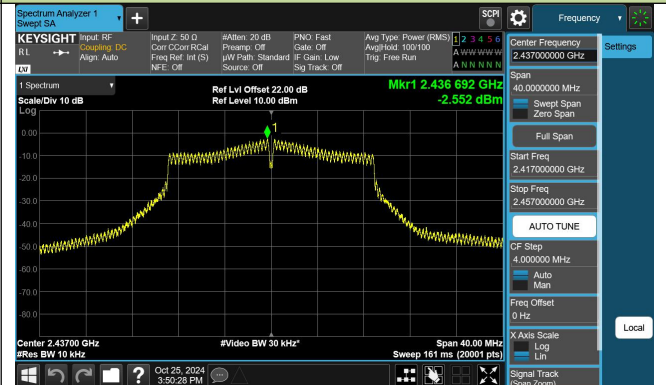 


Channel 11 (2462MHz)

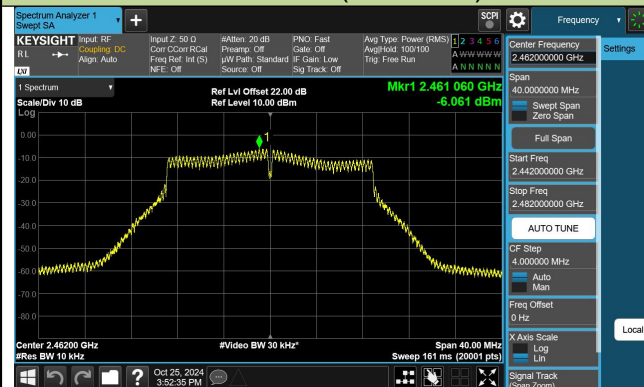 


802.11n-HT40 AVGPSD – Ant 0 CDD Mode

 Channel 03 (2422MHz)

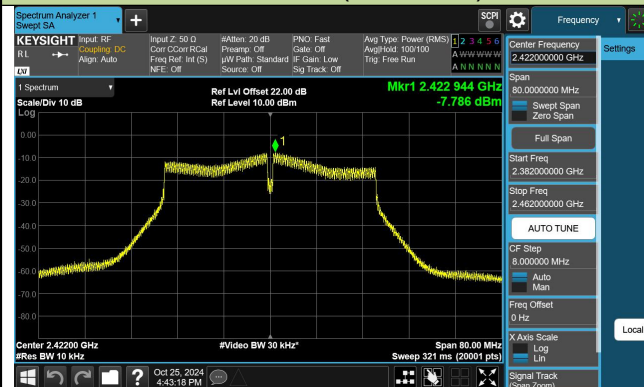

Channel 06 (2437MHz)

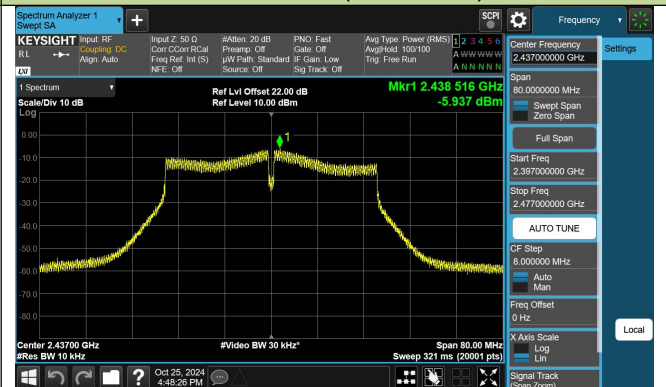 


Channel 09 (2452MHz)




802.11ax-HE20 AVGPSD – Ant 0 CDD Mode

 
Channel 01 (2412MHz)

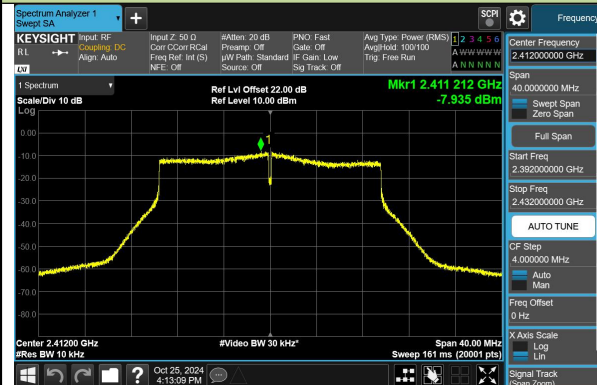

Channel 06 (2437MHz)

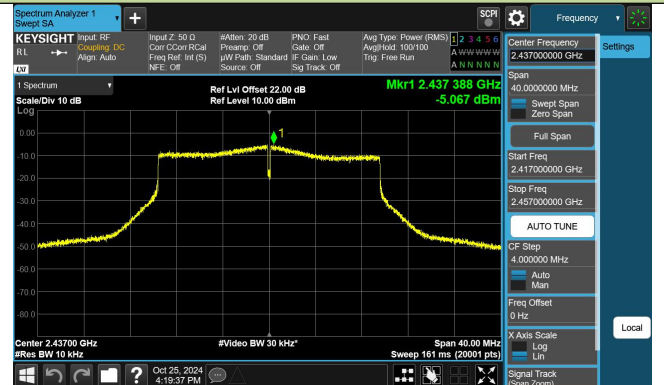 


Channel 11 (2462MHz)

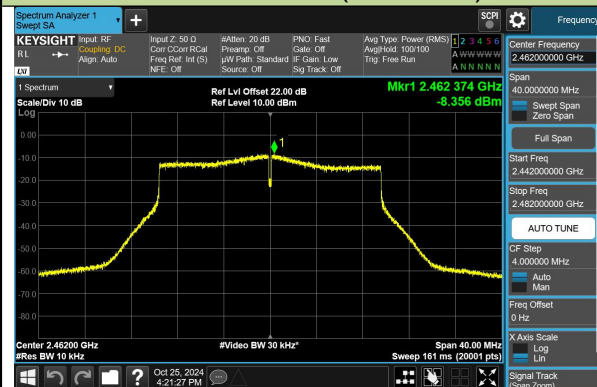 


802.11ax-HE40 AVGPSD – Ant 0 CDD Mode

 
Channel 03 (2422MHz)

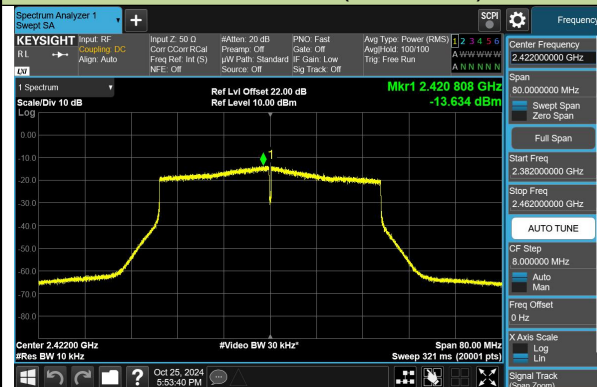

Channel 06 (2437MHz)

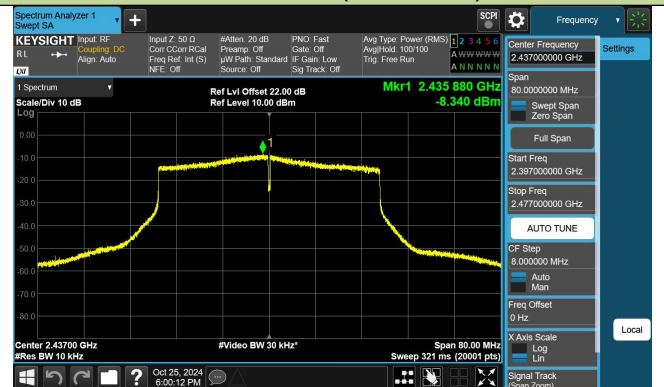 


Channel 09 (2452MHz)

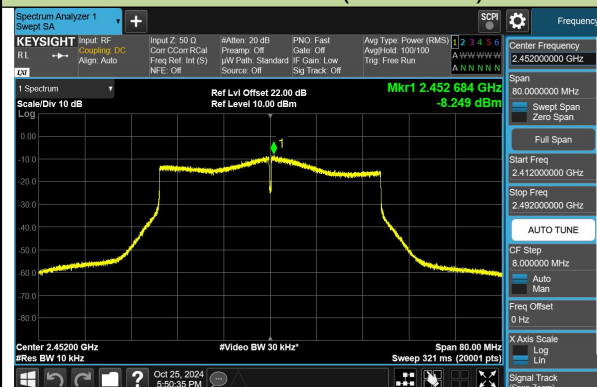 


802.11be-EHT20 AVGPSPD – Ant 0 CDD Mode

 
Channel 01 (2412MHz)

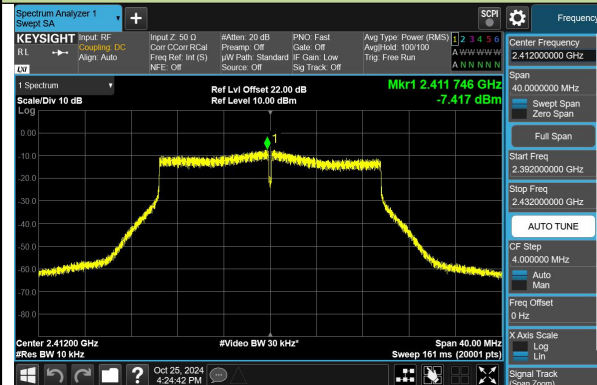

Channel 06 (2437MHz)

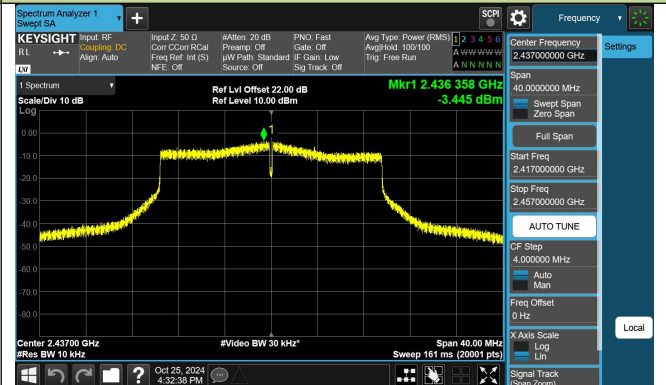 


Channel 11 (2462MHz)

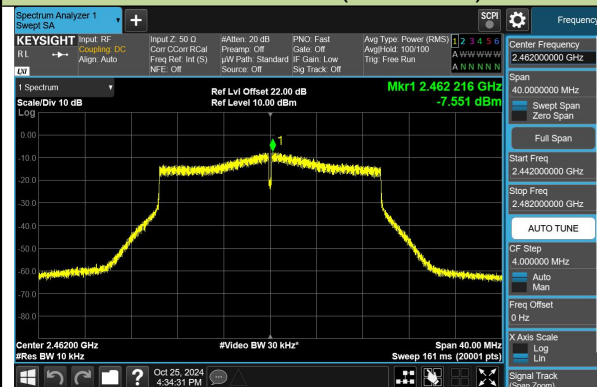 

802.11be-EHT40 AVGPSPD – Ant 0 CDD Mode

 
Channel 03 (2422MHz)

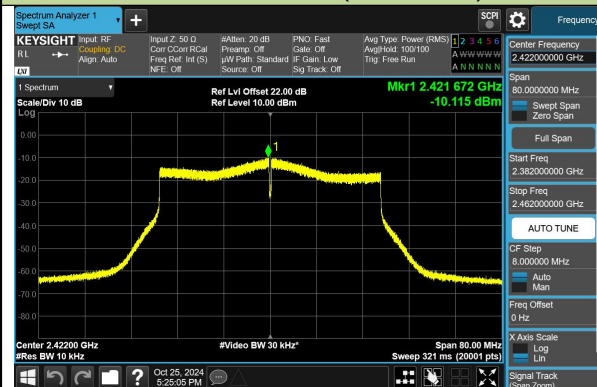

Channel 06 (2437MHz)




 Channel 09 (2452MHz)

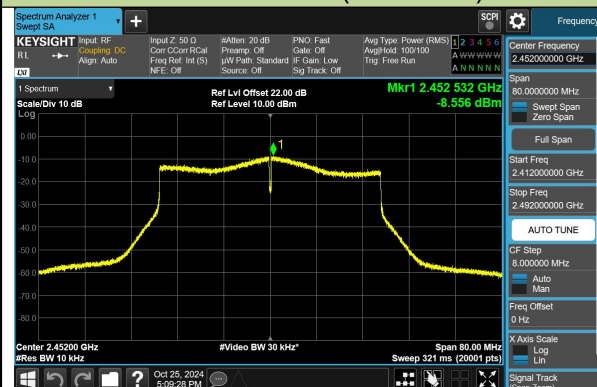

802.11b AVGPSPD – Ant 1 CDD Mode

 
Channel 01 (2412MHz)

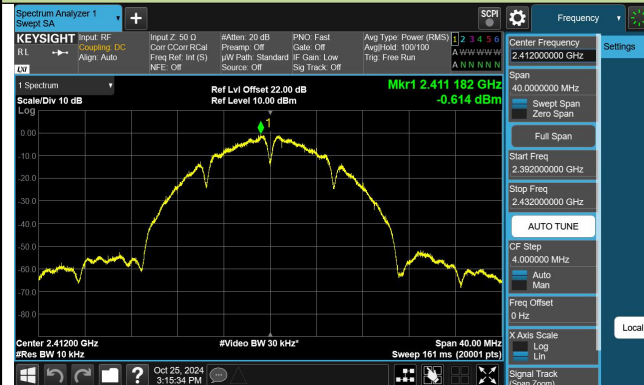

Channel 06 (2437MHz)




 Channel 11 (2462MHz)

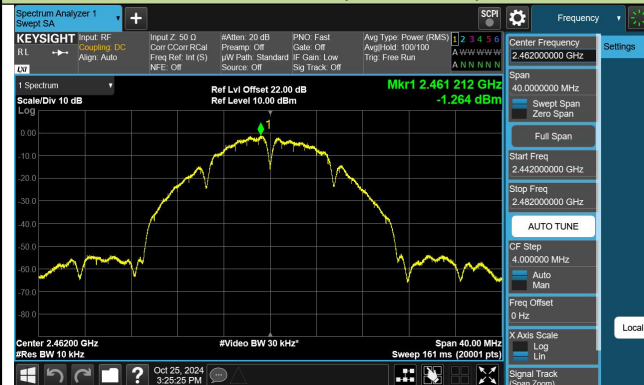


802.11g AVGPSPD – Ant 1 CDD Mode

 
Channel 01 (2412MHz)

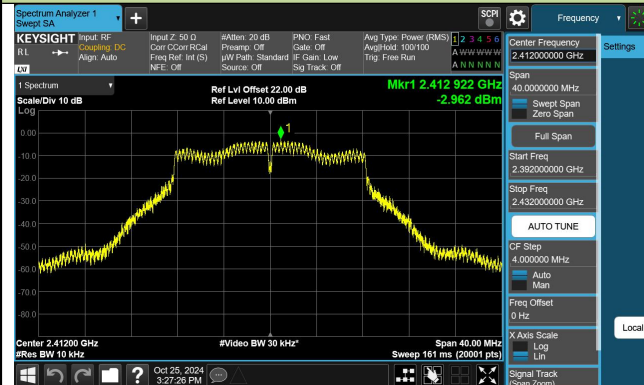

Channel 06 (2437MHz)

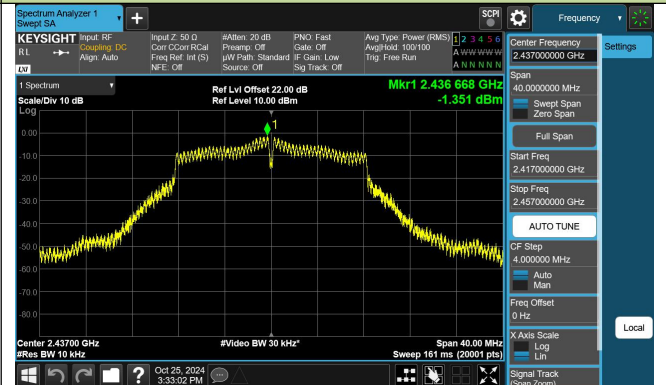 


Channel 11 (2462MHz)

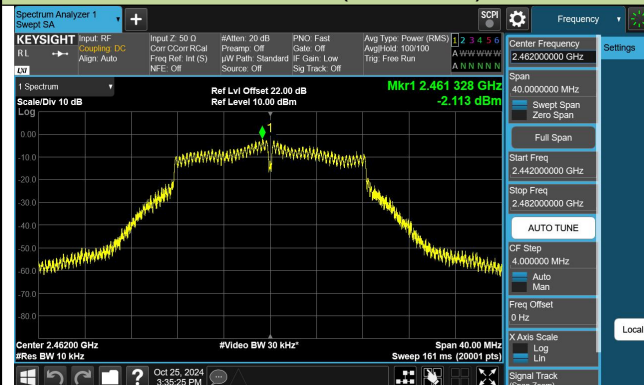 


802.11n-HT20 AVGPSD – Ant 1 CDD Mode

 
Channel 01 (2412MHz)

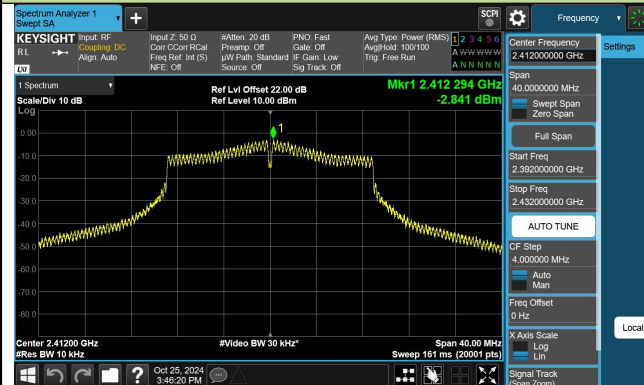

Channel 06 (2437MHz)

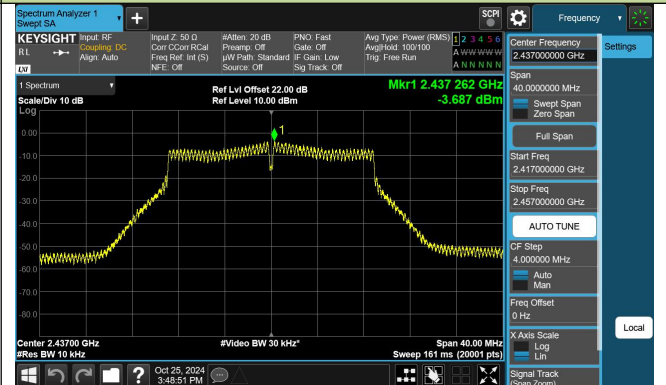 


Channel 11 (2462MHz)

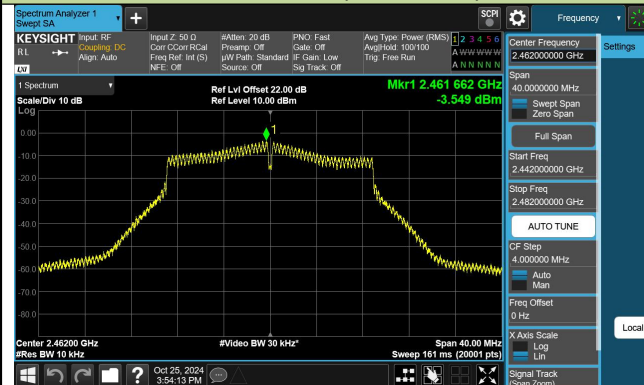 


802.11n-HT40 AVGPSD – Ant 1 CDD Mode

 Channel 03 (2422MHz)

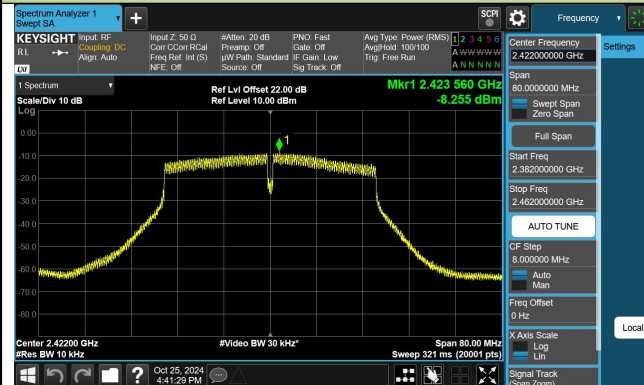

Channel 06 (2437MHz)

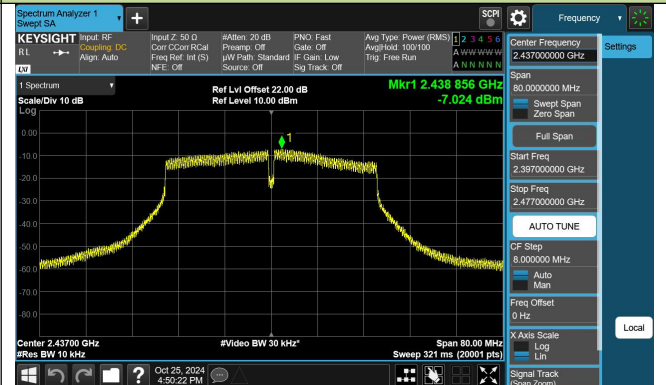 

Channel 09 (2452MHz)

