

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

# Instruction Manual

## Multi-Functional Baby Swing

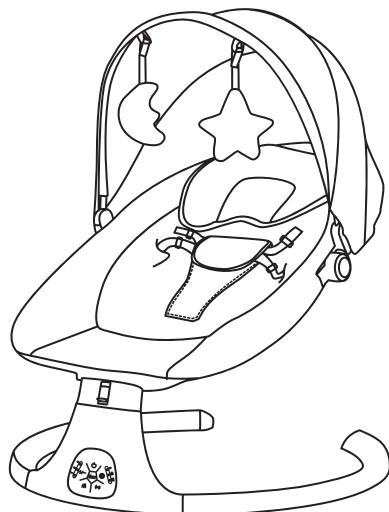

IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

## content

|                                   |   |
|-----------------------------------|---|
| 一、 Content .....                  | 1 |
| 二、 Product Specifications .....   | 2 |
| 三、 To know the product .....      | 3 |
| Product List .....                | 3 |
| product structure .....           | 3 |
| cleaning and washing .....        | 4 |
| Assembly details .....            | 4 |
| safety instructions .....         | 5 |
| Product power .....               | 5 |
| 四、 The use of products .....      | 6 |
| function usage .....              | 6 |
| Remote Control Instructions ..... | 7 |
| Panel Description .....           | 7 |
| 五、 Notice .....                   | 8 |

11. Do not let children use this product as a toy!
12. This product should not be opened or folded until children are away from it!
13. This product can be used for a long time.
14. When this product is connected to a music player, make sure that the volume of the player is setting to the low level!
15. If any part is damaged or missing, please do not use this product unless a replacement part has been reviewed by the manufacturer, do not use a substitute easily !
16. Stay away from fire!
17. **The bassinet can only be used when the locking mechanism of the folding system is engaged.**
18. Never let the child sleep in this product. This product does not replace a cot or a crib. Should the child fall asleep, then it should be placed in a suitable cot or crib.
19. Do not use the product if any components are broken or missing.
20. Do not use accessories or replacement parts other than those approved by the manufacturer.

# WARNING

## ⚠WARNING

1. Must use seat belt when using this product!
2. Do not leave unattended children alone in the product
3. Suitable age: **0-9 months, weighing less than 20 lbs.**
4. Do not use toy sticks to pick up or move it.
5. Do not lift or move this product when children are in it
6. It is strictly forbidden to put other things on the toy stick except for the matching toys!
7. This product is strictly prohibited to be used in high places (such as: countertops, tables, stairs or other places higher from the ground) to prevent the danger of falling!
8. When using this product, please place this product on a flat surface, and it is not allowed to use it on a non-flat surface!
9. Pay attention to the danger of asphyxia : Please do not use it on soft objects to prevent asphyxia (such as beds, sofas, etc.)
10. Please do not use it for the baby who can sit up alone to prevent hidden accidents such as choked or strangled by a seat belt.

9

## Product Specifications

### Product Specifications

|                 |  |
|-----------------|--|
| Product name    | Multi-Functional Baby Swing                  |
| Input voltage   | 100-240V-50/60Hz                             |
| Output voltage  | DC5V、1A                                      |
| Applicable age  | <b>0-9 months, weighing less than 20 lbs</b> |
| Production date | marked on the packaging or product           |
| WARNING         | Do not use adapters of non-standard classes  |

## ⚠CAUTION

To prevent battery leaks, which can burn skin and eyes:

- Always replace the entire set of batteries at one time.
- Never mix old and new batteries, or batteries of different brands or types.
- Remove batteries when storing product for a long time.
- Dispose of used batteries immediately.

|                                     |   |
|-------------------------------------|---|
| Seller name and address             | Name : Youya(Guangzhou) Daily Products Co.,Ltd.<br>Address : No. 66, Hesui Industrial Avenue, Dongfeng Town,<br>Zhongshan, Guangdong Province, China<br>Phone : +86-13802953249 |
| Manufacturer name and address       | Name: Youya(Guangzhou) Daily Products Co.,Ltd.<br>Address: No. 66, Hesui Industrial Avenue, Dongfeng Town,<br>Zhongshan, Guangdong Province, China<br>Phone: +86-13802953249    |
| Location(city/state) of manufacture | Dongfeng, Zhongshan, China  |
| Date of manufacture                 | 2023/07/06  |
| Model name                          | S0008   |

2

To know the product

## ⚠️ Notice


- 1) The power terminals must not be short-circuited
- 2) Do not use adapters of non-standard classes to power the product.  
The input power of the adapter is 100-240V~50/60Hz.  
The output voltage and electric current are DC5V, 1A.
- 3) When using the adapter, keep the adapter away from children
- 4) Adapters used for swings should be regularly inspected for power cord sockets, accessories and other parts, and should be stop using if there is any damage.

### Product List

Please check the quantity of the contents before using, if there are any missing parts, please contact the seller.

| NO. | Name       | Quantity |
|-----|------------|----------|
| A   | base       | 1        |
| B   | Seat set   | 1        |
| C   | canopy set | Optional |

Accessories package: manual x1,  
DC cable x1, remote control x1

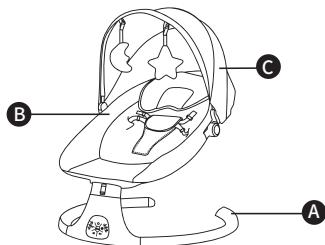

3

## ⚠️ WARNING

**FALL and STRANGULATION HAZARDS:** Infants have suffered head injuries falling from swings and have strangled in straps.

- **ALWAYS** use restraints. Adjust to fit snugly.
- **STOP** using product when infant attempts to climb out (approximately 9 months).
- Stay near and watch baby during use. This product is not safe for sleep or unsupervised use. If baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet.
- **ALWAYS** place swing on floor. Never use on any elevated surface.

**SUFFOCATION HAZARDS:** Young infants have limited head and neck control. If the seat is too upright, infant's head can drop forward and compress the airway.

- **ALWAYS** keep swing seat fully reclined until infant is at least 4 months old AND can hold up head without help. Never leave the child unattended.

Stop using the product when the child starts trying to sit up.

Never use this product on an elevated surface (e.g. a table).

Always use the restraint system.


Never use the toy bar to carry the product.

Do not move or lift this product with the baby inside it. When the product is connected to a music player, ensure that the volume of the music player is set to a low value.


8

## Use of the product

### Remote Control Instructions

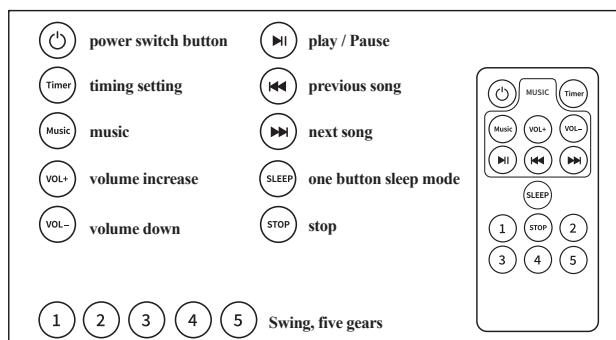

### Panel Description

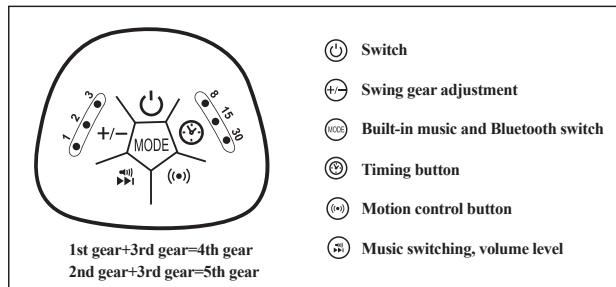

7

## To know the product

### WARNING !

This product should only be assembled and cleaned by adults

### Cleaning and washing

Seat frame set: Remove the seat frame set; washed by hand in cold water.

Toys: Hand and machine washable; soaked in water and added with soft detergent, scrubbed by a soft brush; filtered and dehydrated with clean water, or directly put into the washing machine for washing and dehydration, and put them in a cool place to dry.

Fabric: Flannel, hand and machine washable.

Inner filling: Fire-resistant rigid resin cotton.

### WARNING!

Bleaching, dehydration, drying are prohibited!

### Assembly details



Insert the seat frame set into the base frame set, optional ①, electric swing + canopy set.



4

## To know the product

Toy dolls installation: Put two toy dolls on the hooks which on the inside of the canopy ②, and stick the toy dolls velcro.

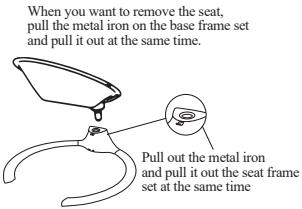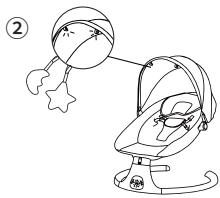


## Safety instructions

Put the baby in the seat cloth, fasten the safety buckle, and then pull down the cover



## Product power

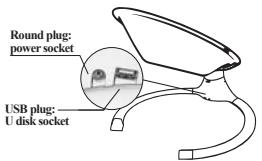

1. The DC plug can be inserted into the AC power supply of 100-240V/50/60Hz
2. The DC connector can be connected to the power bank for power supply
3. Adapter output parameters: voltage is 5V, electric current is 1A. Do not use adapters of non-standard classes to power the product.

## Use of the product

### function usage

#### (一) ① Power switch button:

1. Press the first time, the indicator light is on, the power is turned on
2. Press the second time, the indicator light is off, and the power is cut off.

#### (二) ② Gear increase/decrease button:

There are 5 kinds of swing options in the gear adjustment, and the adjustment starts from the stop gear to increase, and the current gear is relative to the on and off of the gear indicator light.

The swing angle is about 0°, 18°, 21°, 23°, 25°, 31° (no load) in turn, load will be slightly reduced

Note:

1. When the gear is in neutral and there is no timing, the gear indicator light and timing light will flash
2. When a jam is detected, the gear will be automatically closed, and the gear indicator light will flash to remind

#### (三) ③ Timing button:

- Press the first indicator light is on for 8 minutes
- Press the second indicator light twice is on for 15 minutes
- Press the third indicator light three times is on for 30 minutes

When the timer expires, all functions stop and enter standby power saving mode; if the timer function is not switch on, other functions will work indefinitely until running out of the battery.

#### (四) ④ Music play volume buttons:

- Press it and start to play system music
- Short press to play next music
- Press and hold until hearing the volume change and then not press to adjust the volume cyclically
- Press and hold for about 2 seconds to turn off the music

#### (五) ⑤ Motion control button:

You can enter or out of the motion control mode, and it will automatically enter the motion control mode when the time is up.

Turn on the timing, after the timer expires, it will enter the motion control mode, and turn on the motion control light.

In the motion control mode, the cradle will automatically swing after it detects that there is a slight left and right shaking, and then enter the 1st gear. Timing 8 minutes.

#### (六) ⑥ Bluetooth connection:

Turn on the mobile phone Bluetooth to connect "S0008", after the connection is successful, you can directly play the song.

#### (七) ⑦ MODE button:

The MODE button is the switch button for internal music and USB or Bluetooth. The button is invalid when there is no USB and Bluetooth.

#### (八) If the rocking chair shakes badly, please check if the machine is placed on the flat.