

SOUNDLOGIC<sup>XT</sup>

LSM-6/2382

LIGHT-UP PARTY IN A BOX

BLUETOOTH KARAOKE SPEAKER

WITH WIRELESS MICROPHONE



## INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY

AND RETAIN FOR FUTURE USE

### Getting Started

- Remove the product from the box.
- Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

### Package Contents

- LED Light-Up Karaoke Speaker with Wireless Microphone
- Type-C Charging Cable
- Instruction Manual


### Key Features

- LED Light-Up Karaoke Speaker with Wireless Microphone
- Connects to Bluetooth enabled devices; stream music wirelessly
- 5 different voice changing sounds including original, female voice, male voice, baby voice, monster voice
- Colour changing RGB lights
- Wireless & rechargeable microphone connects to speaker for karaoke
- Powerful 5W speaker delivers loud sound with bass
- Multi-function: Bluetooth, Micro-SD card slot & USB slot
- Portable & suitable for all occasions
- Rechargeable battery for speaker & microphone

### SAFETY INSTRUCTIONS

- Keep the product away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not operate the product if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the product.
- Do not use the product if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the product with wet hands.
- Do not put objects into any of the openings.
- Keep the speaker free from dust, lint etc.
- Do not use this product for anything other than its intended use.
- Keep the product out of reach of children.
- This appliance is not a toy.
- Batteries (battery pack or batteries installed) should not be exposed to excessive heat, such as sunshine, fire or the like.

### Description of Parts

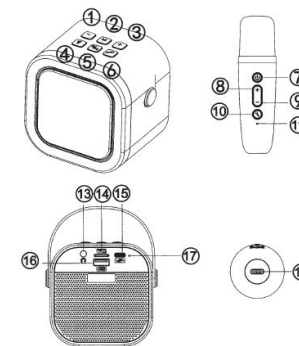

|    |                                                                                                                                   |
|----|-----------------------------------------------------------------------------------------------------------------------------------|
| 1  | Volume Decrease - / Skip Backward Button                                                                                          |
| 2  | Mode Button                                                                                                                       |
| 3  | Volume Increase + / Skip Forward Button                                                                                           |
| 4  | Light Button                                                                                                                      |
| 5  | Power ON/OFF / Play/Pause Button                                                                                                  |
| 6  | Sound Cancellation Button: Short press to turn on/off sound cancellation                                                          |
| 7  | Power ON/OFF: Long press to turn on/off the microphone, short press to turn on/off the sound from the microphone after turning on |
| 8  | Microphone Volume + Button: Short press microphone volume to add, double click reverb to add                                      |
| 9  | Microphone Volume - Button: Short press microphone volume to reduce, double click reverb to reduce                                |
| 10 | Original / Magic Sound Button: Short press to switch the magic sound, long press to cancel the original sound open/close          |
| 11 | LED indicator of Microphone                                                                                                       |
| 12 | Charging Port of Microphone                                                                                                       |
| 13 | Aux-In Port                                                                                                                       |
| 14 | Micro SD (TF) Card Slot                                                                                                           |
| 15 | Charging Port of Speaker                                                                                                          |
| 16 | USB Slot                                                                                                                          |
| 17 | LED indicator of Speaker                                                                                                          |

### INSTRUCTIONS FOR USE

#### Charging the speaker

The speaker has a built-in rechargeable battery. When the battery is drained, the speaker will turn OFF automatically. Please recharge the battery every time it after it is drained.

Plug the Type-C end of the included Type-C rechargeable cable into the charging port. Plug the other end into a USB port on your computer or other devices made for USB charging. Red LED Light illuminates indicating that the device is being charged.

It takes about 4 hours to fully charge the speaker. Once the speaker is fully charged, the LED Light will turn OFF.

It is recommended to fully charge the speaker before its first use.

#### Charging the microphone

The microphone has a built-in rechargeable battery. When the battery is drained, the microphone will turn OFF automatically. Please recharge the battery every time it after it is drained.

Plug the Type-C end of the included Type-C rechargeable cable into the charging port. Plug the other end into a USB port on your computer or other devices made for USB charging. Red LED Light illuminates indicating that the device is being charged.

It takes about 2 hours to fully charge the microphone. Once the microphone is fully charged, the LED Light will turn OFF.

It is recommended to fully charge the microphone before its first use.

#### Turning ON/OFF the Speaker –

Before Turning ON the speaker, please ensure that it is fully charged. Long press the Power ON/OFF button to turn the unit on/off.

#### Connect using Bluetooth Technology

- Long press the Power ON/OFF button to turn on the unit. You will hear an indication tone, blue LED flashes rapidly and the colour changing light is on, indicating that you are now in Bluetooth Pairing Mode.
- Activate the Bluetooth function on your source device (Mobile Phone or Tablet). Please refer to the manufacturer's instructions for enabling Bluetooth on your device.
- Search for available Bluetooth devices and you will find "SL Party In A Box" – Pair it with this device.
- You might be prompted with "Pair with SL Party In A Box?" message on your source device, with "Cancel" and "OK" options. Please click "OK".
- If required, enter the password "0000" to pair with the device.
- Once paired successfully, you will hear another indication tone and blue LED stays on.
- You can now stream wireless music on your speaker through your source device.

#### Stream Wireless Music

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.

| Function        | Operation     | Button                                                                    |
|-----------------|---------------|---------------------------------------------------------------------------|
| Increase Volume | Playing music | Short press the + button to increase the volume                           |
| Decrease Volume | Playing music | Short press the - button to decrease the volume                           |
| Pause           | Playing music | Short press the Play/Pause button will pause the music                    |
| Play            | Pausing       | Short press the Play/Pause button will resume the music                   |
| Previous track  | Playing music | Long press the Skip Backward button will return you to the previous track |
| Next track      | Playing music | Long press the Skip Forward button will take you to the next track        |

(Note: The above functions can be used in Bluetooth mode only. An indication tone will alert you when the volume is adjusted to maximum level.)

#### Play music using "Aux-in"

- Turn on the speaker.
- Plug the 3.5mm Aux cable (not included) to the Aux-in port of the speaker.
- Plug the other end of the cable to the audio device (such as computer / tablet / MP3 player etc.).
- Select your favourite song at the source device to play.

(Note: While using AUX-in function, except volume function, all functions such as playing next/previous track can be controlled only through your source device.)

#### Stream music from USB or Micro SD (TF) Card

- Turn ON the speaker.
- Insert the USB drive or Micro SD (TF) Card preloaded with songs into the USB slot or Micro SD (TF) Card Slot of the speaker respectively. Speaker would automatically start playing songs from the USB drive or Micro SD (TF) Card.  
*Note: USB or Micro SD (TF) Card not included.*
- To Skip Track Forward – Short press the Skip Forward button.
- To Skip Track Backwards – Short press the Skip Backward button.
- To Pause the Track – Short press the Play/Pause button.
- To Play the Track – Short press the Play/Pause button.
- Long press + to increase the volume or - to decrease the volume.

**Note:** USB / Micro SD (TF) Card: Supports up to 32GB; Supports music file format: MP3. USB Flash Drive or Micro SD (TF) Card not included.

#### Colour Changing LED light Mode (LEDs are not replaceable)

1. Turn ON the device.
2. Short press the Light button each time to change 4 different colour changing LED light patterns.
3. Long press the Light button will turn on/off the colour changing LED lights.

#### Tips!

1. Short press the "Mode button" to switch between different functions of the speaker – Bluetooth / Aux / USB-Micro SD (TF).
2. When the speaker is not in use, turn it OFF to save battery power.

#### Using the Wireless Microphone

1. Turn on the speaker.
2. Long press the Power ON/OFF button to turn on the Wireless Microphone with blue LED light flashing, it will automatically connect with the speaker with indication tone, and the blue LED will stay on. You can speak for megaphone operation or sing for Karaoke operation.
3. When the microphone is not in use, turn it OFF to save battery power.

#### Specifications

Bluetooth Version: 5.3

Wireless Streaming Range: Up to 33 feet

Speaker Output: 5W

Size: speaker – 3.70" L x 2.68" D x 3.51" H, microphone - Dia. 1.48" x 5.25" H

Weight: speaker - ~10 Oz, microphone - ~2.1 Oz

Power Input: DC 5V

Charging Time: speaker - about 4 hours & microphone - about 2 hours

Play Time: 2.5-3 hours (max. Volume)

Built-In Rechargeable Battery: speaker - 1200mAh & microphone - 500mAh

USB / Micro SD (TF) Card: Supports up to 32GB, supports music file format: MP3

(Note: Battery life & charging time may vary based on usage, types of devices connected & wireless distance.)

#### Troubleshooting

| Problem                 | Possible Cause                                                                                                                     | Solution                                                                                            |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|
| <b>Low sound level</b>  | Source (Tablet, Mobile Phone, Laptop, etc.) volume too low.<br>Battery dead                                                        | Adjust source volume.<br><br>Charge Battery.                                                        |
| <b>Sound distorted</b>  | Battery nearly dead                                                                                                                | Charge Battery.                                                                                     |
| <b>No sound at all.</b> | Source (Tablet, Mobile Phone, Laptop.) turned off.<br>Speaker turned off.<br>Volume turned down source.<br>Media paused on source. | Turn the source on.<br><br>Turn the speaker on.<br>Adjust volume source.<br>Play media from source. |

#### Care and maintenance

Read the following recommendations before using the product. By following these recommendations, you can ensure long-lasting enjoyment of the product for years to come.

- Do not expose the unit to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Do not use abrasive cleaning solvents to clean the unit.
- Do not expose the unit to extremely high or low temperature as this will shorten the life of

electronic devices, destroy the battery or distort certain plastic parts.

- Do not dispose of the unit in fire as it will result in an explosion.
- Avoid contact with sharp objects to prevent scratches and damage.
- Prevent the unit from falling onto the floor to avoid potential damage to its internal circuitry.
- Refrain from attempting to disassemble the unit unless you possess the necessary professional expertise, as improper handling may result in damage.

#### FCC Instructions

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

**NOTE:** This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### Limited Warranty

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

**WARRANTY DURATION:** All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

**WARRANTY COVERAGE:** This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**WARRANTY DISCLAIMERS:** This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

**WARRANTY PERFORMANCE:** During the above 90-day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90-day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

**SERVICE AND REPAIR:** If service is required for this product, you should first contact Midwest Trading Group Customer Service at [info@midtradinggroup.com](mailto:info@midtradinggroup.com) or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

**NOTE:** Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.