

WALKIE-TALKIES

Model: R-851

Please read the instructions carefully before use and keep them well.



Functional descriptions in this manual are subject to change without notice

Catalog

Function explaination	3
Method of Use	4
Safety Instructions	5
Maintenance and Precautions	6
Product parameters	7
FAQ	8
After-sale service	9
Fcc Warning	10

Warning: Contains small parts, may pose a choking hazard
Not suitable for children under 3 years of age.

Function explanation



Method of Use

Power on / off

- Please install 3 AA batteries in the back battery compartment for the first time.
- Push the on key upward, the indicator light is on, indicating normal boot.
- Push the on key down, the indicator light is off, indicating normal shutdown

Speech signal sending / receiving

- Long press the right call button to send the speech signal
- Release the right call button and pick up the speech signal.
- When sending speech signals, do not speak loudly, otherwise the voice will be distorted, just 5-10cm away from the microphone at a normal volume.
- When the walkie-talkie is transmitting signals / receiving signals, keep the walkie-talkie in the vertical position, holding the middle and lower parts of the product, try not to get close to the antenna, so as not to affect the call distance.

Installation of batteries

- This product uses 3 1.5V (AA) batteries individually, a total of 6 batteries in a pair, and needs to be assembled by adults
- Loosen the battery cover screws with a screwdriver and uncover the battery cover.
- Insert the battery according to the correct polarity
- Close the battery cover and tighten the battery cover screws with a screwdriver



Safety Instructions

For your safe and efficient use, please read the following safety information.

Safety of batteries.

- Non-rechargeable batteries cannot be recharged.
- Rechargeable batteries should only be charged under adult supervision.
- Rechargeable batteries should be removed from the toy before charging.
- Different types of batteries or old and new batteries should not be mixed.
- Batteries should be put in with the correct polarity.
- Batteries should be removed from toys.
- The power terminals must not be short-circuited.

User security information

- Please turn off the intercom before entering the flammable and explosive environment. Do not replace or charge the battery in flammable or explosive environment.
- Do not use a walkie-talkie with a damaged antenna, which may cause minor burns if exposed to the skin.
- The maintenance of the walkie-talkie can only be carried out by professional technicians, do not disassemble by yourself.
- In order to avoid problems caused by electromagnetic interference or electromagnetic compatibility, please turn off the walkie-talkie in places with a "Please turn off the intercom" sign.
- This walkie-talkie is not fully waterproof, please keep it dry. Do not expose the walkie-talkie to direct sunlight for extended periods of time or place it near a heating device.
- When the intercom is transmitting, keep the intercom in an upright position and speak close to the speaker.
- If you wear a walkie-talkie on your body, make sure that the antenna is at least 5 cm away from the body when transmitting.

Maintenance and Precautions

- Please wipe the surface with a clean and soft cloth.
- When using the product, it is recommended to handle with care to avoid falling, collision and strong impact, so as not to cause damage to the product.
- The field contains electronic components, please avoid the product by flooding electric shock, strong magnetic damage, etc., otherwise it may cause product function failure.
- Please recycle properly as discarding can have an impact on the environment.
- Please keep away from open flame or high temperature places.
- Do not boil or put into the disinfection cabinet disinfection, do not put into the microwave heating.

Product parameters

Product name: Walkie talkies

Model: R-851

Frontal voltage: DC3V

Frontal static current: 50 mA

Frontal Fixed Power: 0.1 W

RF output power: < 10 mW

Frequency: 433 MHZ

Age: 3 years and up

FAQ

Q: Intercom not working? One can not receive?

A: Please make sure that the battery of the walkie-talkie is sufficient, if the battery is low or insufficient, it will cause unclear or even impossible to talk.

Q: Not clear, interference?

A: Please make sure the battery is sufficient. Please avoid interfering with the radio wave environment, avoid the interference environment such as elevators and iron houses.

Q: Can I talk to more?

A: The same walkie-talkie, is to support multiple intercom

Q: How far is the distance supported?

A: Up to 500 m (depending on environment)

After-sale service

Warranty Terms

- Thank you for your support of our products, with the warranty card to enjoy the warranty service. Users purchase products with instructions and warranty card users fill out after please take good care of, for replacement certificate.
- From the date of purchase, under normal circumstances, the use of failure, the commitment warranty period of one year.
- The following are not covered by the warranty:

Damage caused by improper personal use or unreasonable maintenance 2. Damage caused by human factors such as unauthorized disassembly and modification of the product 3. The product uses non-company parts 4. Normal wear and tear of the product; 5. Damage caused by force majeure.
- In addition to the warranty to provide paid maintenance services, according to the provisions of the application fee, when applying for warranty, please be sure to send the product and can prove the date of purchase documents together.
- For any questions about after-sales service, please consult the dealer or official customer service.

Fcc Warning

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important: Change or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction