 


58MM Thermal Receipt Printer

User Manual

Product packaging list

Printer	1 PC
Power cable	1 PC
Power adapter	1 PC
Data connection line	1 PC
User manual	1PC
Paper roll	1Roll
Driver(Optional)	1PC

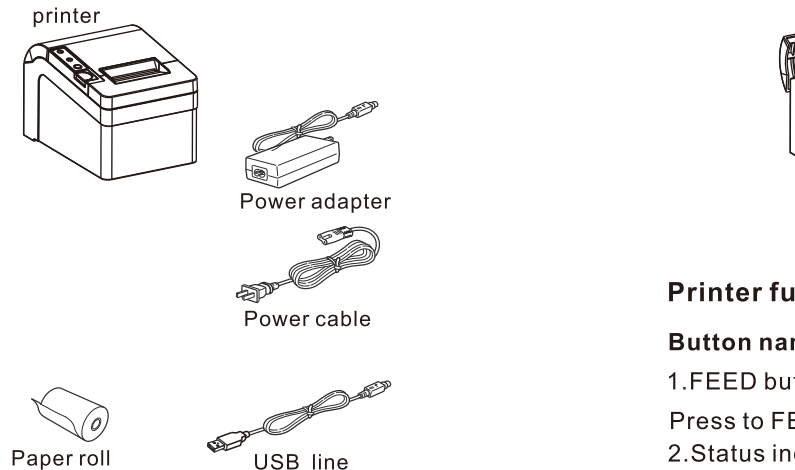

 
Please keep use manual for reference

Paper roll loading

58mm thermal paper roll recommended to 58mm series printers.

The method of paper loading is as below:


- Open top cover.
- Drop paper roll in the hole as below.
- Pull the paper into the paper holder, the close top cover.
- Print one self-test to make sure paper correctly installed.

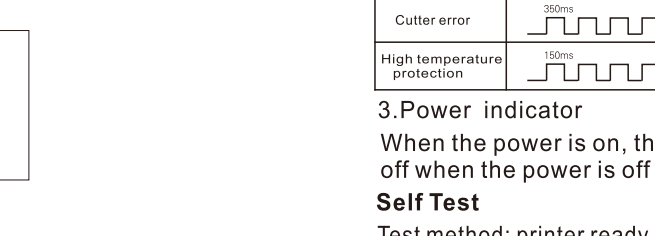

Printer function description

Button name,indicator LED light and function

 - FEED button
- Status indicator

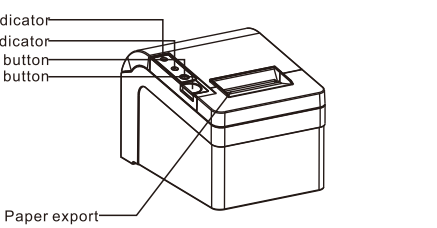

Status	Status light flashing mode	describe
Bluetooth connection (yellow)		Bluetooth connection status indicator light yellow
Paper detected(red)		The paper status is detected. The lamp is usually bright red
No paper detected		Status light flashes once a cycle (8 times per cycle)
Cutter error		Status light flashes 4 times per cycle (8 times per cycle)
High temperature protection		Status light flashes 8 times per cycle (8 times per cycle)

3.Power indicator

When the power is on, the light is on and the light goes off when the power is off

Self Test

Test method: printer ready, power off the printer, press the FEED button, then turn on the power, about 2 seconds after the release of FEED, the printer will print a test page (including test page printer working condition and equipment information).

Sixteen decimal mode

When the printer is ready, press and hold the FEED button, then turn on the printer power, release the FEED button in about 10 seconds, and then the printer enters the sixteen decimal mode. The printer prints out "Hexadecimal Dump".

Notice : continuously press FEED button three times, the printer will return to standard mode.

Restore factory settings

After the printer is connected, press and hold the FEED button, then turn on the printer power supply, about 20 seconds, the printer will appear red light flashing 2 times, at this time release the FEED button, the printer has been restored factory settings.

Cutter stuck maintenance(For printer with cutter)

Method(1)

Turn off the power and then restart.

 
Method(2)

- Turn off power, open printing head cover.
- Turn the white gear till it back to standard.
- Reload the paper roll, turn it on it is ok to.

Notice : To avoid the damage of the printing head and automatic paper cutter, please do not open cutter and mechanism violently.

Printer Connection

- Connect AC power cord to power, DC power cord to printer.
- Connect printer and computer/tablet.
- Connect cash drawer.

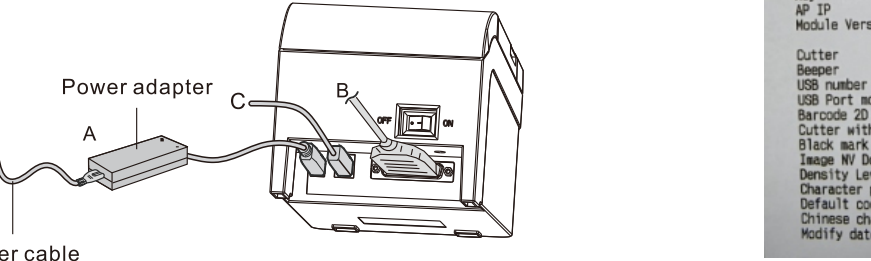

WiFi Function Usage Tutorial

(1) Due to the printer's default AP mode, the self-test page needs to be printed: After the printer is turned off, press and hold the FEED paper key, and then start, wait until the printer flashes a red light and then let go, and a self-check page will come out (as shown in Figure1). After the self-check page is printed, press and hold the key for 0.2 seconds immediately, and a menu will come out, and then press the key twice continuously (AP mode web tutorial) to automatically type out a webtutorial (as shown in Figure 2).

