

<b>Description of signal words</b>	Page	5
<b>Customer service</b>	Page	6
<b>List of pictograms used</b>	Page	7
<b>Introduction</b>	Page	8
Intended use	Page	8
Trademark notice	Page	9
Description of parts	Page	10
Technical data	Page	12
Contents	Page	13
<b>Important safety instructions</b>	Page	14
Safety warnings for batteries	Page	19

<b>Preparation</b>	.....	Page 24
Charging	.....	Page 24
Inserting roll of label paper	.....	Page 24
<b>Use</b>	.....	Page 27
<b>Troubleshooting</b>	.....	Page 30
<b>Cleaning and care</b>	.....	Page 33
<b>Disposal</b>	.....	Page 34
<b>Three year limited warranty</b>	.....	Page 35

## DESCRIPTION OF SIGNAL WORDS



### **WARNING**

WARNING indicates a hazardous situation that, if not avoided, could result in death or serious injury.



### **CAUTION**

CAUTION indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

### **NOTICE**

NOTICE indicates information considered important, but not hazard related (e.g. messages related to property damage).

## CUSTOMER SERVICE



Call customer service at  
**1 (844) 543-5872**



Visit the Website Customer  
Service Platform at

**[www.lidl.com/contact-us](http://www.lidl.com/contact-us)**

Visit a LIDL store for further assistance.

**IAN 511654\_2410**

Please have your  
IAN number ready.

## List of pictograms used

	Use indoors
	Safety notes Instructions for use
	Caution! Risk of burning!
	Sharp edges! Keep hands and other body parts away from sharp edges.
	This symbol indicates that a separate special supply unit is necessary to connect electrical devices to the supply network.
	Dispose of the packaging and device in an environmentally-friendly manner!

# **Thermal Label Printer**

## **● Introduction**

Congratulations on your purchase. You have selected a quality product. The instructions for use are a part of the product. They contain important information about the safety, use and disposal of the product. Before using the product, please learn about all the safety information and usage instructions. Only use the product as described and for the specified applications. If you lend the product to someone else, please also give all the instructions.

## **● Intended use**

This product is only intended for printing rolls of label paper. Use the included rolls of label paper with the product. This product is only intended for private household use. This product is not intended

for commercial or industrial use. Using the product for any other purpose is considered improper use. Any claims for damages resulting from improper use are excluded. The user bears all risk.

## ● **Trademark notice**

- USB is a registered trademark of USB Implementers Forum, Inc.
- The App Store is a service trade mark of Apple Inc.
- Google Play is a registered trademark of Google Inc.
- iOS and Apple are registered trademarks of Apple Inc in the USA and other countries.
- Any other names and products may be trademarks or registered trademarks of their respective owners.


## ● Description of parts

### Label printer

- 1** ON/OFF button
- 2** LED indicator
- 3** Label printer
- 3a** Cover
- 4** Paper feed
- 5** Slide switch
- 6** USB-C input

### Accessories

- 7** Roll of label paper
- 8** USB-C cable

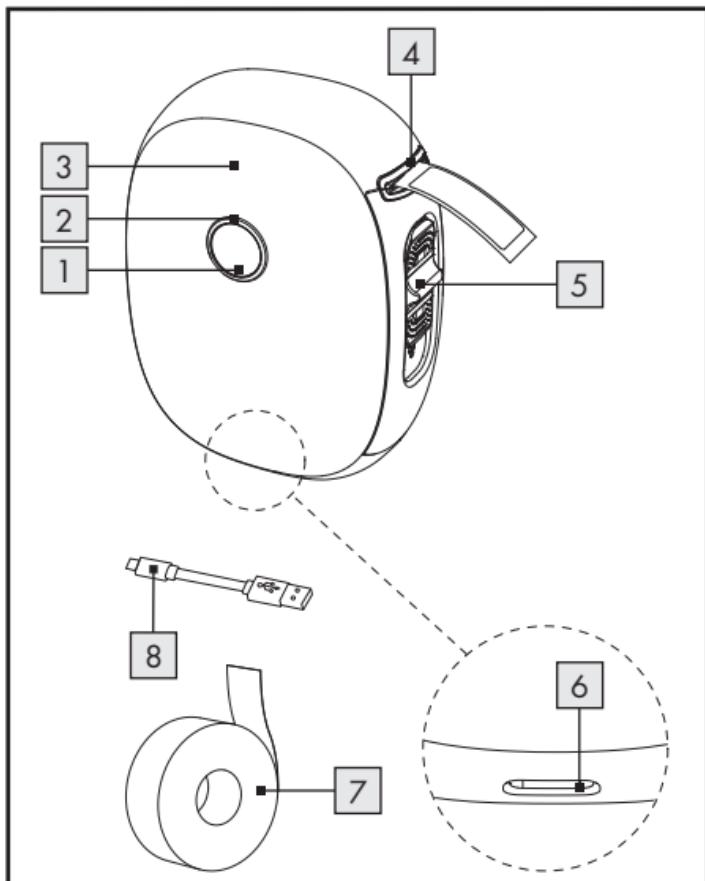

## ● Technical data

Operating voltage	
and-current:	5 V === 1 A
Dimensions:	2.91 x 3.54 x 1.38 in (74 x 90 x 35 mm)
Weight:	0.31 lb (140 g)
Battery capacity:	1200 mAh
Resolution:	203 dpi
max. print width:	0.47 in (12 mm)
Print method:	Thermal printing
Interface:	USB-C
Compatible with:	Android and iOS

## Operating systems

Android/iOS version:	Android 6.0/iOS 13.0 and higher
Bluetooth version:	5.0

## ● Contents

1 label printer	1 set of operating
1 USB-C cable	instructions
1 roll of white label paper	

We recommend using the designated refill rolls (IAN) **511655\_2410** for the product. The use of other manufacturer's rolls of label paper is also permitted, provided they have the correct specifications in terms of their properties and dimensions. This could, however, lead to small differences in the print result.

Refer to the instructions included with the refill set for all further information on scope and use.

All safety notes in these instructions for use also apply to the refill set (IAN) **511655\_2410**.



# **IMPORTANT SAFETY IN- STRUCTIONS**

READ ALL INSTRUCTIONS. KEEP FOR FUTURE REFERENCE. INCLUDE ALL DOCUMENTATION WHEN PASSING THIS PRODUCT ON TO OTHERS.

**⚠ WARNING!** Failure to observe the following warnings may result in serious or fatal injuries.

■ **DANGER TO LIFE AND RISK OF ACCIDENTS FOR INFANTS AND CHILDREN!**

Never leave children unsupervised with the packaging material. The packaging material

poses a suffocation hazard. Children frequently underestimate the dangers. Always keep children away from the product.

- Do not leave the product or packaging material lying around unattended. Plastic foil/bags, plastic parts etc. can become dangerous toys for children.
- This product is not intended for use by children or persons with reduced physical, sensory or mental capacities or lacking experience and knowledge. This product may be used by children aged 14 years and up, as well as by persons with limited physical, sensory or mental capacities or lacking experience and knowledge, if they are supervised by a person responsible for their safety or they have been instructed in the safe use of the product and understand the associated risks. Otherwise there is a risk of operating error and injuries.

- Check the product for visible external damage before use. Never use a damaged product. There is a risk of electric shock.
- Always have the product repaired by authorized specialized companies or customer service. Improper repairs may result in considerable risks for the user. This will also void the warranty.
- Never use the product with a defective USB-C cable. There is a risk of electric shock.
- When using a USB power adapter for charging, please follow the corresponding safety notes in the instructions for use.
- The product is only suitable for indoor use.
- Do not use the product if it has been dropped or is damaged. Have the product inspected and if necessary repaired by a qualified professional.
- Do not store or use the product near water.

- Do not immerse the product in water.
- Do not allow moisture to come in contact with electrical parts.

## **⚠ WARNING**

- Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

**Note:** This product has been tested and complies with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

- However, there is no guarantee that interference will not occur in a particular installation. If this product causes harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try and correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the product into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- This product complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This product may not cause harmful interference, and
- (2) this product must accept any interference received, including interference that may cause undesired operation.

## **NOTICE**

- Please note that the warranty does not cover damage arising from improper treatment, non-observance of the operating instructions and safety advice or unauthorised use.



## **Safety warnings for batteries**

- When used correctly, cells and batteries provide a safe and dependable source of portable power. However, if they are misused or abused, this may result in leakage, burns, fire, or explosion.

- Store batteries in a dry place at room temperature. Batteries are sensitive to high and low temperatures. Such thermal exposure may lead to leakage, fire, or explosion.
- Keep cells and batteries out of reach of children, especially small batteries. Ingestion may lead to choking or acute and serious personal injury.
- Keep cells or batteries clean and dry both during use and storage. Wipe metal terminals with a soft, dry cloth if they become dirty.
- Immediately seek medical attention if a cell or battery has been swallowed. Also, contact your local poison control center.
- In the event that the electrolyte comes into contact with the skin or eyes, immediately flush with fresh water for at least 15 minutes and seek medical attention.

- Store unused batteries in their original packaging or in safe place and away from metal objects that may short-circuit them.
- Exercise care in handling batteries in order to prevent shorting with conducting materials, such as rings, coins, bracelets, and keys. The battery or the conductor can overheat and cause burns, leakage, fire, or explosion.
- Clean the battery contacts and also those of the product prior to battery installation. Keep the contacts clean.
- Remove batteries from the product that will not be used for an extended period of time (months or longer).
- Remove discharged batteries from product promptly to avoid possible damage from leakage.
- Choose the proper battery for the intended application.

- Always take care to correctly insert batteries observing (+) and (-) polarity marks on the battery and the product for which it is intended. Proper polarity must be observed to avoid damage to either product or batteries.
- Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types, capacities, or manufacturers.
- Never heat batteries in order to revive them.

## **⚠ WARNING**

Never charge a battery unless the battery label specifically states the battery is rechargeable. Charging a non-rechargeable battery, may result in leakage, fire, or explosion.

- Use only the power cord supplied with the product. The use of other cords may result in the batteries inside the product being charged.

- Do not open or mutilate a battery or cell. Electrolyte from the cell is corrosive and can cause damage to the eyes or skin. The cell contents can also be hazardous if ingested.
- Do not drop or subject the cell or battery to strong mechanical shock.
- Batteries should not be disassembled, crushed, punctured, or otherwise mutilated. Such abuses may result in leakage, fire, or explosion.
- Do not dispose of the battery in a fire. Failure to observe this precaution may result in an explosion.
- Dispose of batteries properly and in accordance with government regulations.

## SAVE THESE INSTRUCTIONS

## ● **Preparation**

We recommend fully charging the product before using it for the first time.

### ● **Charging**


- Use the USB-C cable **8** supplied to connect the product directly to a power source (e.g. a laptop), or use a 5 V USB power adapter (not included) to connect to the mains power supply. The charging time is roughly between 80 and 120 minutes.
- You can print while charging.

### ● **Inserting roll of label paper**




Sharp edges! Keep hands and other body parts away from sharp edges.


- Open the product by flipping open the cover  
3a.

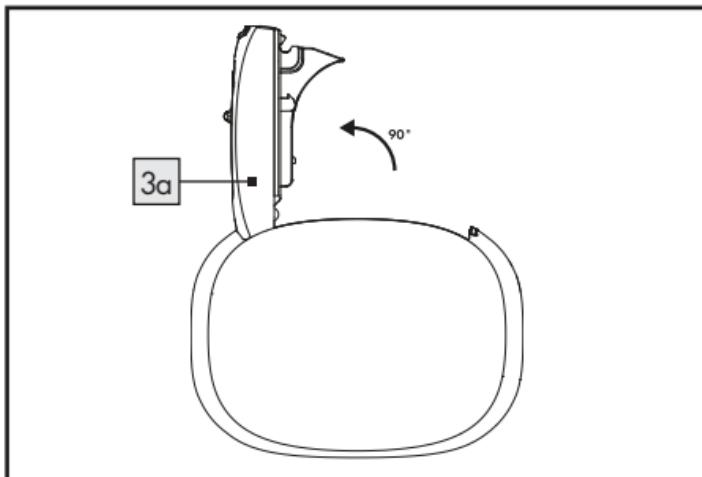

- Place a roll of label paper **7** into the product.

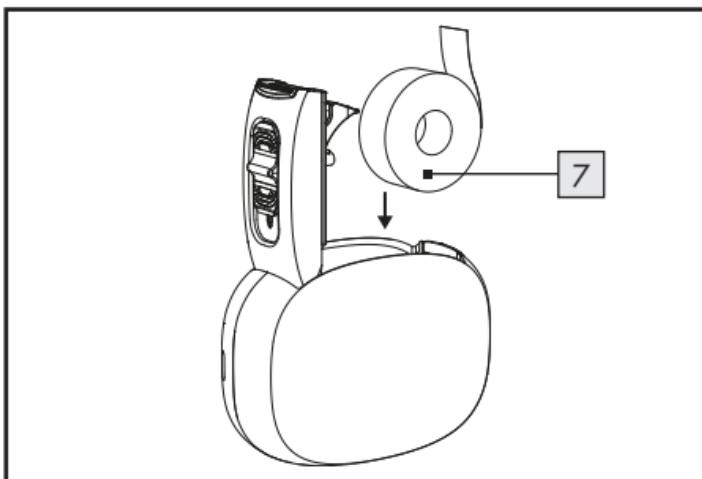

- Close the cover **3a** so that a little of the label paper emerges from the paper feed **4**.

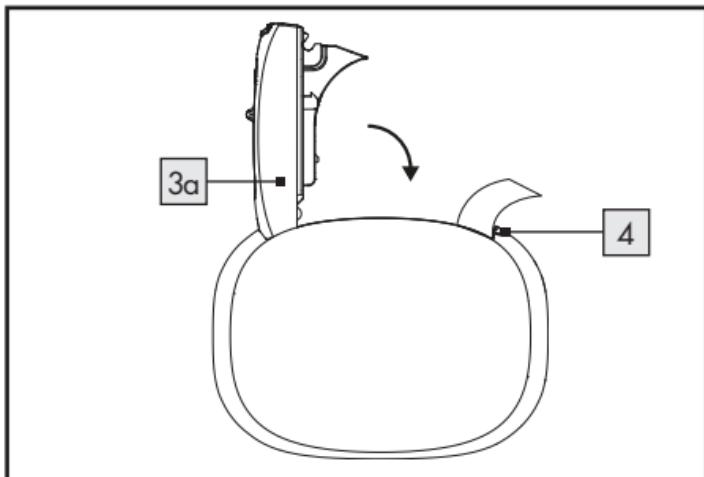

## ● Use

### **LED indicator **2**:**

LED flashes red: flat battery/low battery

LED lights up in red: battery is being charged up/paper shortage/over-heating/open cover

LED lights up in green: battery is fully charged/product is in use


LED lights up in blue: Bluetooth connection is established

- You can download the app by scanning the corresponding QR code.



- Switch on the product via the ON/OFF button **[1]** and activate Bluetooth on your device.

- Move the slide switch **5** away from the paper feed **4** to **open it**.

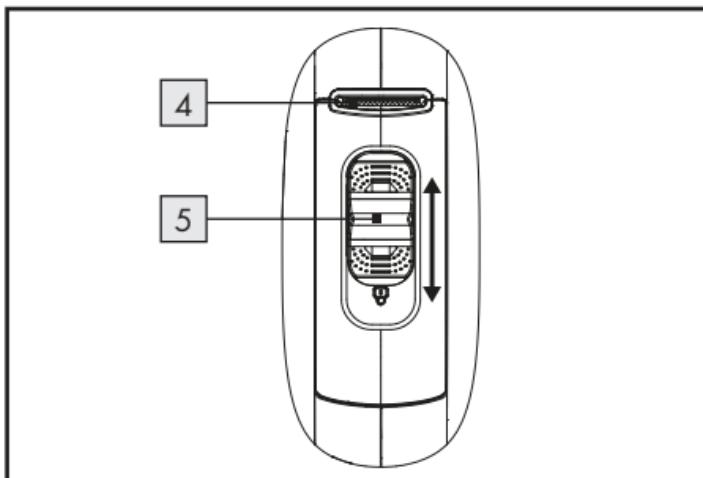

- Press the ON/OFF button **1** twice and the product prints out a QR code.
- Open the app and click on "Not connected".
- Click "Scan to insert", then scan the QR code to connect your device to the product.

**NOTE:** Do not search for the product in your device's Bluetooth settings.

- After initial coupling, the product connects to your device automatically.
- Follow the instructions in the app when printing.
- If you want to cut off a printed label from the roll of label paper **7** then push the slide switch **5** towards the paper feed **4** after printing is complete.

## ● Troubleshooting

Problem	Cause	Solution
The LED indicator <b>2</b> lights up in red.	Paper low.	Insert a new roll of label paper.
	Product overheated.	Switch off the product and allow it to cool down.

<b>Problem</b>	<b>Cause</b>	<b>Solution</b>
The LED indicator <b>2</b> lights up in red.	Cover <b>3a</b> is open.	Make certain that the cover <b>3a</b> is properly closed.
	Fault.	Hold down the ON/OFF button <b>1</b> and the product will restart (hard reboot).
The product does not switch on.	Battery low.	Press and hold the ON/OFF button <b>1</b> for a second.
The product does not switch on.	The ON/OFF button <b>1</b> was not pressed long enough.	Press and hold the ON/OFF button <b>1</b> for a second.

<b>Problem</b>	<b>Cause</b>	<b>Solution</b>
No paper comes out when printing.	The roll of label paper  has been inserted incorrectly.	Insert the roll of label paper  once again.
Poor print quality.	Battery low.	Fully charge the product.
Poor print quality.	Dirty print head due to deposits.	Open the product and clean the print head with a cotton swab dipped in alcohol. Make sure the print head is dry before printing.

## ● Cleaning and care

**⚠ CAUTION** Failure to observe the following warnings may result in injuries or property damage.


-  **RISK OF BURNS!** Before cleaning, unplug the USB-C cable **8** and wait until the product has cooled down.

### **NOTICE**

- Do not clean the product with corrosive or abrasive cleaning agents.
- Dust the product with a soft, dry cloth.
- Tough dirt can be wiped off with a slightly damp cloth.

## ● **Disposal**

Dispose of the packaging through your local recycling facilities and in compliance with all federal, state and local regulations.

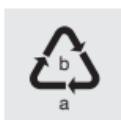

Please note the package markings regarding waste separation, indicated by abbreviations (a) and numbers (b), meaning: 1–7: plastics/20–22: paper and cardboard/80–98: composite materials.



Contact your local waste management authority for additional information on how to dispose of the used product.

To help protect the environment, please dispose of the product properly when it has reached the end of its useful life, do not throw in the garbage.

Information on collection sites and their opening hours is available from your local authority.



### **Improper disposal of batteries can damage the environment!**

Never throw batteries in the garbage. They may contain toxic heavy metals and must be handled as special waste. The chemical symbols of heavy metals are: Cd = cadmium, Hg = mercury, Pb = lead. Used batteries should therefore be disposed of through a local collection point.

## **● Three year limited warranty**

### **What does this warranty cover?**

The warranty covers:

- Damage, breakage or inoperability due to defect.

- Damage not caused by normal wear and tear or failure to follow the safety and maintenance instructions provided in the user manual.

## **What is not covered by the warranty?**

The warranty does not cover damage caused by:

- Normal wear and tear of the product, including fragile parts (such as switches, glass, etc.);
- Improper use or transport;
- Disregarding safety and maintenance instructions;
- Accidents or acts of nature (e.g. lightning, fire, water, etc.);
- Tampering with the product (such as removing cover, unscrewing screws etc.).

Consequential and incidental damages are also not covered under this warranty. However, some states do not allow the exclusion or limitation of

incidental or consequential damages, so this limitation or exclusion may not apply to you.

## **What is the period of coverage and warranty resolution?**

The warranty is for 3 years from the date of purchase. At our discretion, product will either be refunded or replaced.

## **What will we not do?**

We will not:

- Start a new warranty period upon product exchange;
- Repair product.

## **How to process the warranty?**

To initiate, please:

- Call customer service at 1 (844) 543-5872

- Visit the Website Customer Service Platform at [www.lidl.com/contact-us](http://www.lidl.com/contact-us)  
or
- Visit a LIDL store for further assistance

To ensure the quickest warranty return process, please have the following available:

- The original sales receipt that includes the date purchased;
- The product and manual in the original package;
- A statement of the problem.

### **What must you do to keep the warranty in effect?**

- Retain the original receipt;
- Follow all product instructions;
- Do not repair or modify the product.

## **How does state law relate to this warranty?**

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. All implied warranties are limited by the duration and terms of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

## **FCC Warning**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.